


ASM 182 operator interface


Control panel

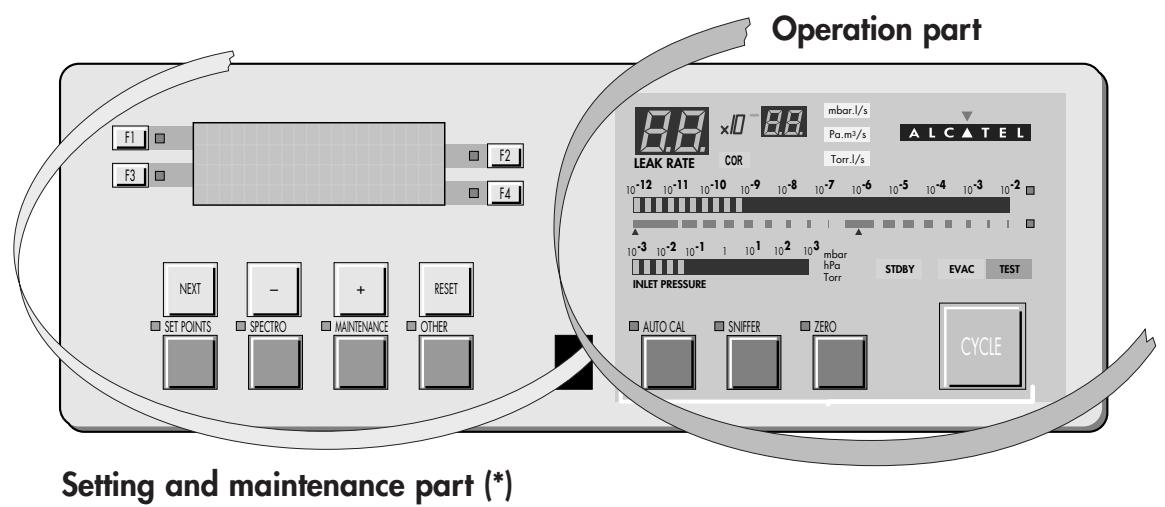

Setting and maintenance part (*)


* Operator access to setting and maintenance part depends on the user interface level.

>User interface level C 30.

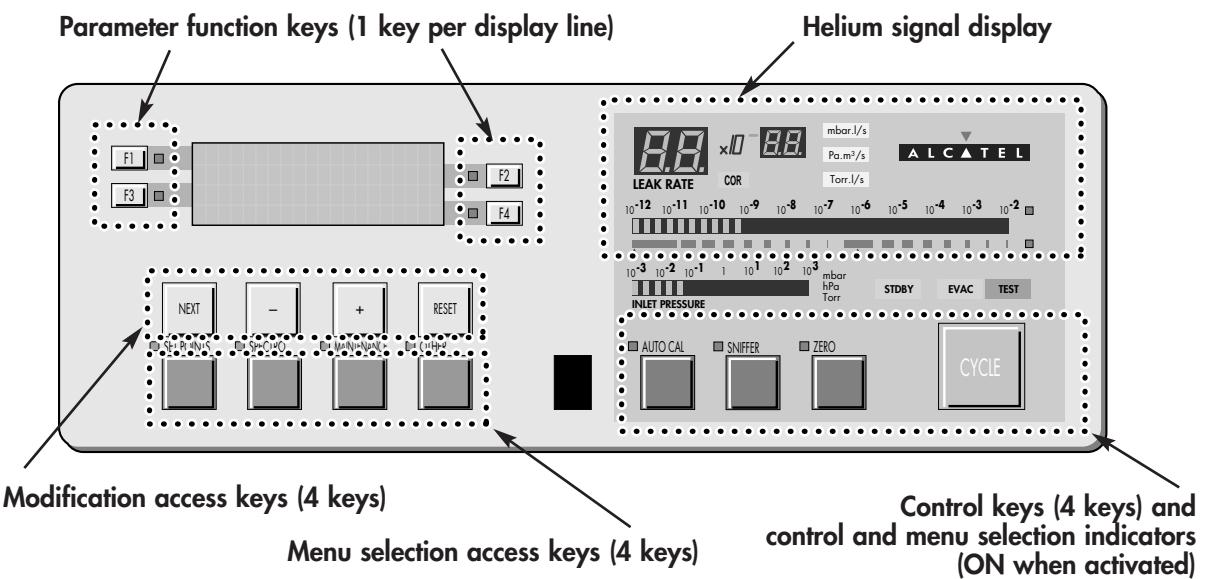

ASM 182 operator interface

Control panel

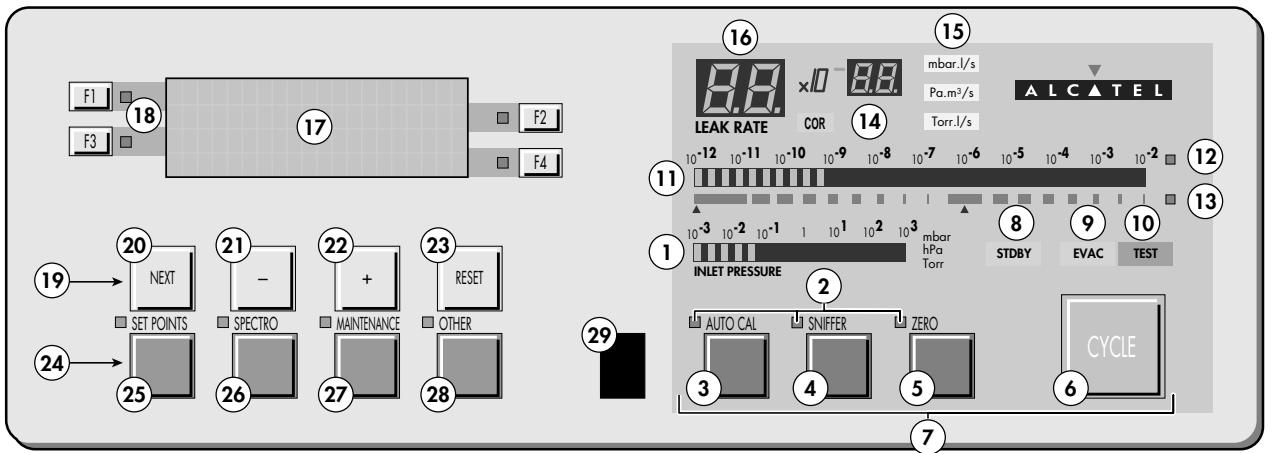

- 1** Inlet port pressure analog display
- 2** Control and menu selection indicators (ON when activated)
- 3** Auto-calibration START/ABORT control key
- 4** Sniffing mode ON/OFF control key
- 5** Auto-zero ON/OFF control key
- 6** Cycle START/STOP control key
- 7** Control keys (4 keys)
- 8** Standby ON/OFF indicator
- 9** Evacuation ON/OFF indicator
- 10** Test ON/OFF indicator
- 11** Helium signal analogic display
- 12** Helium signal analogic scale ON/OFF indicator
- 13** Helium signal Zero scale ON/OFF indicator
- 14** Correction factor COR indicator (applied to digital display)
- 15** Units ON/OFF indicator
- 16** Helium signal digital display
- 17** Alphanumeric display (4 lines x 20 characters)
- 18** Parameter function keys (1 key per display line)
- 19** Modification access keys (4 keys)
- 20** NEXT : next display/parameter circular function
- 21 & 22** Plus or minus value adjustment, parameter selection, audio volume adjustment keys
- 23** RESET of previously displayed values (cancels temporary inputs)
- 24** Menu selection access keys (4 keys)
- 25** SET POINT menu selection key
- 26** SPECTRO calibration and analyzer cell configuration menu selection key
- 27** MAINTENANCE menu selection key
- 28** OTHER menus selection key (test mode selection, inlet VENT selection, date/time)
- 29** Remote control connection (accessory)