





Detailed contents

Preliminary remarks

Throughout this User's Manual, you could find this type of message "  **To access to level**  **C 40** ": it refers to a specific chapter of the User's Manual. Please read it for further information.

Precautions and unpacking

■ Unpacking	■ B 10
■ Handling the leak detector with a hoist and slings	
■ Precautionary measures for the leak detector installation	
■ Corrosive and dangerous gasses	
■ Storage	
■ Installation	

Controlling the detector with the I/O interface

■ Purpose of the I/O interface.	■ B 20
■ Location of the I/O interface	
■ Connect the jumper plug if the I/O interface is not used	
■ Prepare the connector wiring	
■ The controls (inputs)	
■ The signals (outputs)	

Controlling the detector with a PC computer through the RS 232 interface

■ Purpose of the PC computer interface	■ B 30
■ Location of the RS 232 interface	
■ RS 232 interface instructions	
■ Which commands available for your leak detector	

Connecting the detector directly to a printer through the RS 232 interface

■ Purpose of the printer interface	■ B 40
■ Location of the printer interface	
■ Communication mode description	
■ Connection to the printer	
■ Example of a configuration ticket	

ASM 182 TD+ Connecting the detector to the installation via the hardware interface

■	■ B 50
-------------	--------



Installation

ASM 182 TD+ - ASM 192 T2D+ User's Manual

Detailed contents

ASM 192 T2D+	■	■ B 51
Connecting the detector to the installation via the hardware interface		
Before starting up the ASM 182 TD+	■ Check power voltage	■ B 60
Before starting up the ASM 192 T2D+	■ Remote control support installation	■ B 61
	■ Check power voltage	