
Controlling the detector with a PC computer through the RS 232 interface

Purpose of the PC computer interface

The RS 232 interface makes it possible to control the leak detector with a PC compatible computer.

Location of the RS 232 interface

It is a Sub D 9 pin Male connector located on the side of the leak detector.

RS 232 interface instructions

A specific manual describes to the operator all the commands available with the RS 232 Alcatel protocol. It is delivery with your leak detector.

Which commands available for your leak detector

Only the commands which correspond to the fonctions of your leak detector are available.

See details in the RS 232 User's manual.

