


## Before starting up the ASM 182 TD+

### Check power voltage

Voltage configuration is shown on a label located near the main power switch at the rear side of the leak detector.

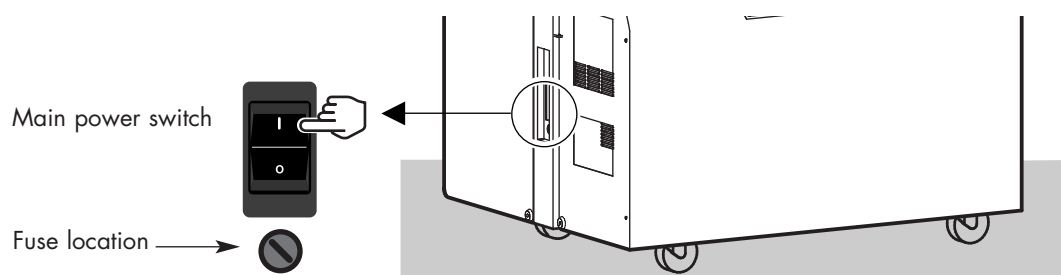

Fuse: 100 - 130 V..... 6.3 A  
200 - 240 V..... 3.15 A



**Do not use the leak detector in high moisture concentration during an extended period of time. Such conditions could damage some internal components.**

**The leak detector is not designed for the pumping of corrosive, dangerous or explosive gases.**