


Before starting up the ASM 192 T2D+

Remote control support installation

5




- Remove the 4 liftings rings and screw them to the back of the leak detector. Cut the clamps.

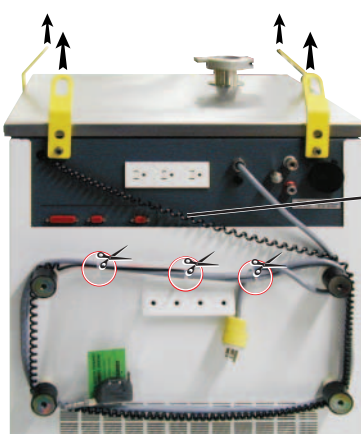


Remote control cable

- Unpack the remote control support.
- Take the nut out.

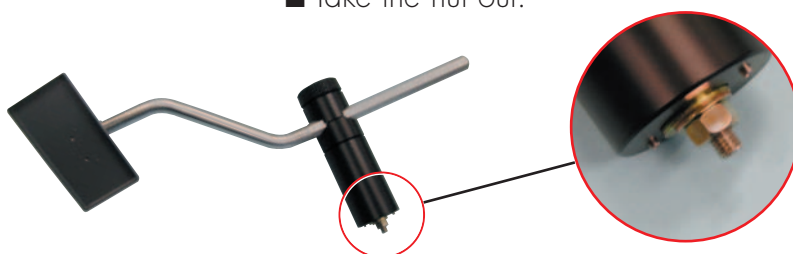

? **Access to the internal components** E 21

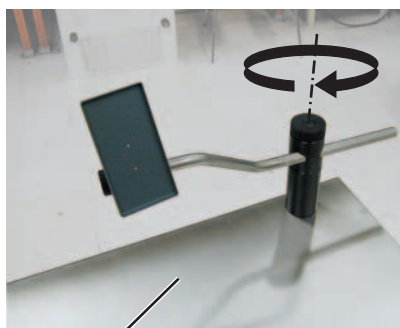

Work table

- Fix the remote control support on the work table and screw it.


- Fix the remote control to its cable.



Before starting up the ASM 192 T2D+

Check power voltage

Voltage configuration is shown on a label located near the main power switch at the rear side of the leak detector.

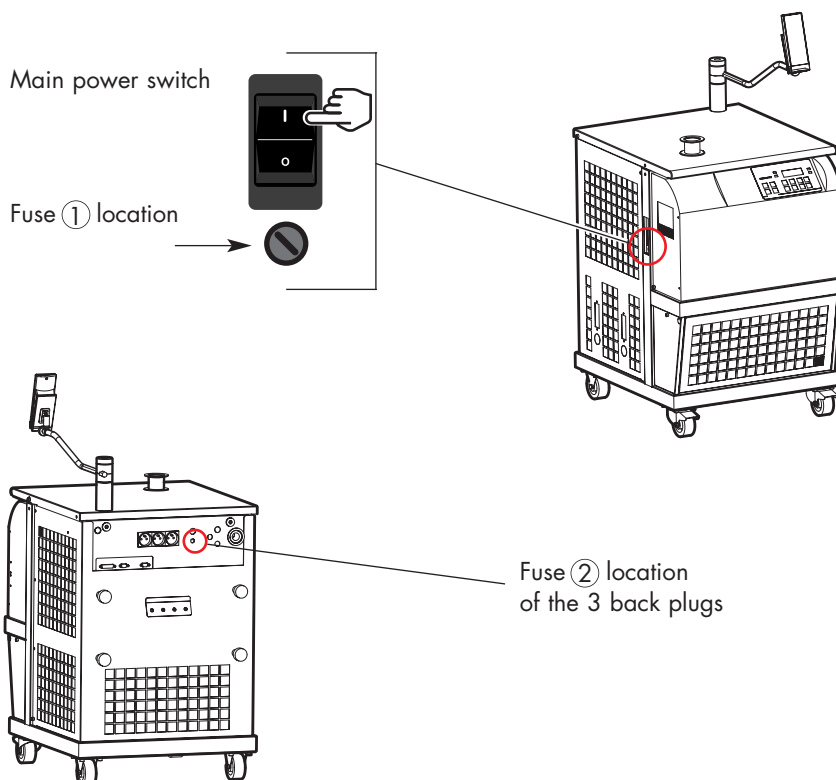

Fuse ①: 100 - 130 V..... 6.3 A
200 - 240 V.....3.15 A

Fuse ②: All voltage: 4 A



Do not use the leak detector in high moisture concentration during an extended period of time. Such conditions could damage some internal components.

The leak detector is not designed for the pumping of corrosive, dangerous or explosive gases.