


Helium pollution prevention

Purpose The helium pollution prevention function avoids the detector to be polluted by helium when the part or installation to be tested contains a lot of helium.
Leak detector in test mode, if the signal increases quickly above depollution reject point, the cycle is automatically ended and the leak detector stays in stand-by mode until the helium has decreased.

Access authorization *Do you have access to this operation function?* C 50

Activate the function **Reminder** *Operating principle of the control panel* C 20


Press the key activated

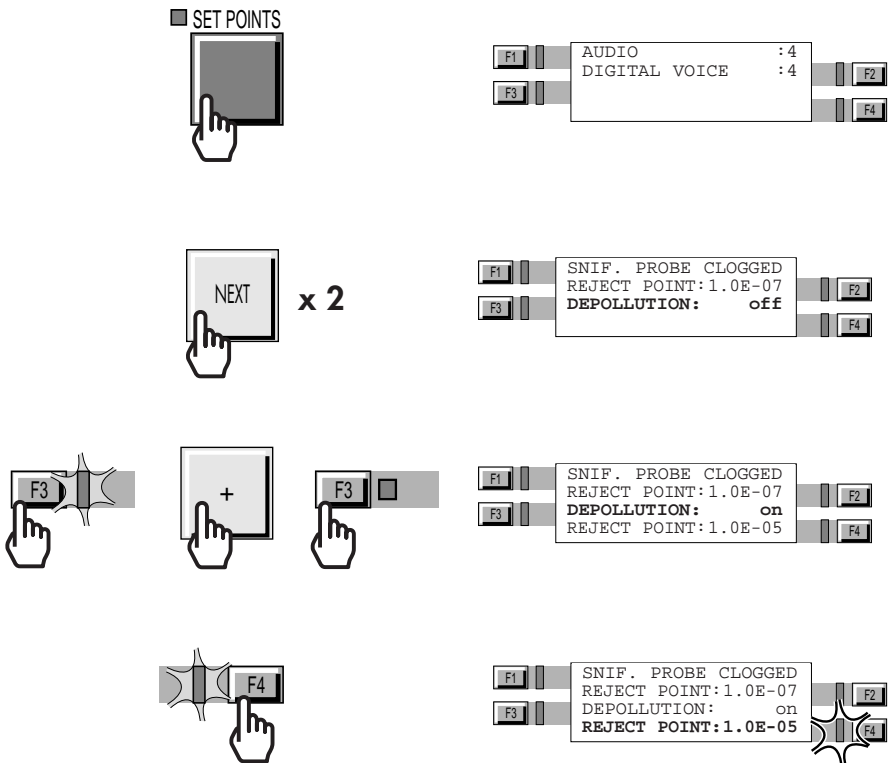



Helium pollution prevention

Depollution reject point

 
Adjust depollution reject point.



Adjustment of a value C 20

 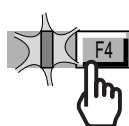

■ SET POINTS

 

Deactivate the function

The procedure is the same as for activating the function but instead of pressing , press .