

Digital voice

Definition

The digital voice informs the operator by sending audio messages in the following cases:

- ⇒ starting-up process and auto-calibration process
- ⇒ when detector ready
- ⇒ rejected part
- ⇒ "error"

Access authorization

 **Do you have access to this operation/function?**  **C 30**

Sound level of the digital voice

The digital voice sound level varies from 0 to 8 (= 90 dBA) and can be adjusted.

Adjustment of the digital voice: sound level



Reminder  **Operating principle of the control panel**  **C 20**



Press the key



activated

Note: Following screens are available for users with level  : for users with level , lines 3 and 4 on the LCD are different.

