

Maintenance messages

Definition

The Maintenance messages will display on the LCD in order to inform the operator to do a operation.
The operator should adjust the periodicity of the appearance of this message.

These messages concern (according to the leak detector model):

- 1 - The dry pump (ACP 20/28)
- 2 - The high vacuum pump (TMP 5154)
- 3 - The roughing pump (MDP 5011, MDP 5006 HDS and ATP 100)
- 4 - The periodicity of maintenance (cycles).

Access authorization

Do you have access to this operation function? C 30

Adjustment of the counters

1 2 3


Reminder **Operating principle of the control panel** C 20



Press the key




activated

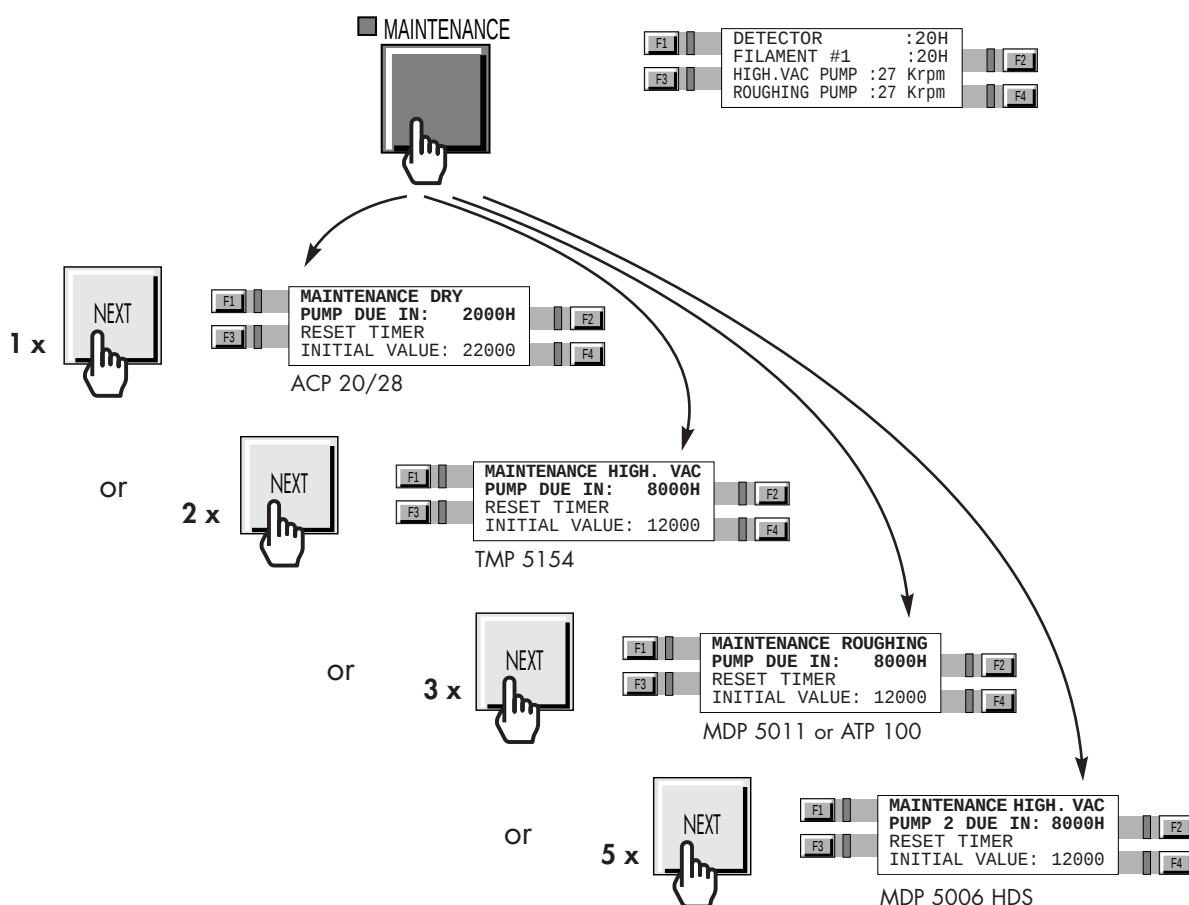


Maintenance messages

 Adjustment of the init value





Adjust initiale value.

 Adjustment of a value? C 20






Reset counter

  



Adjustment of the counter

  4

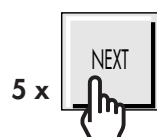


Maintenance messages

  Adjustment of the init value



Adjust initiale value.

 Adjustment of a value? C 20



Reset counter

