ASM 182 TD+: Connecting the detector to the installation via the hardware interface

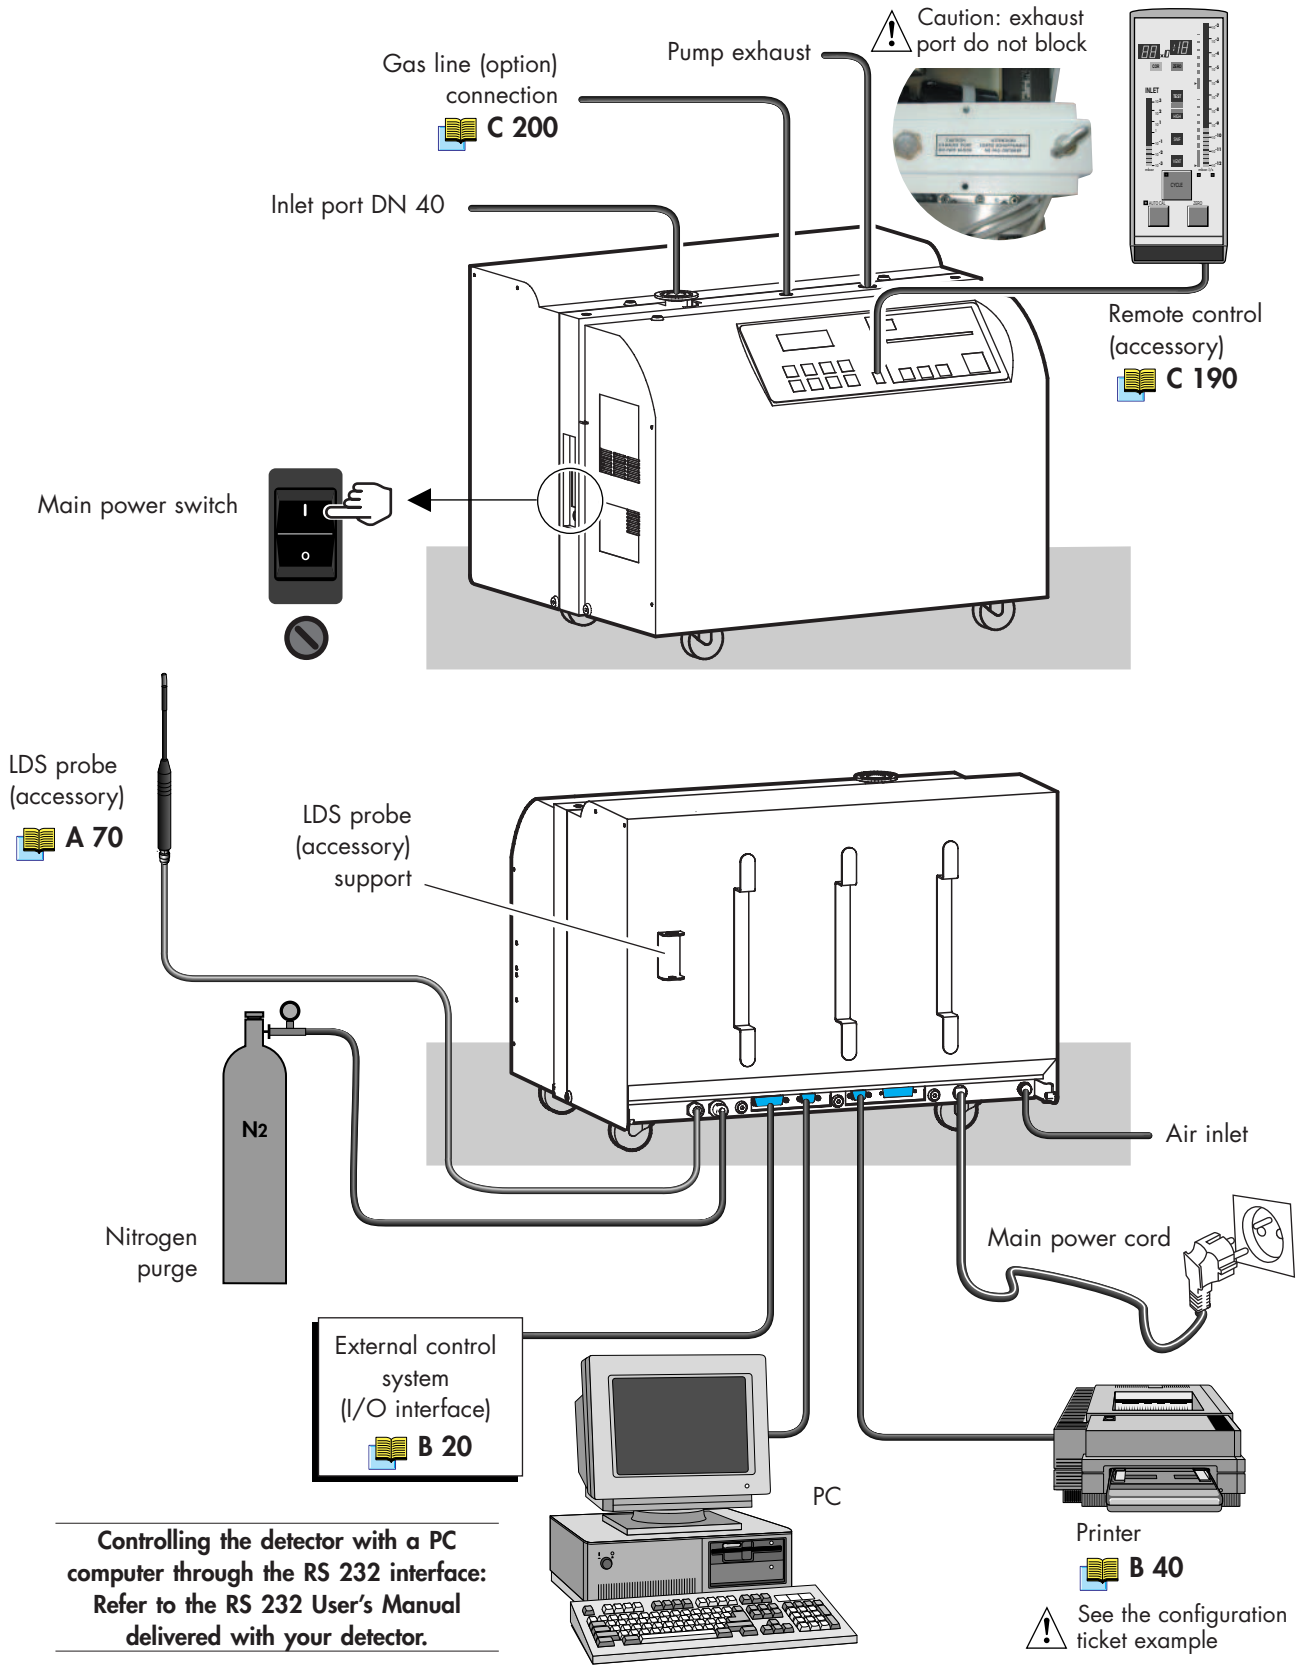

Controlling the detector with a PC computer through the RS 232 interface: Refer to the RS 232 User's Manual delivered with your detector.

GB 00982 - Edition 03 - December 01