

Molecular pump (MDP 5011/MDP 5006 HDS)


SYMPTOM

ORIGIN / DIAGNOSTIC
CONFIRMATION


REMEDY

 **Critical failure**  Chap. C
"Error/information indicator and display"

Molecular pump failure

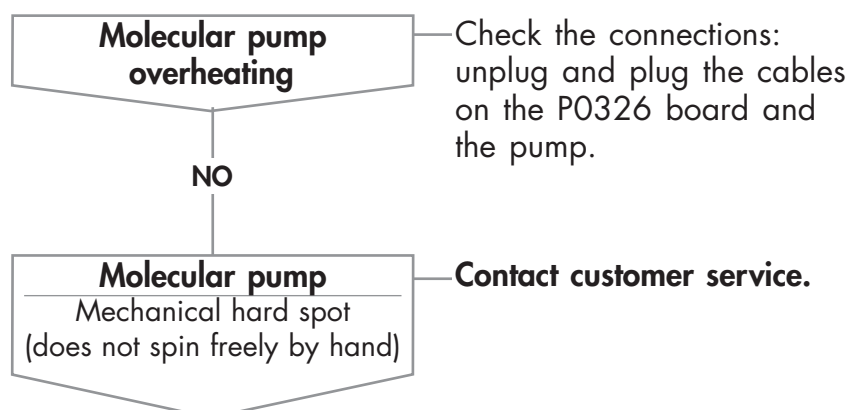

Molecular pump speed

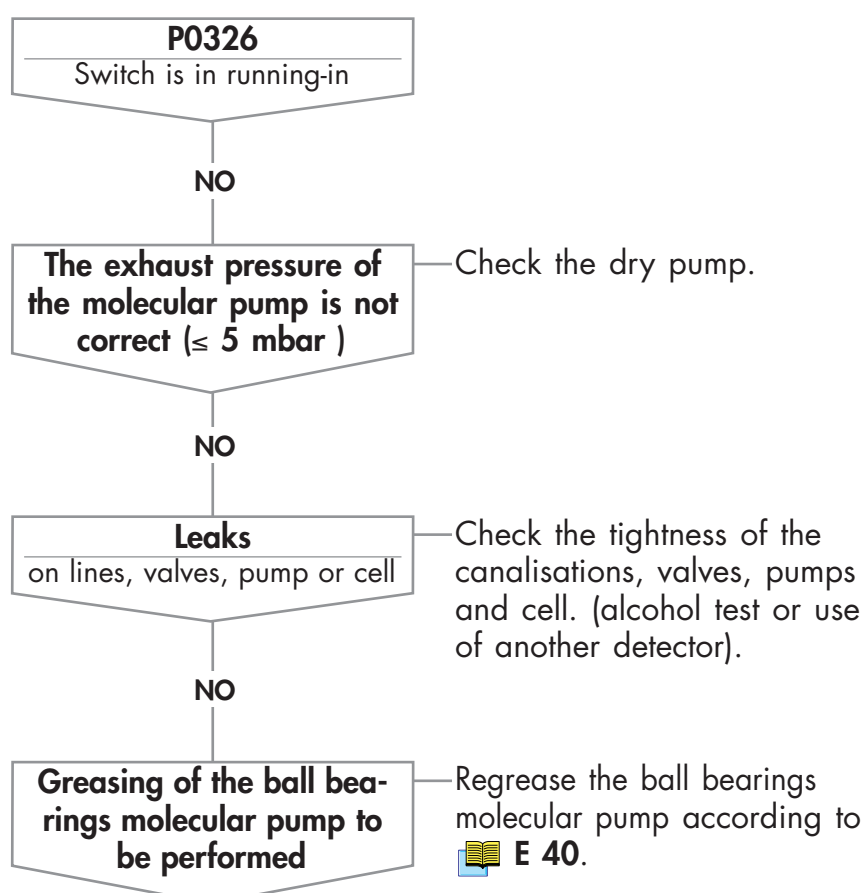

Molecular pump
(MDP 5011/MDP 5006 HDS)

SYMPTOM	ORIGIN / DIAGNOSTIC CONFIRMATION	REMEDY
---------	-------------------------------------	--------

 **Major fault**  **Chap. C**
“Error/information indicator and display”

Molecular pump speed (continued)	<div>Molecular pump Mechanical hard spot (does not spin freely by hand)</div>	Contact customer service.
Check the molecular pump connector	<div>Molecular pump is not connected with molecular pump controller board P0326</div>	Contact customer service.