


Helium measurement

SYMPTOM	ORIGIN / DIAGNOSTIC CONFIRMATION	REMEDY
---------	-------------------------------------	--------

 **Critical failure**  Chap. C
"Error/information indicator and display"

**High helium
background signal
(in stand-by mode)**

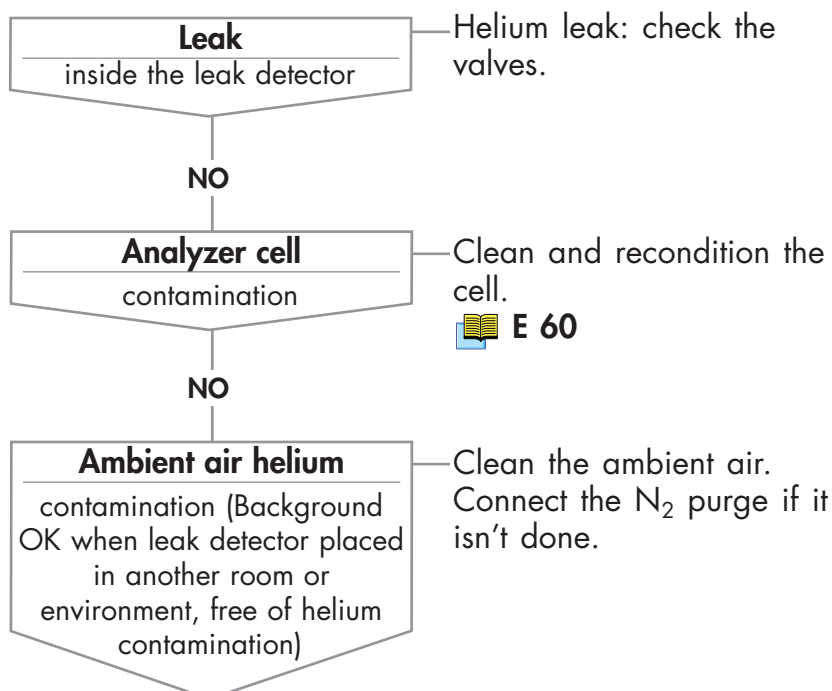

Helium measurement

SYMPTOM	ORIGIN / DIAGNOSTIC CONFIRMATION	REMEDY
---------	----------------------------------	--------

 **Critical failure**  Chap. C
"Error/information indicator and display"


High helium background signal (in hard vacuum test mode)

Test piece degassing
 (background OK in test mode when leak detector inlet port blanked off)

Clean the part/installation being testing. Eliminate the source of degassing or contamination.

Helium signal unstable

Analyzer cell connections

Check that the external analyzer cell connections are correct and the internal analyzer cell connections properly fastened.  **E 60**

NO

Defect does not disappear

Contact customer service.