

## Bargraph zoom

### Purpose

This function offers a better resolution of the readout as well as a better view of the helium signal behaviour around the set point.

### Access authorization

*Do you have access to this operation/function?* C 30

### Activate the bargraph zoom


**Reminder** *Operating principle of the control panel* C 20



Press the key



activated

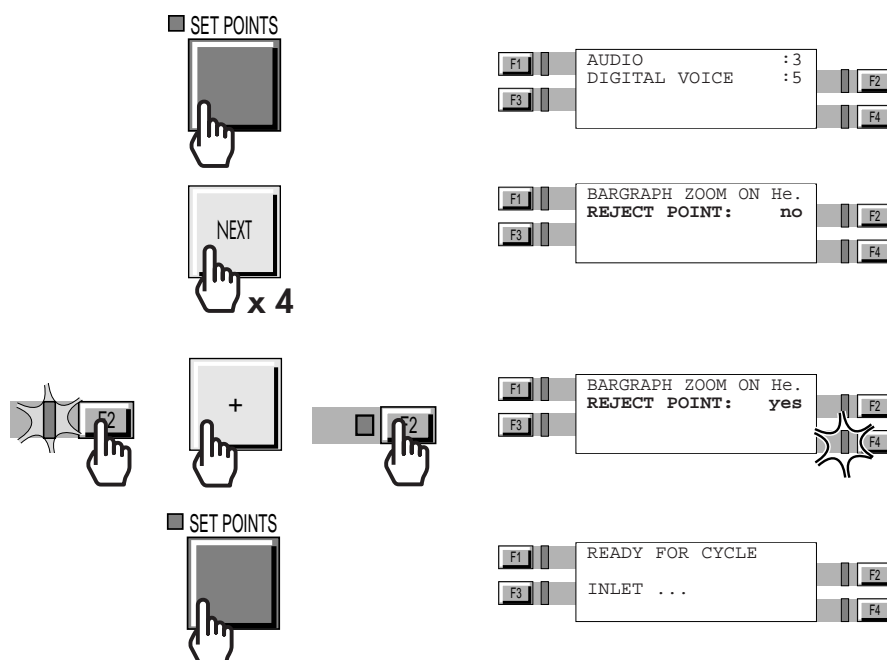


### Deactivate the bargraph zoom

The procedure is the same as for activating the Bargraph zoom on the reject point but instead of pressing , press .

## Bargraph zoom

### Analog display

When Bargraph zoom is activated, use the helium signal zero scale: a blinking led indicates the reject point.

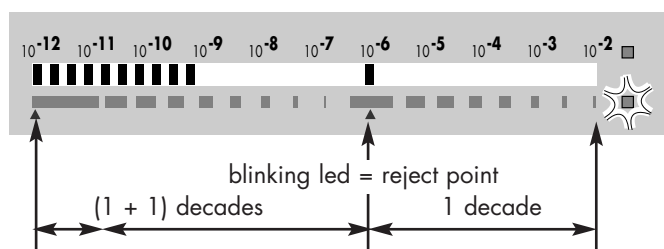

The helium signal zero scale displays the leak value in 2 colors following the measured leak value:

- if the measured leak value is under the reject point, the flashed leds are green,
- if the measured leak value exceeds the reject point, the flashed leds are red (and the blinking led orange).

**Reject point** C 100

### Zero function & Bargraph zoom

When bargraph zoom and zero functions are ON in the same time, the operator must read measured leak value in this way as follow:

#### ■ digital display

The leak value displayed is the value corrected with zero function.

**Zero function** C 120

#### ■ analog display

Use the helium signal zero scale.

The analog display is the actual bargraph zoom display (see above).