



本商品はカナダ規格(CSA)取得品です。
(Canadian Standards Association)

Instruction Manual (Original Instructions)

Oilfree Scroll Vacuum Pump

DVSL-100C



FOR SALES AND SERVICE PLEASE CALL:

PTB SALES ☎ :: 626.334.0500
service@ptbsales.com
www.ptbsales.com

DATE SERVICED: _____

VIEW OUR INVENTORY

This instruction manual includes very important warnings, cautions and operating procedure in order to operate this pump safely and efficiently.
Be sure to read this instruction manual thoroughly and fully understand before operation.
After reading it, store it in a convenient place for immediate and future reading.

※Before use, be sure to fill in the blank spaces below for future repair and after-service.

Serial No.
Who sold it to you
Purchase date
When you began operation

Declaration of Conformity

We, ANEST IWATA Corporation

3176, Shinyoshida-cho, Kohoku-ku, Yokohama 223-8501, Japan

declare in our sole responsibility that the products

Type : Scroll Vacuum Pump

Models :

DVSL-100C

1-phase, 100/115/200/230V, 50/60Hz

GVS-100

1-phase, 100/115/200/230V, 50/60Hz

Note: 1-phase motor provides thermal protector.

to which this declaration applies, complies with these normative documents :


2006/42/EC : Machinery Directive

EN 1012-2:1996 : Compressors and Vacuum Pumps-Safety
Requirements, Part 2: Vacuum Pumps

This Declaration is based on :

Third party testing, performed by the Notified Body

TUV Rheinland Product Safety GmbH - Am Grauen Stein - D-51105 Köln

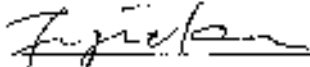

Tamotsu Fujioka,
Manager of Vacuum Pump Dept.

Aug. 3, 2009, YOKOHAMA

Date and Place

Important information

Be sure to read this instruction manual to understand how to operate equipment correctly. Only operators, who fully understand warnings, cautions and instructions, are to operate the equipment. Improper operation (mishandling) can cause serious bodily injury, death, fire or explosion.





Store this manual in a convenient place for immediate and future reference.




◆Regarding safety

- The safety instructions given in this manual are the minimum operating requirements. Follow all national or municipal laws and regulations pertaining to fire, electricity, and other safety regulations, as well as corporate regulations.
- Pay special attention to items which are shown by the below marks and symbols.
- Symbols and marks have the following meanings.

Examples of marks

	WARNING	Indicates a potentially hazardous situation which, if not avoided, may result in serious injury or loss of life.
	CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or property damage.

Examples of symbols

	Indicates [Beware]. We will explain briefly in or near the symbol. (The example on the left is [Beware of electric shock]).
	Indicates [Prohibited action]. We will explain briefly in or near the symbol. (The example on the left is [Do not touch]).
	Indicates [Required action]. We will explain briefly in or near the symbol. (The example on the left is [Be sure to ground]).

* We shall not be responsible for any injury or damage caused by disregard of warnings, cautions or instructions.

Supplementary notes




Important	Indicates notes which we ask you to observe. They are helpful to achieve full performance and functionality of the equipment.
------------------	---

For safe operation

Below is very important information about how to safely operate the equipment. Before operation, be sure to read and fully understand the contents.



WARNING

 Be careful about hoisting	Danger of load collapse Please install and move a vacuum pump by firmly holding the grip of a pump (DVSL-100C's gross weight: 15kg). Be careful to install a vacuum pump as physical damage, failure of a product and body injury can be caused by dropping of a pump and getting caught in the gap between a pump and the other object.	 Avoid moisture	Danger of electric shock Install in an area which is not exposed to moisture such as rain or steam. If moisture comes into and tact with the electric source connection, it can cause fire or bodily injury due to short-circuit or electric shock.
 Install at a safe site	Danger of explosion, fire and accident Install in an area free from explosive, flammable or corrosive substances. If not, it can cause explosion, fire or accident.	 Ask qualified electrician	Danger of short-circuit and electric shock Ask a qualified electrician to perform electric wiring. If not, short-circuit or electric shock can cause fire or bodily injury.
 Turn off electric source	Danger of electric shock and entanglement Be sure to turn off electric source on building site before wiring. If not, it can cause electric shock or bodily injury due to turning objects.	 Install overcurrent protective device	Danger of accident, fire and failure Be sure to install protective device to protect circuitry. We recommend an overcurrent protective device (rated 15A) to protect branch circuit. If equipment is not stopped in an emergency, it can cause accident, fire or failure.
 Install emergency stop switch	Danger of accident, fire or failure Be sure to install an electric source emergency stop switch (or protective device that can urgently stop). If equipment is not stopped in an emergency, it can cause accident, fire or failure.	 Install short circuit protective device	Danger of fire and electric shock Install short circuit protective device. If not, it can cause bodily injury due to fire or electric shock.
 Install motor protective circuit breaker to protect motor	Danger of electric fire and electric shock Install motor protective circuit breaker to protect motor. If not, it can cause bodily injury due to electric fire or electric shock. If you have any questions about the selection of protective devices, contact either the dealer who sold it to you or us.	 Be careful about wiring	Danger of short-circuit and electric shock We recommend an electric wire of larger than 2mm ² (more than rated 10A,) cross section area for electric wire (including grounding wire.). Be careful to avoid voltage drop considering local situation. If not, it can cause a short-circuit fire and may result in bodily injury from electric shock.

For safe operation



WARNING



Use crimp-style terminal

Danger of short-circuit and electric shock

Fit firmly proper round type crimp-style terminal to electric source cable using crimp tool and connect to motor terminal section.
If not, it can cause short-circuit fire or bodily injury from electric shock due to looseness or disconnection.



Protect cable from being pulled

Danger of short-circuit and electric shock

Be sure to fit cable gland to hole of ϕ 22mm at motor terminal box.
If not, it can cause short-circuit fire or bodily injury from electric shock.



Be sure to ground

Danger of electric shock

Connect ground cable to ground terminal in motor terminal box.
If not, it can cause bodily injury from electric shock.



Never evacuate hazardous gas

Danger of explosion and ignition

Do not evacuate gas which is hazardous to humans or explosive, flammable, or corrosive. Do not evacuate with substances containing chemicals, solvents, and powders.
If done, it can cause failure or bodily injury by gas, explosion or ignition.
It is not guaranteed fluorine rubber can be used for all solvents.



Avoid foreign matter

Danger of entanglement and foreign matter dispersal

Never put finger or foreign matter into air holes of fan cover, FS cover.
If done, it can cause bodily injury from entanglement with turning section, or foreign matter dispersal.



Never alter

Danger of electric shock and entanglement

Do not remove or alter safeguards or insulation parts.
If done, it can cause bodily injury from electric shock or turning section and it can cause deteriorated performance and operating lifetime, and invalidate guarantee.



Change after vacuum pump is stopped

Danger of failure and bodily injury

Change air-flush port only after vacuum pump is stopped. If you change it during vacuum pump operation, it can cause vacuum pump failure and bodily injury.



Conduct periodical maintenance and inspection

Danger of failure and bodily injury

Conduct periodical maintenance and inspection.
If not, it can cause insufficient performance, failure of vacuum pump, and bodily injury.



Be careful about high temperature

Danger of burns

Conduct maintenance and inspection only after vacuum pump becomes cool enough.
Maintenance and inspection soon after vacuum pump stops can cause burn injury.



Turn off electric source

Danger of electric shock

Be sure to conduct maintenance and inspection after you turn off electric source. If not, it can cause bodily injury from electric shock or turning object.



Ask specialist to perform repairs

Danger of accident, failure and shorter operating lifetime

Ask specialist to perform repairs.
Defective repairs can cause accident, failure or shorter operating lifetime.

For safe operation



CAUTION



Use at designated temperature

Danger of overheating

Operate at ambient temperature of 5°C ~40°C.
Operating at a temperature range other than that designated can cause accident, failure or bodily injury such as burns due to overheating.



Pay attention to ventilation

Danger of overheating

Install in a well-ventilated area. Poor ventilation can disrupt cooling and cause accident, failure or bodily injury such as burns since this vacuum pump is an air-cooled type.
Do not block inlet and outlet of cooling air with obstruction. (Separate inlet side of the cooling air from obstruction or wall by 10cm or more, and separate outlet side by 30cm or more)



Avoid dust

Danger of dust

Be sure site is free from dust.
Sucking in of dust can cause failure.



Fix on a solid level floor

Danger of movement

Be sure to fix on solid and level floor (less than 5° inclination).
Uneven fix can cause failure and movement of vacuum pump. If fix floor is unstable, fix pump with 4 bolts using hole of ϕ 9mm at leg section.



Avoid direct sunlight

Danger of overheating

Install where equipment is not exposed to direct sunlight.
Vacuum pump exposed to direct sunlight can overheat, resulting in failure.



Check voltage

Motor burnout

Before doing any wiring, check electric source and voltage. This pump is multi voltage type of AC100V/AC200V. Voltage can be changed at terminal block. This pump is wired to 100V when delivered to you. Check your electric source, voltage, and wire correctly to terminal block. Improper wiring and incorrect voltage can cause motor burnout.



Inspect cause of problem

Danger of problem recurrence and failure

If protective device activates, be sure to turn off electric source and inspect causes to solve the problem. Do not operate until problem is solved.
Operation while problem is left unsolved can cause problem recurrence and failure.



Remove cap

Danger of cap to fly

Remove cap from inlet and outlet. Operation with cap being fitted can cause cap to fly by intake of exhaust impetus, resulting in accident, failure, or bodily injury from contact with flying objects.



Prevent foreign matter from entering

Danger of foreign matter entering inlet

When checking turning direction, be careful not to enter foreign matter into an inlet.
Foreign matter entering inlet can cause failure.



Check fan

Danger of overheating

Check that cooling fan is turning and cooling air is flowing.
If not, it can cause accident, failure or bodily injury such as burns due to overheating.



Pay attention to exhaust resistance

Danger of exhaust disruption

When connecting exhaust piping to vacuum pump and when combining piping with another vacuum pump, pay attention to piping size and length so that it does not cause exhaust resistance. Exhaust resistance can disrupt air flow, resulting in failure and over-current.



Prevent foreign matter from entering

Danger of foreign matter entering inlet

If you use the seal material or the adhesive, etc. to prevent Leak of the joint when piping with internal screw of inlet, be careful not to enter the seal material or the adhesive into an inlet.
The seal material or the adhesive entering inlet can cause failure.

For safe operation



CAUTION



Start or stop after closing isolation valve

Danger of vacuum break and pollution

Be sure to close isolation valve between vacuum pump and vacuum system (chamber) during start-up and stop. Start-up or stop with isolation valve in the open position can draw back gas and debris attached to inside of pump to vacuum chamber due to pressure differential, resulting in vacuum break and pollution on vacuum chamber side.



Beware temperature of intake gas

Danger of exceeding permissible temperature of intake gas

If intake gas temperature is over 50°C, be sure to install a chiller or trap between vacuum pump and vacuum chamber so that gas intake temperature of vacuum pump keeps below 50°C. If not, vacuum pump temperature can increase, resulting in failure.



Operate while opening air-flush port

Danger of remaining moisture

When evacuating moisture, be sure to open air-flush port (air-flush operation). If you evacuate vapor while air-flush port is closed, condensed moisture will remain inside vacuum pump and cause failure.



Caution after exhausting vapor

Danger of insufficient vapor exhaust

After evacuating vapor, do air-flush operation for at least one hour. If you close air-flush port or stop vacuum pump soon after evacuating vapor, condensed water will remain inside vacuum pump which will cause failure.



Beware of intake gas volume


Danger of exceeding permissible intake gas volume

When sending N₂ gas or dry air into air-flush port, pressure should be the same as atmospheric pressure and flow rate should be less than 10NL/min. If not, it can increase pressure inside vacuum pump, resulting in failure.

Where to attach warning stickers

Where to attach warning stickers

Always keep warning stickers clean and legible. If they become dirty or detached, replace them with new ones. If you need replacement stickers, contact the dealer who sold the vacuum pump to you.

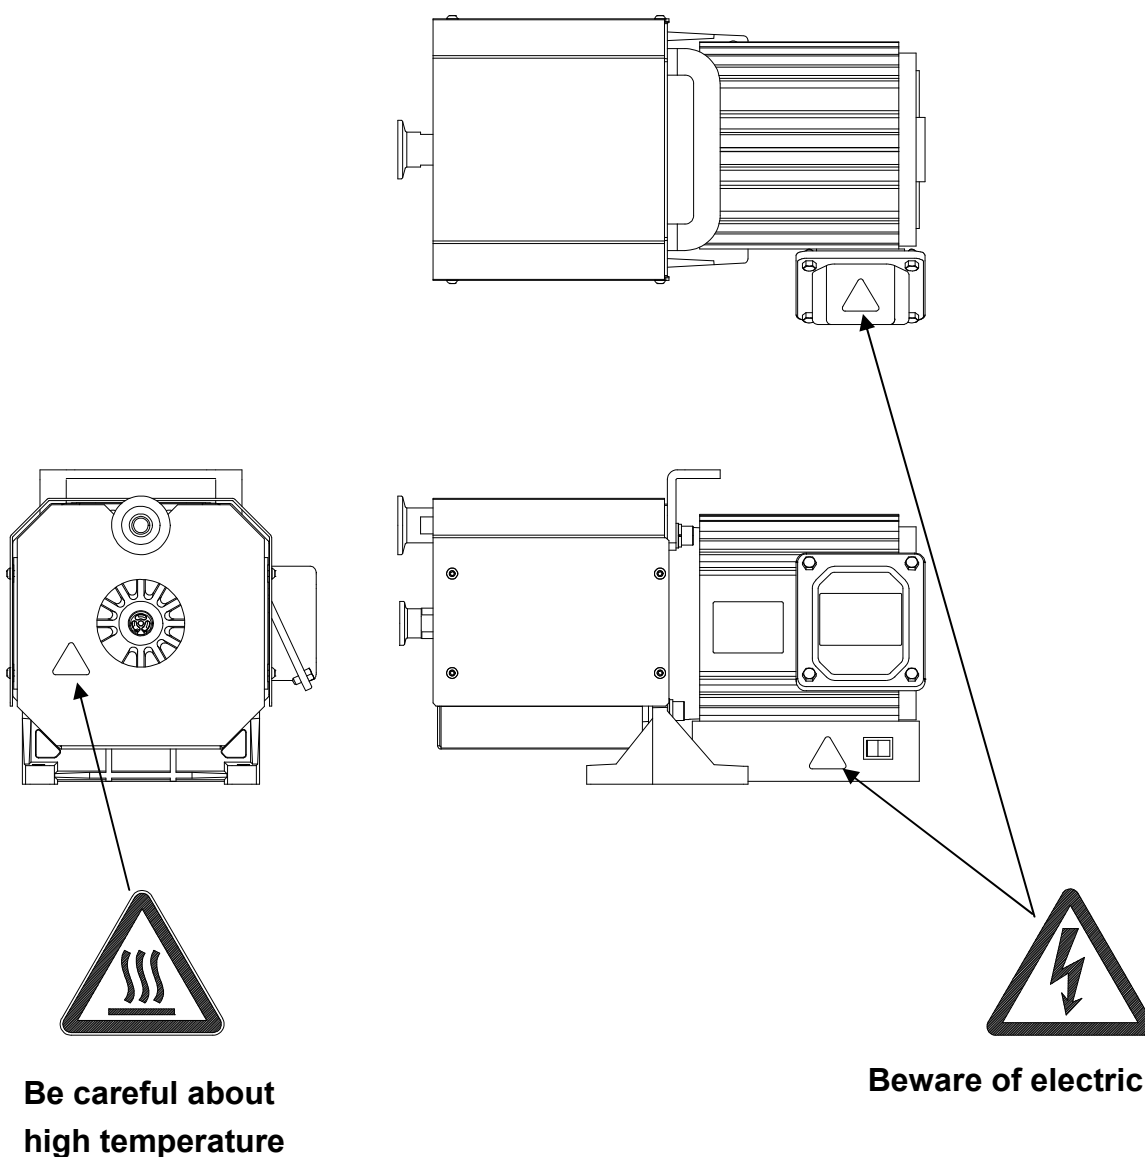

Contents

Important information.....	1
Important information	1
For safe operation	2
Contents	7
1. Before use	8
1.1 Check the product.....	8
2. Name and structure of each section.....	10
3. Installation.....	11
3.1 Wiring.....	12
3.2 Test operation	16
3.3 Connection to vacuum system (chamber)	17
4. Operation.....	18
4.1 Standard operation.....	20
4.1.1 Start-up	20
4.1.2 Shut-down	20
4.2 Air-flush operation.....	20
4.2.1 Preparation	21
4.2.2 Start-up and shut-down	21
4.2.3 When returning to standard operation.....	22
5. Maintenance and inspection.....	23
5.1 Daily maintenance and inspection	23
5.2 Maintenance.....	24
6. Problems and remedies	25
7. Disposal.....	25
8. Specifications	27
8.1 Specifications	27
8.2 Dimensions	28
8.3 Performance data	28

1. Before use

1.1 Check the product

- Check that the package is right-side-up before opening.
- Check that the model of the product is the same as the one you ordered.

How to read model name

DVSL : model

D V S L - 1 0 0 C

Displacement (swept volume)
100 : 100 L/min

- Check that there is no damage.



If there is any damage, contact either the dealer who sold it to you or us.

- Check the following accessories.



Instruction manual (this one)

(Instruction manuals written by official languages except English must be sent to a customer along with the delivery of a product.)

Air-muffler for air-flushing (which is attached to the grip)


OILFREE SCROLL VACUUM PUMP 					
	MODEL	DVSL-100C		MOTOR 0.3 kW	
	CYCLES	Hz	50	60	SERIAL NO.
	DISPLACEMENT	L/min	100	120	
	Manufacturer ANEST IWATA Corporation 3176 shiroyashida Kohoku Yokohama 225-8501 JAPAN Local agent ANEST IWATA Europe S.R.L. Corso Vigevano,46-10155 Torino ITALY				

Serial number



 Alphabetic Numeric

Year of manufacture

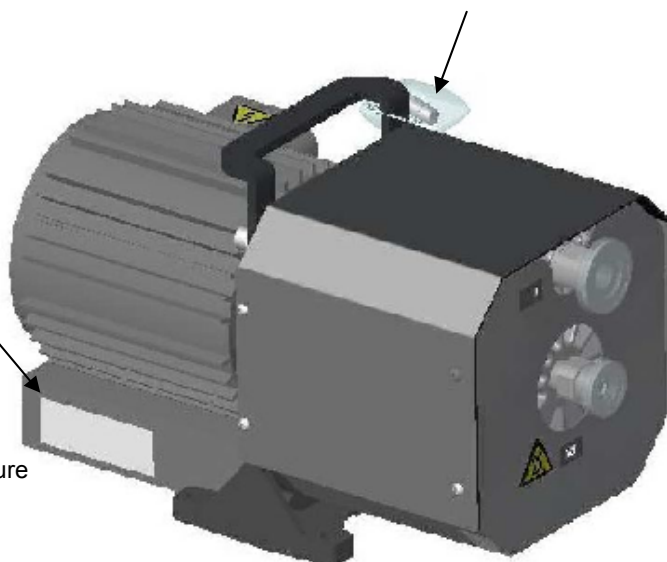Vinyl bag
(Air-muffler is contained inside)



※Please prepare electric wires, crimp-style terminal, electric source protective devices, piping to inlet, and piping from outlet on customer side.

Open package




WARNING

Danger of load collapse


Please install and move a vacuum pump by firmly holding the glip of a pump (DVSL-100C's gross weight: 15kg).
Be careful to install a vacuum pump as physical damage, failure of a product and body injury can be caused by dropping of a pump and getting caught in the gap between a pump and the other object.





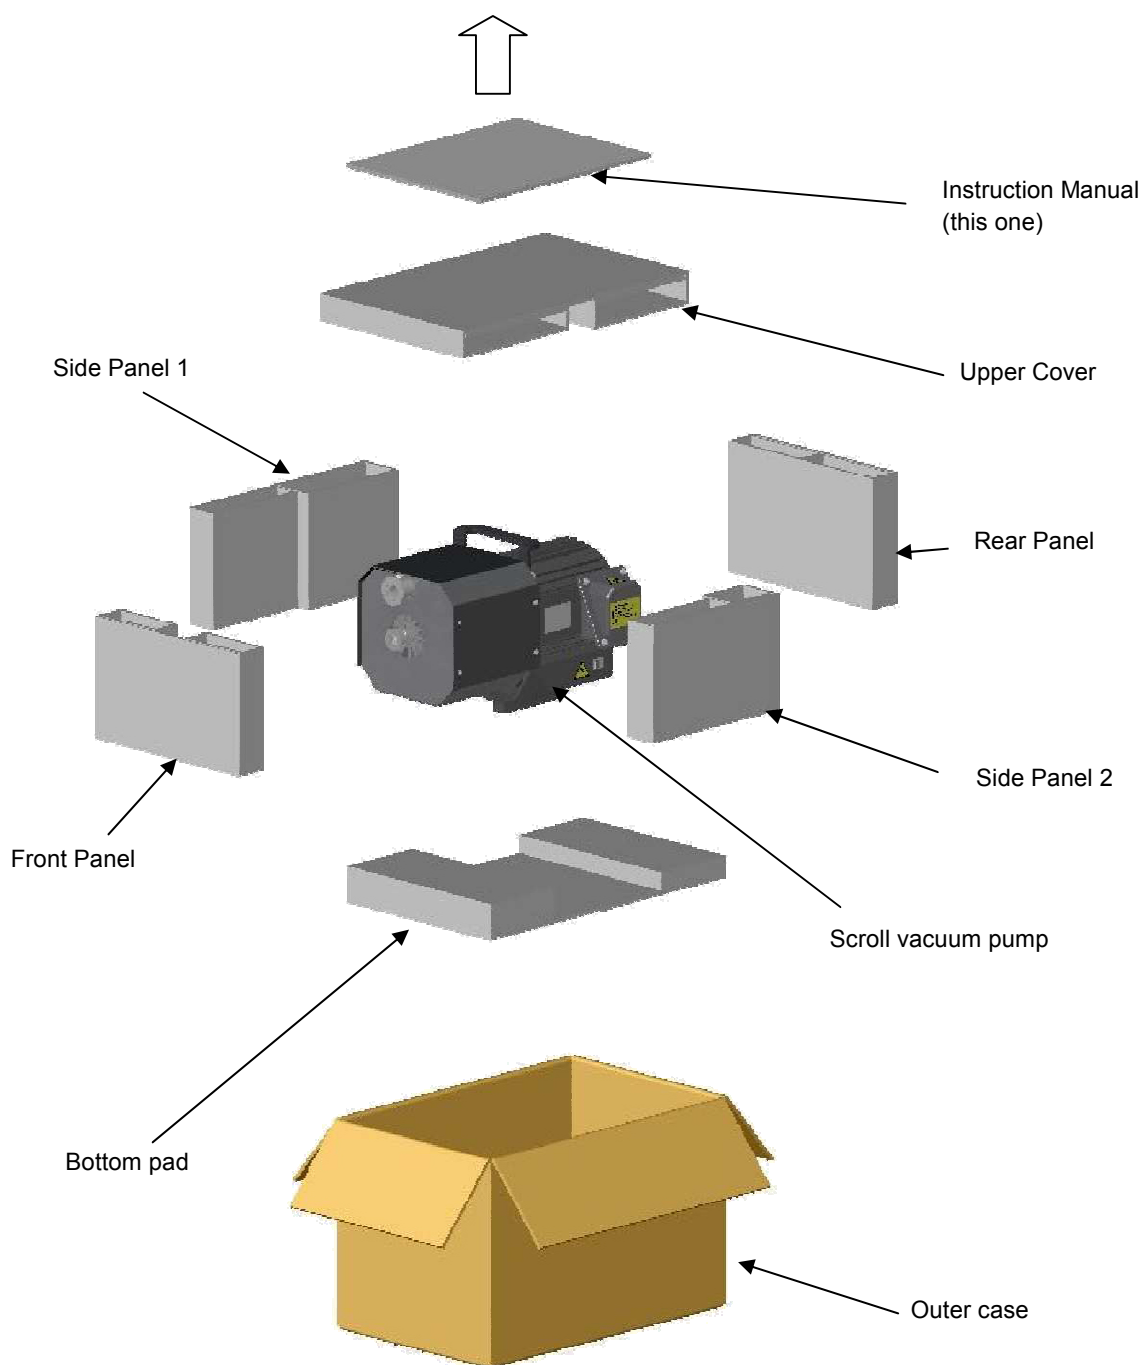



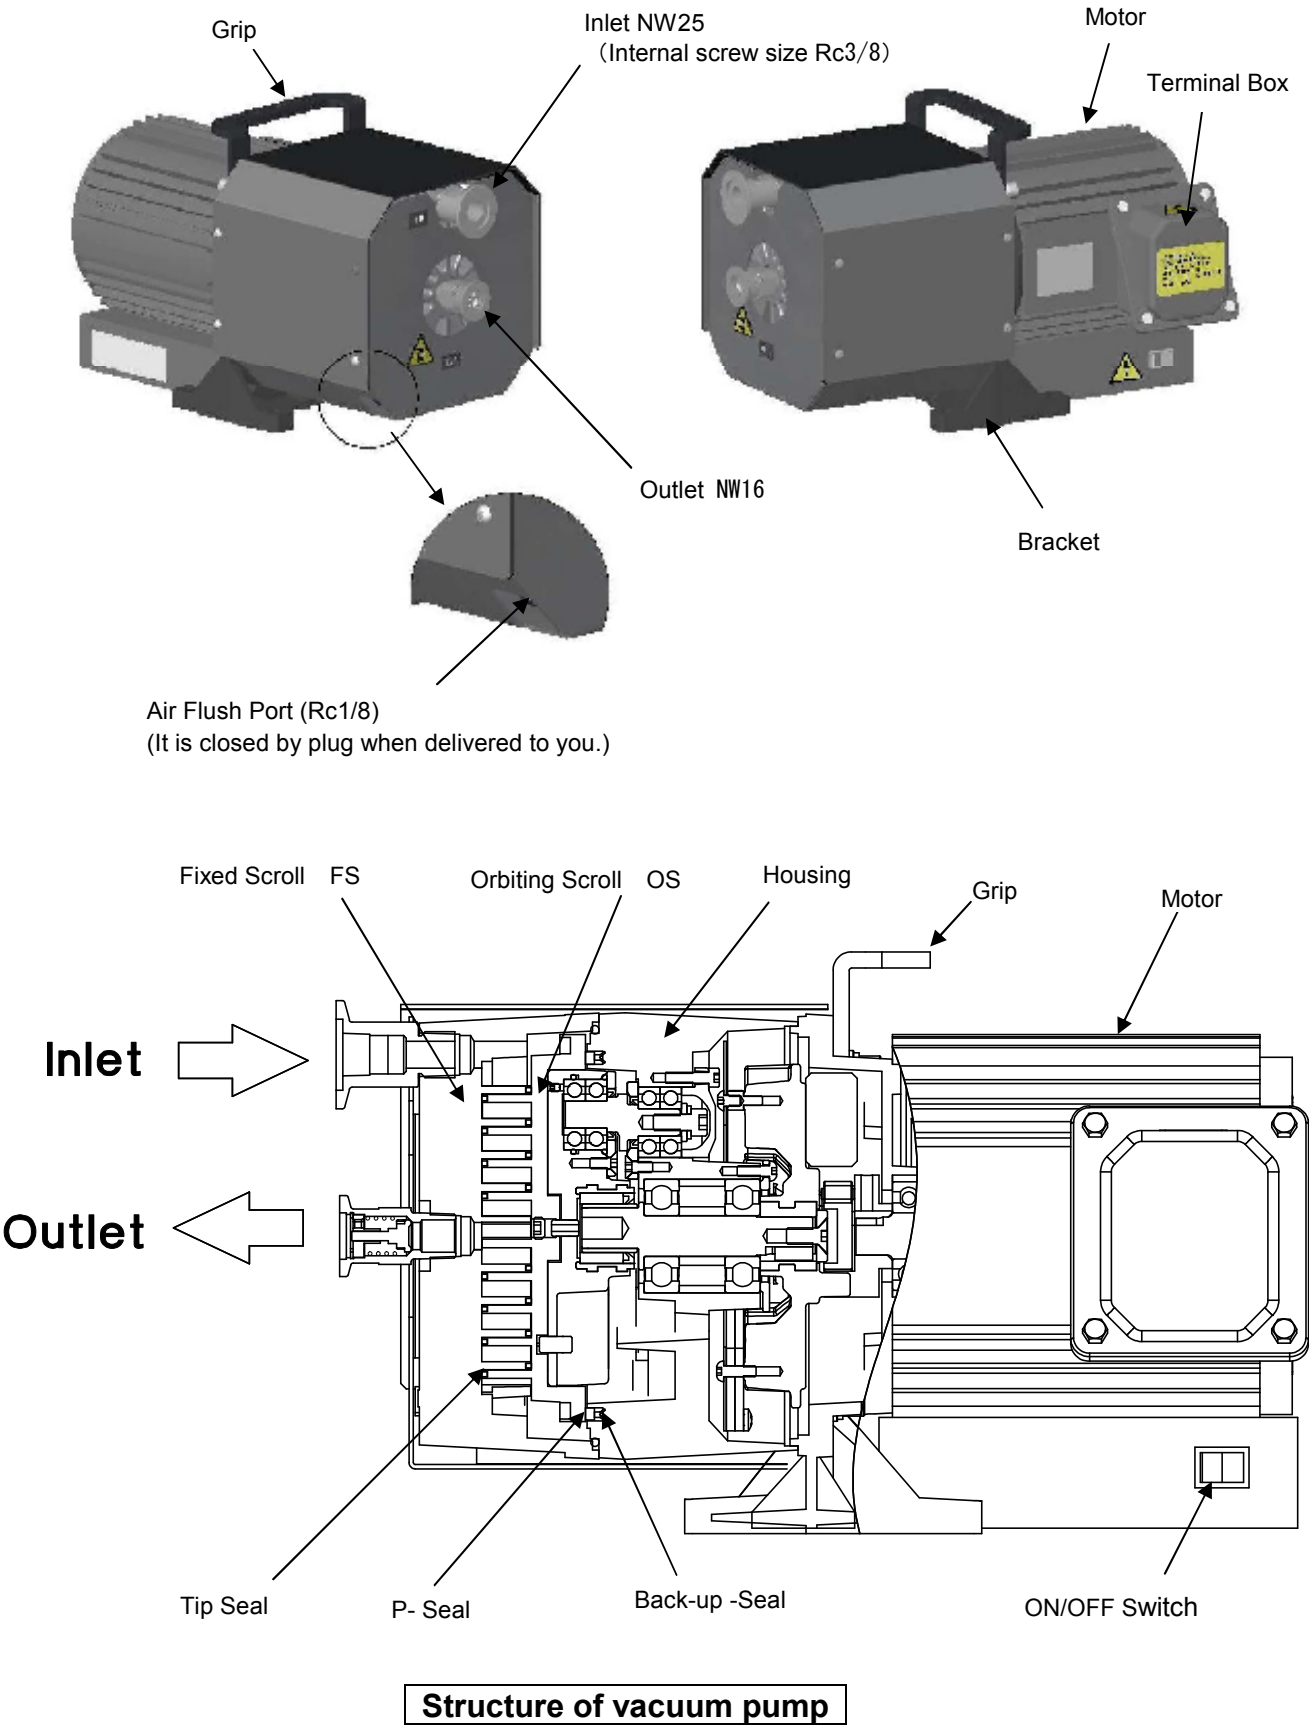


Be careful about
hoisting



2. Name and structure of each section















3. Installation




<div> WARNING</div>			
Danger of electric shock Install in an area which is not exposed to moisture such as rain or steam. If moisture comes into and tact with the electric source connection, it can cause fire or bodily injury due to short-circuit or electric shock.	<div> Avoid moisture</div>		
Danger of explosion, fire and accident Install in an area free from explosive, flammable or corrosive substances. If not, it can cause explosion, fire or accident.	<div> Install at a safe site</div>		
<div> CAUTION</div>			
Danger of overheating Operate at ambient temperature of 5°C~40°C. Operating at a temperature range other than that designated can cause accident, failure or bodily injury such as burns due to overheating.	<div> Use at designated temperature</div>		
Danger of overheating Install in a well-ventilated area (refer to below chart). Poor ventilation can disrupt cooling and cause accident, failure or bodily injury such as burns since this vacuum pump is an air-cooled type. Do not block inlet and outlet of cooling air with obstruction. <div><table><tr><td>Necessary ventilated air volume</td></tr><tr><td>Over 2m³/min</td></tr></table></div>	Necessary ventilated air volume	Over 2m³/min	<div> Pay attention to ventilation</div>
Necessary ventilated air volume			
Over 2m³/min			
Danger of dust Be sure site is free from dust. Sucking in of dust can cause failure.	<div> Avoid dust</div>		
Danger of movement Be sure to fix vacuum pump on solid and level floor (less than 5° inclination). Uneven fix can cause failure and movement of vacuum pump. Fix pump base with 4 bolts using hole of φ9mm at bracket.	<div> Install on a solid, level floor</div>		
Danger of overheating Install where equipment is not exposed to direct sunlight. Vacuum pump exposed to direct sunlight can overheat, resulting in failure.	<div> Avoid direct sunlight</div>		


Important
When building vacuum pump into vacuum system, pay attention to space for maintenance, ambient temperature and piping. Be sure to fix vacuum pump on solid and level floor. If you have any questions, contact the dealer who sold it to you or us.


3.1 Wiring

 WARNING	
Danger of short-circuit and electric shock Ask a qualified electrician to perform electrical wiring. If not, short-circuit or electric shock can cause fire or bodily injury.	 Ask qualified electrician
Danger of electric shock and entanglement Be sure to turn off electric source on building site before wiring. If not, it can cause electric shock or bodily injury due to turning objects.	 Turn off electric source
Danger of accident, fire and failure Be sure to install protective device to protect circuitry. We recommend overcurrent protective device (rated 15A) to protect branch circuit. If equipment is not stopped in an emergency, it can cause accident, fire or failure.	 Install overcurrent protective device
Danger of accident, fire or failure Be sure to install an electric source emergency stop switch (or protective device that can urgently stop). If equipment is not stopped in an emergency, it can cause accident, fire or failure.	 Install emergency stop switch
Danger of fire and electric shock Install short circuit protective device. If not, it can cause bodily injury due to fire or electric shock.	 Install short circuit protective device
Danger of electric fire and electric shock Install motor protective circuit breaker to protect motor. (refer to chart 1 on page 15) If not, bodily injury due to electric fire or electric shock can result. If you have any questions about the selection of protective devices, contact either the dealer who sold it to you or us.	 Install motor protective circuit breaker to protect motor
Danger of short-circuit and electric shock We recommend an electric wire of larger than 2mm^2 (more than rated 10A,) cross section area for electric wire (including grounding wire.). Be careful to avoid voltage drop considering local situation. If not, it can cause a short-circuit fire and may result in bodily injury from electric shock.	 Be careful about wiring
Danger of short-circuit and electric shock Fit firmly proper round type crimp-style terminal to electric source cable using crimp tool and connect to motor terminal section. If not, it can cause short-circuit fire or bodily injury from electric shock due to looseness or disconnection.	 Use crimp-style terminal
Danger of short-circuit and electric shock Be sure to fit cable gland to hole of $\phi 22\text{mm}$ at motor terminal box. If not, it can cause short-circuit fire or bodily injury from electric shock.	 Protect cable from being pulled
Danger of electric shock Connect ground cable to ground terminal in motor terminal box. If not, it can cause bodily injury from electric shock.	 Be sure to ground

<p>Danger of restart</p> <p>Be sure to switch off electric source before maintenance or inspection. Single-phase motor has a thermal protector.</p> <p>Vacuum pump restarts become cool without warning after vacuum pump.</p>	 <p>With a thermal protector</p>
<p>CSA Requirement</p> <p>Thermally protected automatic reset. TYPE TP212. Motor restart without warning after protector trip.</p> <p>Min. circuit ampacity of conductor is 10A</p> <p>Max. branch circuit breaker is 15A</p> <p>When you used this pump in Europe.</p> <p>This vacuum pump must be equipped with a main disconnect device in accordance with requirements of EN60204-1, clause 5.3.2. It is recommended to use a circuit breaker as main breaker which is suitable for isolation according to EN60947-2 and is equipped with an operating handle which is lockable in OFF position and complies with the other requirements of EN60204-1, clause 5.3</p>	

<div style="text-align: center;">  <h2>CAUTION</h2> </div>	
<p>Motor burnout</p> <p>Before doing any wiring, check electric source and voltage.</p> <p>This pump is multi voltage type of AC100V/AC200V.</p> <p><u>Voltage can be changed at terminal block.</u></p> <p><u>This pump is wired to 100V when delivered to you.</u></p> <p>Check your electric source, voltage, and wire correctly to terminal block.</p> <p>Improper wiring and incorrect voltage can cause motor burnout.</p>	 <p>Check voltage</p>
<p>Danger of problem recurrence and failure</p> <p>If protective device activates, be sure to turn off electric source and inspect causes to solve the problem. Do not operate until problem is solved.</p> <p>Operation while problem is left unsolved can cause problem recurrence and failure.</p>	 <p>Inspect cause of problem</p>

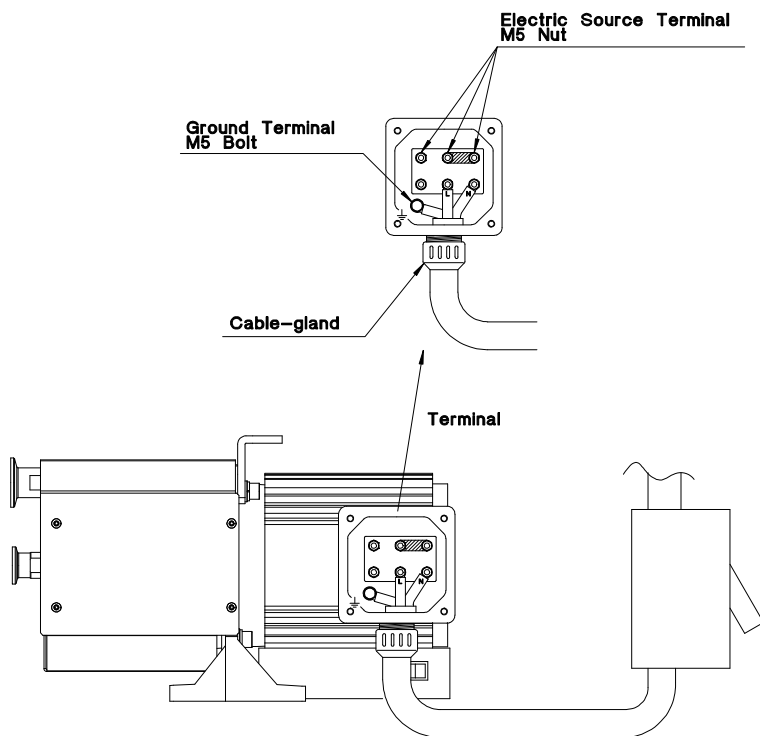


- ! Activate the emergency stop by electric source switch or breaker.
- ! Avoid motor burnout by motor protective circuit breaker (chart 1).
- ! Use cable of larger than 2mm² (more than rated 10A) cross section area for electric source cable and ground cable.
- ! Use round type terminal. (R2-5) 
- ! Fit cable-gland.
- ! Connect ground cord to ground terminal.

Chart—1





Voltage V	Frequency Hz	Recommended breaker (or protective device) capacity A
1 0 0	5 0	4 . 0
1 0 0	6 0	4 . 6
1 1 5	6 0	4 . 3
2 0 0	5 0	2 . 0
2 0 0	6 0	2 . 3
2 3 0	5 0	2 . 5
2 3 0	6 0	2 . 1

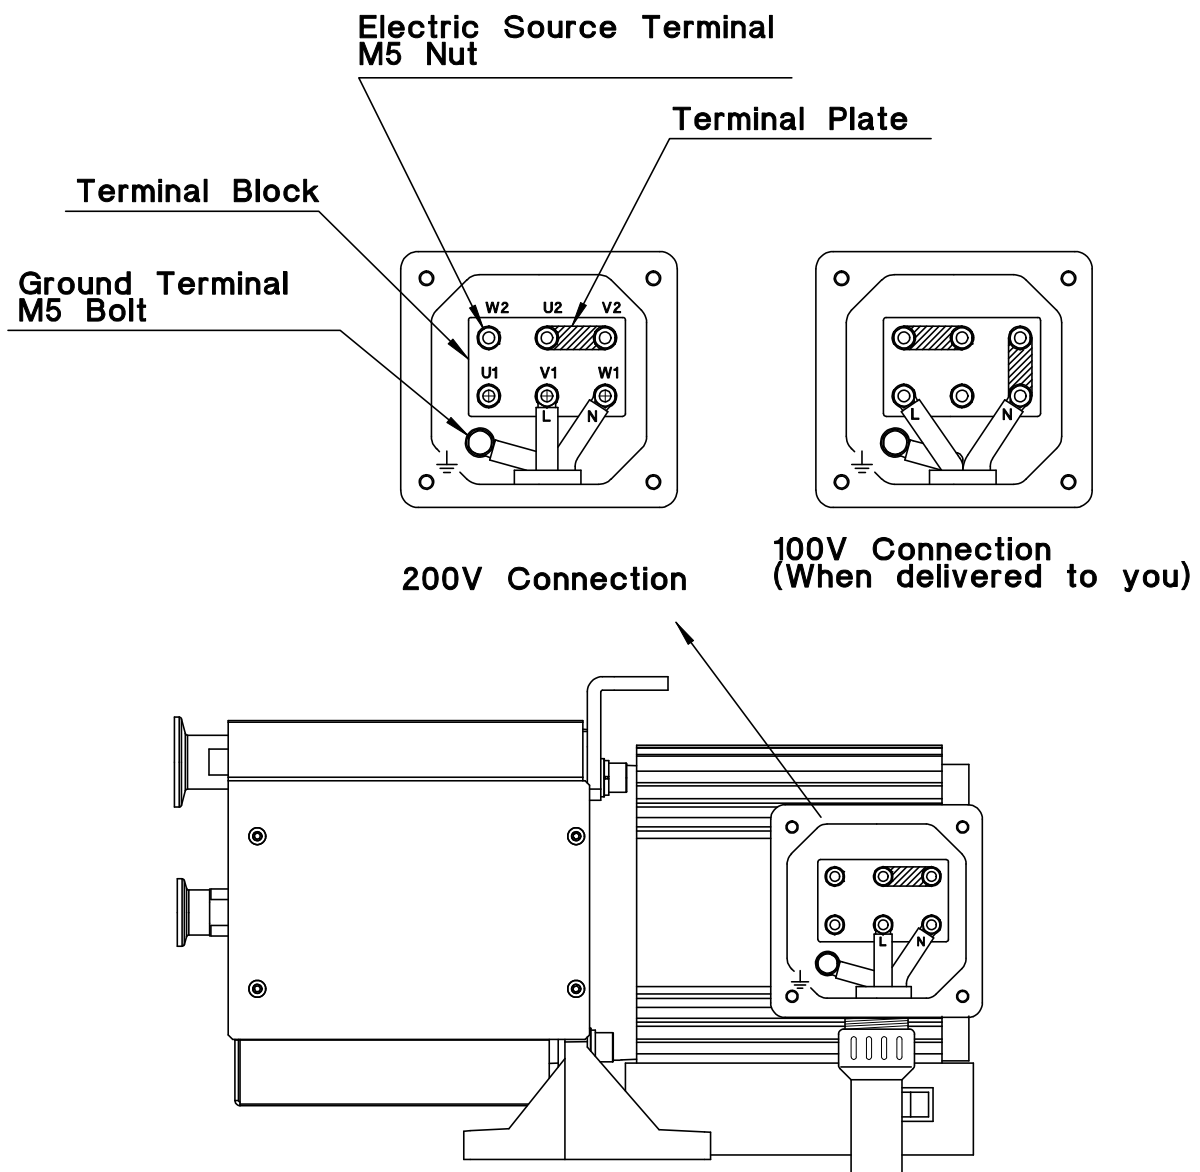How to wire

- ① Remove 4pcs. of M5 bolt at motor terminal box and remove protection cover.
※Be careful not to lose removed M5 bolts and washer.
- ② Wiring diagram is shown inside protection cover.
You can change to a 100V or 200V connection by changing terminal plate (2pcs.).
※It is wired to 100V when delivered to you.
- ③ If you want to change to a 200V connection, remove M5 nut of electric source terminal and change terminal plate as illustrated below.
- ④ Connect electric cable to terminal by using cable-gland at $\phi 22\text{mm}$ hole of motor terminal box.
- ⑤ Insert electric wire through cable gland on the bottom side of terminal box.
- ⑥ Connect each phase L-N to each electric source terminal respectively in accordance with the below wiring diagram.




3.2 Test operation


<div style="text-align: center;">  CAUTION </div>	
Danger of cap to fly Remove cap from inlet and outlet. Operation with cap being fitted can cause cap to fly by intake or exhaust impetus, resulting in accident, failure, or bodily injury from contact with flying objects.	 Remove cap
Danger of foreign matter entering inlet When checking turning direction, be careful not to enter foreign matter into an inlet. Foreign matter entering inlet can cause failure.	 Prevent foreign matter from entering
Danger of overheating Check that cooling fan is turning and cooling air is flowing. If not, it can cause accident, failure or bodily injury such as burns due to overheating.	 Check fan

Test operation

- ① Open inlet and outlet
 Remove caps (2 places)
 from inlet and outlet of
 vacuum pump.

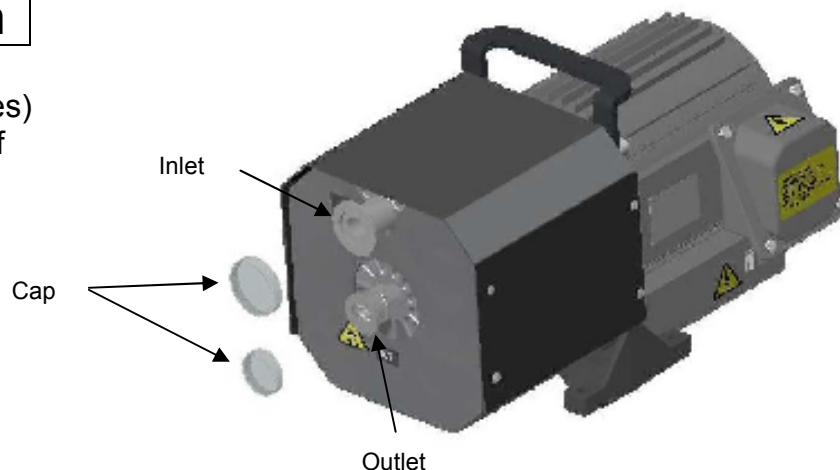

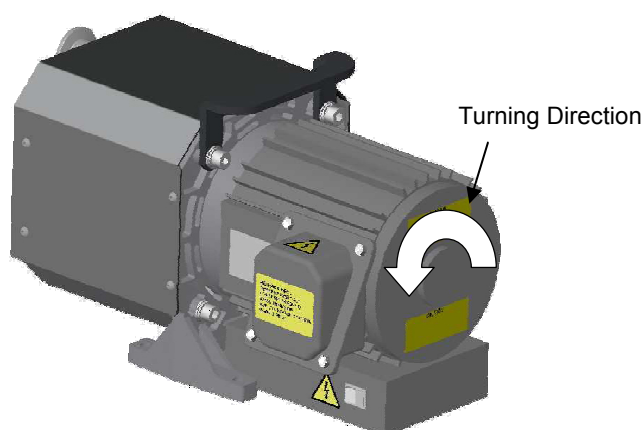


- ② Check turning direction
 Open inlet, turn on electrical
 source to start operating
 vacuum pump, and Check
 that air comes out from outlet.



If you fit pump to vacuum system and control operation of vacuum pump by remote control, **first check pump itself for turning direction** and then fit it to vacuum system.

3.3 Connection to vacuum system (chamber)

Inlet is NW25 (Internal screw size : Rc 3/8) and outlet is NW16.

 CAUTION	
Danger of exhaust disruption When connecting exhaust piping to vacuum pump and when combining piping with another vacuum pump, pay attention to piping size and length so that it does not cause exhaust resistance. Exhaust resistance can disrupt air flow, resulting in failure and over-current.	 Pay attention to exhaust resistance
Danger of foreign matter entering inlet If you use the seal material or the adhesive, etc. to prevent Leak of the joint when piping with internal screw of inlet, be careful not to enter the seal material or the adhesive into an inlet. The seal material or the adhesive entering inlet can cause failure.	 Prevent foreign matter from entering

Important

Use isolation valve between vacuum system and inlet.

Isolation valve is necessary to prevent the drawback of debris attached to the inside of vacuum pump into the vacuum chamber during start-up and shut-down. (We recommend the use of leak valve also). We recommend the use of an automatic valve as the isolation valve which closes during power failure in order to prevent the drawback of debris inside pump into the vacuum chamber during power failure.

Use the clean connecting pipe between vacuum chamber and vacuum pump.

We recommend the use of a flexible tube between inlet of vacuum pump and vacuum chamber so that vibration of pump does not transmit to vacuum chamber.


When connecting exhaust piping to outlet of vacuum pump, refer to the following size and length.

- max. 9m direct pipe length for exhaust pipe size Rc3/8 (inner dia.12.5)

But if pipe length becomes longer, use a larger size exhaust pipe.

Make sure that exhaust piping is not clogged during pump operation.



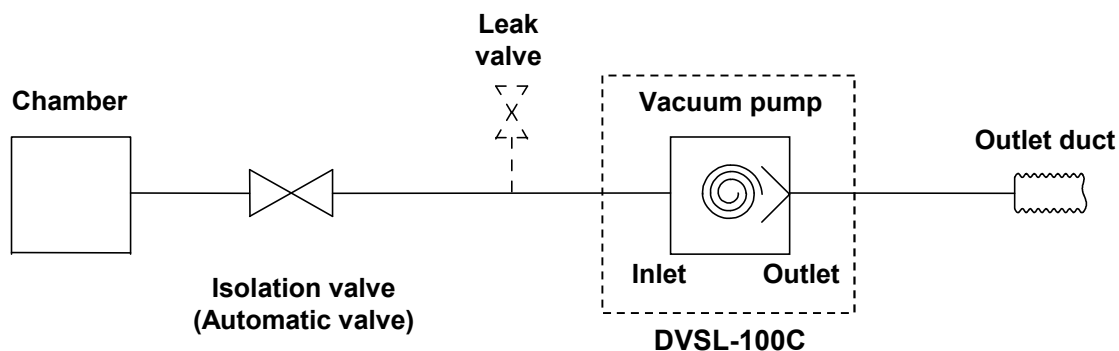





Make sure that pressure at outlet does not exceed atmospheric pressure at any conditions.



4. Operation



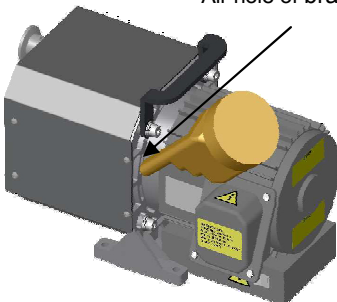




Be sure to use the procedure below to start up or shut down the pump.

- When you do not use air-flush device,
proceed 4.1 Standard operation [page 20].
- When you use air-flush device,
proceed 4.2 Air-flush operation [page 21].

<div style="text-align: center;">  WARNING </div>	
<p>Danger of explosion and ignition</p> <p>Do not evacuate gas which is hazardous to humans or explosive, flammable, or corrosive. Do not evacuate with substances containing chemicals, solvents, and powders.</p> <p>If done, it can cause failure or bodily injury by gas, explosion or ignition.</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <div style="display: flex; align-items: center;">  <div style="margin-left: 5px;">Do not pump</div> </div> <div style="margin-top: 10px;"> <ul style="list-style-type: none"> · Toxic gas · Explosive gas · Flammable gas · Corrosive gas · Chemicals · Solvent · Powder · Water · Liquid </div> </div> <p>※When evacuating vapor, operate in accordance with 4.2 [page 21]. ※Fluorine rubber seal specification can be used for exhaust some solvents. However It is not guaranteed fluorine rubber can be used for all solvents.</p>	 Never evacuate hazardous gas
<p>Danger of entanglement and foreign matter dispersal</p> <p>Never put finger or foreign matter into air holes of bracket.</p> <p>If done, it can cause bodily injury from entanglement with turning section, or foreign matter dispersal.</p> <div style="text-align: center; margin: 10px 0;">  Finger, foreign matter Air hole of bracket </div> 	 Avoid foreign matter
<p>Danger of electric shock and entanglement</p> <p>Do not remove or alter safeguards or insulation parts.</p> <p>If done, it can cause bodily injury from electric shock or turning section and it can cause deteriorated performance and operating lifetime, and invalidate guarantee.</p>	 Never alter
<p>Danger of failure and bodily injury</p> <p>Change air-flush port only after vacuum pump is stopped.</p> <p>If you change it during vacuum pump operation, it can cause vacuum pump failure and bodily injury.</p>	 Change after vacuum pump is stopped



CAUTION

Danger of exhaust disruption Remove blank flange from inlet and outlet. Operation with blank flange being fitted can disrupt exhaust or cause blank flange to fly by exhaust impetus, resulting in accident, failure, or bodily injury from contact with flying objects.	 Remove blank flange
Danger of vacuum break and pollution Be sure to close isolation valve between vacuum pump and vacuum system (chamber) during start-up and stop. Start-up or stop with isolation valve in the open position can draw back gas and debris attached to inside of vacuum pump to vacuum chamber due to pressure differential, resulting in vacuum break and pollution on vacuum chamber side.	 Start or stop after closing isolation valve
Danger of abnormal sound and failure Open inlet to atmosphere for about 5 seconds before restarting vacuum pump. If not, it can unbalance temperature inside vacuum pump, resulting in failure.	 Open air inlet
Danger of exceeding permissible temperature of intake gas If intake gas temperature is over 50°C, be sure to install a chiller or trap between vacuum pump and vacuum chamber so that gas intake temperature of vacuum pump keeps below 50°C. If not, vacuum pump temperature can increase, resulting in failure.	 Beware temperature of intake gas
Danger of remaining moisture When evacuating moisture, be sure to open air-flush port (air-flush operation). If you evacuate vapor while air-flush port is closed, condensed water will remain inside vacuum pump and cause failure.	 Operate while opening air-flush port
Danger of insufficient vapor exhaust After evacuating vapor, do air-flush operation for at least one hour. If you close air-flush port or stop vacuum pump soon after evacuating vapor, condensed moisture will remain inside vacuum pump, which will cause failure.	 Caution after exhausting vapor
Danger of exceeding permissible intake gas volume When sending N₂ gas or dry air into air-flush port, pressure should be the same as atmospheric pressure and flow rate should be less than 5NL/min. If not, it can increase pressure inside vacuum pump, resulting in failure.	 Beware of intake gas volume

Important

If it takes time to reach ultimate pressure of pump during initial operation (also operation after pump has not been used for a long time),

Close inlet, and continue operation for 6~8 hours while opening inlet for 3~5 seconds to atmosphere 2~3 times per hour. During pump stoppage, moisture might have entered inside of pump and deteriorated performance to reach ultimate pressure.

If pump has evacuated liquid such as water or high humid air (over 60%RH),

Moisture can deposit inside pump and cause pump failure. In that case, close isolation valve, and open inlet to atmosphere for 3~5 seconds several times and exhaust moisture inside pump to outside.

If pump has continued operation around ultimate pressure or continuously evacuated high humid gas

Moisture can be condensed and remains inside pump, causing insufficient ultimate pressure and failure.

In that case, do air-flush operation in accordance with 4.2 [page 21].

4.1 Standard operation

4.1.1 Start-up

- ① Check that caps of inlet and outlet is removed.
- ② Close isolation valve in order to prevent the drawback of debris attached to the inside of vacuum pump into vacuum chamber due to pressure differential, resulting in vacuum break and pollution.
(Open leak valve if you use leak valve).
- ③ Turn on vacuum pump.
Please install an external power switch or protective device (breaker) before letting vacuum pump operate.
- ④ Check start-up of vacuum pump and open isolation valve (close leak valve soon after start-up if you use leak valve) and evacuate vacuum chamber.

Important

**When continuously operating pump at around ultimate pressure,
(for example, using as fore line pump of turbo molecular pump)**

It can cause foreign matter or moisture to deposit inside pump, resulting in failure.

In that case, do air-flush operation or close isolation valve and open inlet to atmosphere for 3~5 seconds, 3~5 times daily.

Be careful not to damage air-flush port (especially air-muffler section).

If not, it can cause failure.

When doing air-flush operation,

Noise level will increase (by 5dB).

Install pump in an area which is not exposed to debris such as iron powder, stone powder, polish powder or wood dust.

Debris can clog air-muffler, undercutting air-flush effect.

4.1.2 Shut-down

- ① Be sure to close isolation valve in order to prevent the drawback of debris attached to inside of vacuum pump into vacuum chamber during operation due to pressure differential (open leak valve if you use leak valve).
- ② Turn off vacuum pump.
Please install an external power switch or protective device (breaker) before letting vacuum pump operate.
- ③ Check shut-down of vacuum pump.

Important

Be sure to close isolation valve between vacuum pump and vacuum chamber during pump shut-down.

If vacuum pump stops during air-flush operation, atmospheric air is drawn back from air-flush port to inside of vacuum pump, and vacuum on chamber side cannot be maintained. Be sure to close isolation valve between vacuum pump and vacuum chamber to prevent the drawback of debris from vacuum pump into vacuum chamber before stopping vacuum pump.

When returning air-flush operation to standard operation, operate as per 4.2.3[page 22].

4.2 Air-flush operation

This pump is equipped with air-flush port. Before evacuating vapor, read

precautions below completely and be sure to understand the contents.

Purpose of air-flush

Evacuating moisture or humid gas by vacuum pump can cause condensed water to remain in pump. This remaining water can cause failure of ultimate pressure or pump. Air-flush operation is necessary to exhaust the remaining water inside. Air-flush operation does not only exhaust moisture but also restores ultimate pressure.

※Vapor disposal volume is max. 100g/day when doing air-flush operation
(ambient temperature 25°C, humidity 60%RH).

Important

Maintenance interval of this pump is based on clean gas applications The standard differs when evacuating vapor.


You must shorten maintenance interval (5.2[page 24]) when evacuating vapor since vapor temperature, disposal volume, disposal frequency and substances in vapor have an influence on pump operation. When evacuating vapor, pay attention to all WARNING, CAUTION and Important notes (4 [page 18~19]).

4.2.1 Preparation

Before starting air-flush operation, first stop vacuum pump and proceed in accordance with the following procedure. Never try to do air-flush operation during operation.

Fit air-muffler

- ① Stop vacuum pump.
 - ② Remove plug from air-flush port with a spanner (nominal dia. 7mm).
 - ③ Lightly fit the attached air-muffler to air-flush port.
- ※Store the removed plug and do not misplace it.

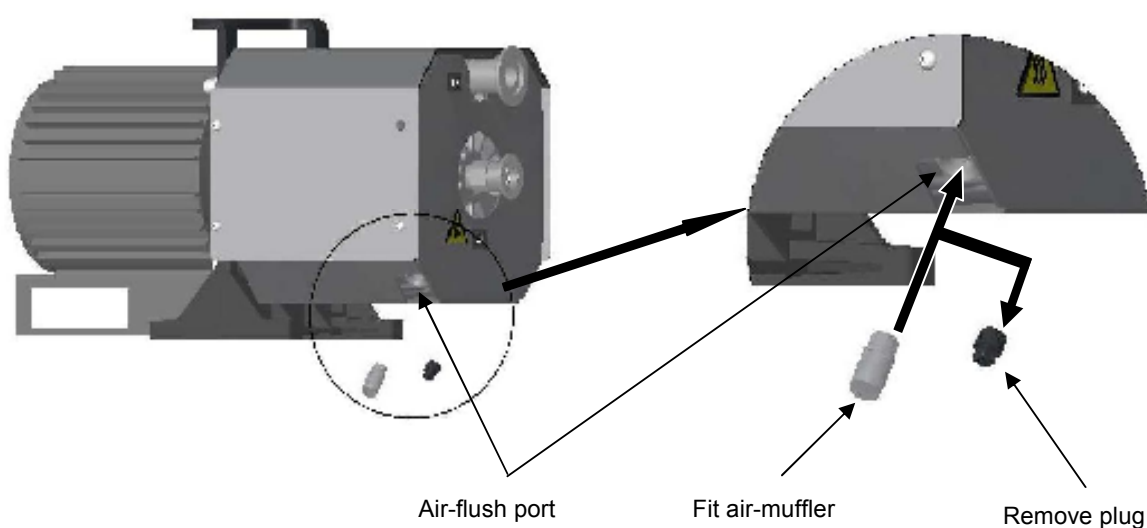

4.2.2 Start-up and shut-down

- ① Start vacuum pump according to 4.1.1 Operation [page 20].
- ② Stop vacuum pump according to 4.1.2 Shut-down[page 20].

Important

Continuous evacuating of humid gas

When evacuating vacuum chamber while humidity in chamber is high, moisture volume drawn into pump differs according to temperature and pressure in chamber.

When pumping vacuum chamber containing humid gas, be sure to open air-flush port and operate pump (air-flush operation).

Be careful not to damage air-flush port (especially air-muffler section).

Damage to air-flush port can cause failure.

When doing air-flush operation

Noise level will increase (by 3dB).

Install pump in an area which is not exposed to debris such as iron powder, stone powder, polish powder or wood dust.

Debris can clog air-muffler, undercutting air-flush effect.

Be sure to close isolation valve between vacuum pump and vacuum chamber during pump shut-down.

If vacuum pump stops during air-flush operation, atmospheric air is drawn back from air-flush port to inside of vacuum pump, and vacuum on chamber side cannot be maintained. Be sure to close isolation valve between vacuum pump and vacuum chamber to prevent the drawback of debris from vacuum pump into vacuum chamber before stopping vacuum pump.

When operating with air-flush OFF (closed), operate as per 4.2.3[page 22].

4.2.3 When returning to standard operation

Before starting air-flush operation, first stop vacuum pump and proceed in accordance with the following procedure. Never perform this procedure during operation.

Remove air-muffler


① Stop vacuum pump.

② Remove air-muffler from air-flush port.






③ Lightly fit plug to air-flush port with a spanner (nominal dia. 7mm).

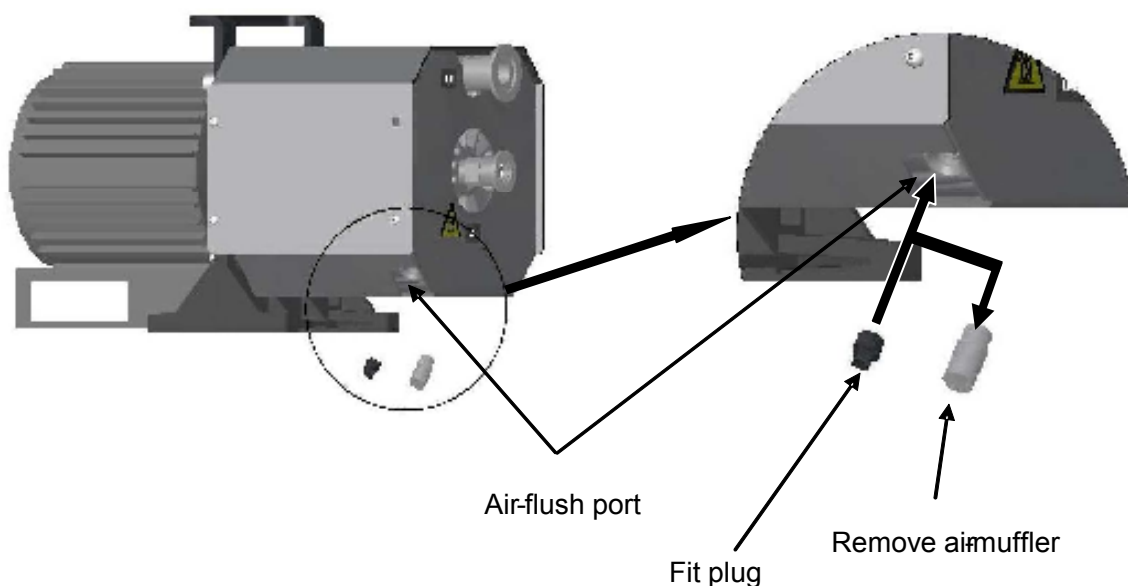※When restarting air-flush operation, refer to 4.2.1~4.2.2[page 21 ~ 22] and prepare and start.

※Store removed air-muffler and pay attention not to misplace it.



5. Maintenance and inspection

 WARNING	
Danger of failure and bodily injury Conduct periodical maintenance and inspection. If not, it can cause insufficient performance, failure of vacuum pump, and bodily injury.	 Conduct periodical maintenance and inspection
Danger of burns Conduct maintenance and inspection only after vacuum pump becomes cool enough. Maintenance and inspection soon after vacuum pump stops can cause burn injury.	 Be careful about high temperature
Danger of electric shock Be sure to conduct maintenance and inspection after you turn off electric source. If not, it can cause bodily injury from electric shock or turning object.	 Turn off electric source
Danger of accident, failure and shorter operating lifetime Ask specialist to perform repairs. Defective repairs can cause accident, failure or shorter operating lifetime.	 Ask specialist to perform repairs

5.1 Daily maintenance and inspection

Conduct the following daily maintenance and inspection.

Items	Contents	Measures
Vacuum pump itself	Abnormal sound	Ask specialist to repair.
	Abnormal vibration	Ask specialist to repair.
	Abnormal temperature	Ask specialist to repair.
	Cooling fins are dirty or clogged	Blowing air, cleaning
Air-muffler	Dirty, clogged	Replace
Electric wire	Deteriorated	Replace

5.2 Maintenance

When maintenance interval has elapsed, be sure to contact our distributor who sold it to you. This vacuum pump requires maintenance conducted only by our authorized specialist.

Never try to disassemble, reassemble or alter on user's side. We are not responsible for any accidents caused by disassembly, reassembly or alteration which was done by the user or non-specialist.

Where to inspect	Maintenance interval			
	Yearly (8,000 h)	Biennially (16,000 h)	triennially (24,000 h)	4th years (32,000 h)
Angular contact Ball bearing set	-	Grease / △	-	○
Pin crank set	Grease / △	Grease / △	Grease / △	○
Duplex arrangement angular ball bearing set [Housing]	-	Grease / △	-	○
Roller bearing set [OS]	Grease / △	Grease / △	Grease / △	○
Spider	○	○	○	○
P-seal [FS set]	○	○	○	○
Tip seal FS	○	○	○	○
Tip seal OS	○	○	○	○
O-ring [Inlet flange]	○	○	○	○
Air-flush kit	○	○	○	○

○ . . . Replace

△ . . . Replace if something goes wrong.

Note 1 : Be sure to use designated DVSL exclusive grease.

Note 2 : You must shorten maintenance standard when pumping vapor since vapor temperature , disposal volume, disposal frequency and substances in vapor have influence on pump operation.

Note 3 : The maintenance interval should be earlier one in either the period or running hours.

Note 2 : When you want further operation after either the 4th year or 32,000 operating hours, please contact our distributor who sold it to you.

Important

Causes of failure

Shorten maintenance interval if conditions of installation or operation are unfavorable.

In particular, ambient temperature has a great influence on failure. Maintenance interval is based on an ambient temperature 5~40°C and a yearly average ambient temperature 25°C.

Shorten the maintenance interval if temperature exceeds the foregoing. If not, it can cause failure.

Maintenance interval is not a guarantee period.

Exceeding maintenance interval

Operation exceeding maintenance interval increases risk of failure and accidents.

When maintenance interval has elapsed, be sure to contact either the distributor who sold it to you or us.

6. Problems and remedies

If something goes wrong, refer to the following chart and remedy problems.

If you cannot solve your problems, please contact either our distributor who sold it to you or us.

Problems	Causes	Remedies
Motor does not rotate.	Protective device (or breaker) activates.	※Inspect and repair.
	Electric source cable is loose or cut.	Check connection. Repair or replace.
	Voltage drops.	Check size and length of cable.
	Motor malfunctions.	※Inspect and repair.
	Pump malfunctions. Foreign matter enters.	※Inspect and repair.
	Motor protection gear activates.	Air outlet is clogged. ※Inspect and repair.
Motor stops soon.	Protective device (or breaker) activates.	※Inspect and repair.
	Voltage drops.	Check size and length of cable.
	Motor malfunctions.	※Inspect and repair.
	Pump malfunctions. Foreign matter enters.	※Inspect and repair.
	Improper exhaust piping.	Check exhaust piping diameter and length. Air outlet is clogged.
	Motor protection gear activates.	Air outlet is clogged. ※Inspect and repair.
Ultimate pressure is insufficient.	Air leaks from piping. O-ring is damaged.	Check tightness of piping. Replace.
	Moisture and solvent are drawn.	Open inlet to atmosphere and operate for a few minutes and then close inlet and operate for about 24 hours. Do air-flush operation. Install trap and filter.
	Number of motor revolutions drops.	Check wiring and voltage. ※Inspect and repair.
	Pump malfunctions.	※Inspect and repair.
Abnormal sound, abnormal vibration	Connection becomes loose.	Tighten connection. ※Inspect and repair.
	The fix is not level.	Fix vacuum pump on solid and level floor (less than 5° inclination). ※Inspect and repair.
	Foreign matter enters pump.	※Inspect and repair.
	Motor malfunctions.	※Inspect and repair.
	Pump malfunctions.	※Inspect and repair.

※ Contact our distributor who sold it to you.

7. Disposal

When a vacuum pump is disposed, please comply with local law such as the Waste Disposal Law.

[MEMO]

8. Specifications

8.1 Specifications

Model			DVSL-100C			
Displacement L/min		50Hz	100			
		60Hz	120			
Ultimate pressure Pa			≤50			
Max. inlet pressure			Atmospheric pressure			
Ambient operating temperature			5℃~40℃			
Motor	Type		Single-phase squirrel cage induction motor Totally-enclosed , 2-pole B class insulation, ▪ Multiplex voltage, IP42			
	Output kW		0. 3／0. 3 (50Hz/60Hz)			
	Voltage V		100	115	200	230
	Rated current A	50Hz	3. 2	—	1. 6	2. 0
		60Hz	3. 7	3. 4	1. 6	1. 7
	Revolution min ⁻¹ {rpm}	50Hz	2940	—	2938	2950
		60Hz	3540	3550	3534	3550
Noise level 1m dB(A) (With air-flush ON)			≤62 (≤65)			
Inlet connection			NW25 [Internal screw size : Rc3/8]			
Outlet connection			NW16 [With exhaust valve]			
Dimensions mm W×L×H			358×210×215			
Mass kg			15			
Cooling system			Air-cooled			
Others			air-flush			

Note 1 : Pumping speed and ultimate pressure remain the same during air-flush operation and standard operation.

Note 2 : Noise level is measured at ultimate pressure in an anechoic room.


Note 3 : Vapor handling is less than 100g/day during air-flush operation. Air-flush volume is 5L/min.
Air-flush is OFF (closed) when pump is delivered.

Note 4 : It is wired to 100V when delivered to you.

Note 5 : The specification might change without a previous notice for the quality improvement.


8.2 Dimensions

DVSL-100C

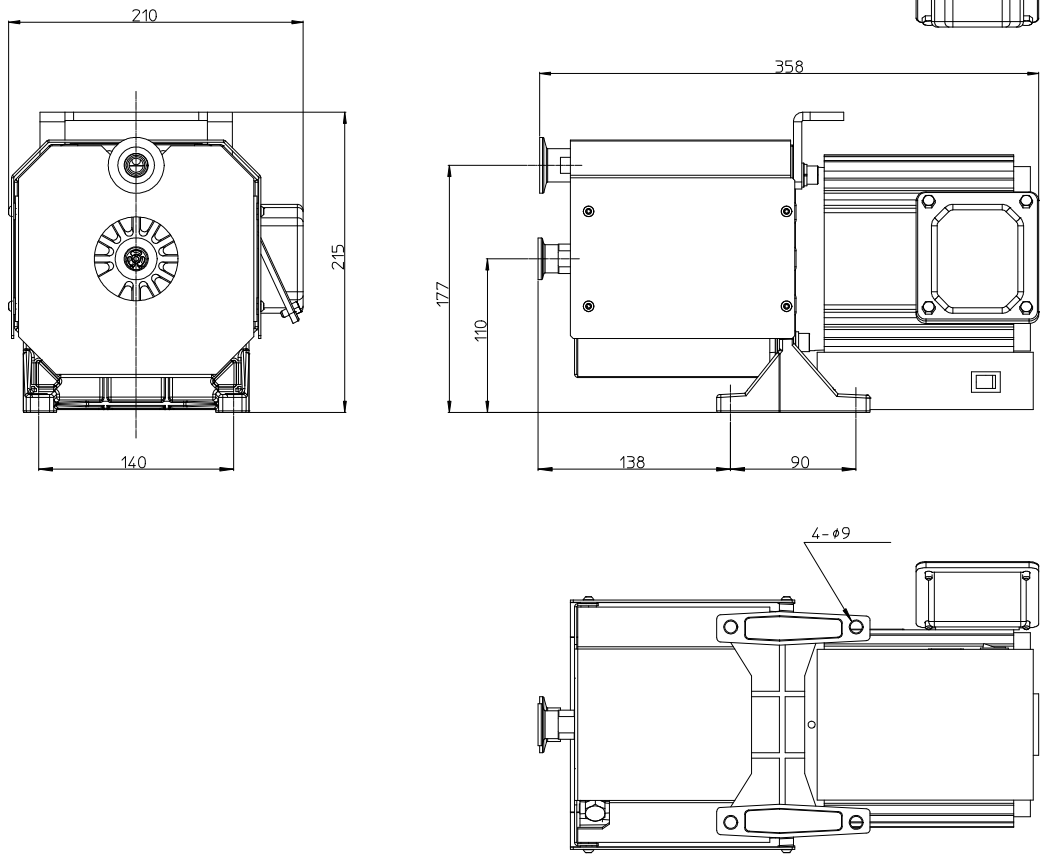

8.3 Performance data

DVSL-100C Pumping Speed

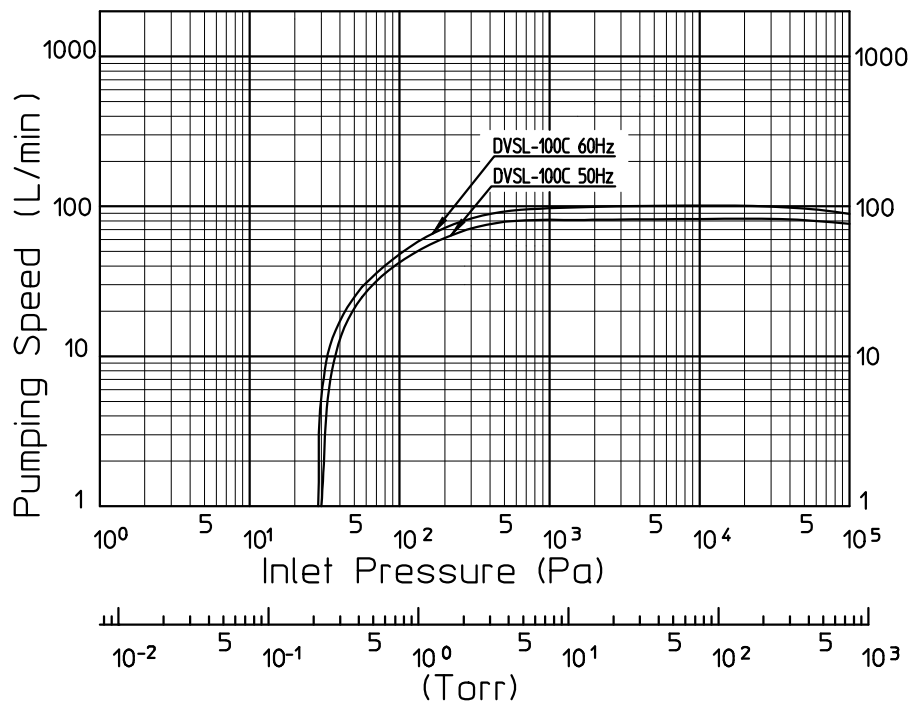



ANEST IWATA Corporation

Manufacturer

3176, Shinyoshida-cho, Kohoku-Ku,
Yokohama 223-8501, Japan

Tel +81 (0) 45-591-1112

Fax +81 (0) 45-591-1539

<http://www.anest-iwata.co.jp/>

ANEST IWATA Europe S.R.L.

European agent

Corso Vigevano, 56-10155 Torino ITALY

Tel +39-1-1248-0868

Fax +39-1-185-1944

<http://www.anest-iwataeu.com/>

Manual No. V111-00
Code No.08819040