



LR104996

Our product have got CSA approval.
(Canadian Standards Association)

Instruction Manual (Original Instructions)

Oil-free Scroll Vacuum Pump

DVSL-500C

DVSL-501C



FOR SALES AND SERVICE PLEASE CALL:

PTB SALES

T :: 626.334.0500
service@ptbsales.com
www.ptbsales.com

DATE SERVICED: _____

VIEW OUR INVENTORY

This instruction manual includes very important warnings, cautions and operating procedure in order to operate this pump safely and efficiently.

Be sure to read this instruction manual thoroughly and fully understand before operation.

After reading it, store it in a convenient place for immediate and future reading.

※Before use, be sure to fill in the blank spaces below for future repair and after-service.

Serial No.
Who sold it to you
Purchase date
When you began operation

Declaration of Conformity

We , ANEST IWATA Corporation

3176, Shinyoshida-cho, Kohoku-ku, Yokohama 223-8501, Japan

declare in our sole responsibility that the products

Type : Scroll Vacuum Pump

Models :

DVSL-500C

DVSL-501C

3-phase , 200/208/230/380/400/415/480V, 50/60Hz

to which this declaration applies, complies with these normative documents :


2006/42/EC : Machinery Directive

EN 1012-2:1998 : Compressors and Vacuum Pumps-Safety
Requirements, Part 2: Vacuum Pumps

This Declaration is based on :

Third party testing, performed by the Notified Body

TUV Rheinland Product Safety GmbH - Am Grauen Stein - D-51105 Köln



Tamotsu Fujioka ,
Manager of Vacuum Pump Dept.

Dec, 2009 YOKOHAMA

Date and Place

Important information

Be sure to read this instruction manual to understand how to operate equipment correctly. Only operators, who fully understand warnings, cautions and instructions, are to operate the equipment. Improper operation (mishandling) can cause serious bodily injury, death, fire or explosion.





Store this manual in a convenient place for immediate and future reference.




◆ Regarding safety

- The safety instructions given in this manual are the minimum operating requirements. Follow all national or municipal laws and regulations pertaining to fire, electricity, and other safety regulations, as well as corporate regulations.
- Pay special attention to items which are shown by the below marks and symbols.
- Symbols and marks have the following meanings.

Examples of marks

	WARNING	Indicates a potentially hazardous situation which, if not avoided, may result in serious injury or loss of life.
	CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or property damage.

Examples of symbols

	Indicates [Beware]. We will explain briefly in or near the symbol. (The example on the left is [Beware of electric shock]).
	Indicates [Prohibited action]. We will explain briefly in or near the symbol. (The example on the left is [Do not touch]).
	Indicates [Required action]. We will explain briefly in or near the symbol. (The example on the left is [Be sure to ground]).

* We shall not be responsible for any injury or damage caused by disregard of warnings, cautions or instructions.

Supplementary notes

Important	Indicates notes which we ask you to observe. They are helpful to achieve full performance and functionality of the equipment.
------------------	---

For safe operation

Below is very important information about how to safely operate the equipment.
Before operation, be sure to read and fully understand the contents.














WARNING

 Be careful about hoisting	Danger of cargo collapse Be careful to install vacuum pump using motor eyebolt and crane with sufficient allowable load capacity (DVSL-500C · 501C mass 36kgs) while paying attention to stability of suspended load. If not, it can cause damage, failure or bodily injury from falling cargo due to hoisting failure, or by being caught between suspended cargo and other material.	 Avoid moisture	Danger of electric shock Install in an area which is not exposed to moisture such as rain or steam. If moisture comes into and tact with the electric source connection, it can cause fire or bodily injury due to short-circuit or electric shock.
 Install at a safe site	Danger of explosion, fire and accident Install in an area free from explosive, flammable or corrosive substances. If not, it can cause explosion, fire or accident.	 Ask qualified electrician	Danger of short-circuit and electric shock Ask a qualified electrician to perform electric wiring. If not, short-circuit or electric shock can cause fire or bodily injury.
 Turn off electric source	Danger of electric shock and entanglement Be sure to turn off electric source on building site before wiring. If not, it can cause electric shock or bodily injury due to turning objects.	 Install overcurrent protective device	Danger of accident, fire and failure Be sure to install protective device to protect circuitry. We recommend overcurrent protective device (rated 15A) to protect branch circuit. If equipment is not stopped in an emergency, it can cause accident, fire or failure.
 Install emergency stop switch	Danger of accident, fire or failure Be sure to install an electric source emergency stop switch (or protective device that can urgently stop). If equipment is not stopped in an emergency, it can cause accident, fire or failure.	 Install short circuit protective device	Danger of fire and electric shock Install short circuit protective device. If not, it can cause bodily injury due to fire or electric shock.
 Install motor protective circuit breaker to protect motor	Danger of electric fire and electric shock Install motor protective circuit breaker to protect motor. If not, it can cause bodily injury due to electric fire or electric shock. If you have any questions about the selection of protective devices, contact either the dealer who sold it to you or us.	 Be careful about wiring	Danger of short-circuit and electric shock We recommend an electric source cable of more than <u>2mm² (more than rated 15A) cross section area for electric source cable and ground cable</u> . Be careful to avoid voltage drop considering local situation. If not, it can cause a short-circuit fire and may result in bodily injury from electric shock.

For safe operation




WARNING

 Use crimp-style terminal	Danger of short-circuit and electric shock Fit firmly proper round type crimp-style terminal to electric source cable using crimp tool and connect to motor terminal section. If not, it can cause short-circuit fire or bodily injury from electric shock due to looseness or disconnection.	 Protect cable from being pulled	Danger of short-circuit and electric shock Be sure to fit cable gland to hole of $\phi 22\text{mm}$ at motor terminal box. If not, it can cause short-circuit fire or bodily injury from electric shock.
 Be sure to ground	Danger of electric shock Connect ground cable to ground terminal in motor terminal box. If not, it can cause bodily injury from electric shock.	 Never evacuate hazardous gas	Danger of explosion and ignition Do not evacuate gas which is hazardous to humans or explosive, flammable, or corrosive. Do not evacuate with substances containing chemicals, solvents, and powders. If done, it can cause failure or bodily injury by gas, explosion or ignition. It is not guaranteed fluorine rubber can be used for all solvents.
 Avoid foreign matter	Danger of entanglement and foreign matter dispersal Never put finger or foreign matter into air holes of fan cover, FS cover. If done, it can cause bodily injury from entanglement with turning section, or foreign matter dispersal.	 Never alter	Danger of electric shock and entanglement Do not remove or alter safeguards or insulation parts. If done, it can cause bodily injury from electric shock or turning section and it can cause deteriorated performance and operating lifetime, and invalidate guarantee.
 Change after vacuum pump is stopped	Danger of failure and bodily injury Change air-flush port only after vacuum pump is stopped. If you change it during vacuum pump operation, it can cause vacuum pump failure and bodily injury.	 Conduct periodical maintenance and inspection	Danger of failure and bodily injury Conduct periodical maintenance and inspection. If not, it can cause insufficient performance, failure of vacuum pump, and bodily injury.
 Be careful about high temperature	Danger of burns Conduct maintenance and inspection only after vacuum pump becomes cool enough. Maintenance and inspection soon after vacuum pump stops can cause burn injury.	 Turn off electric source	Danger of electric shock Be sure to conduct maintenance and inspection after you turn off electric source. If not, it can cause bodily injury from electric shock or turning object.
 Ask specialist to perform repairs	Danger of accident, failure and shorter operating lifetime Ask specialist to perform repairs. Defective repairs can cause accident, failure or shorter operating lifetime.		

For safe operation








CAUTION

 Use at designated temperature	Danger of overheating Operate at ambient temperature of 5°C ~40°C. Operating at a temperature range other than that designated can cause accident, failure or bodily injury such as burns due to overheating.	 Pay attention to ventilation	Danger of overheating Install in a well-ventilated area. Poor ventilation can disrupt cooling and cause accident, failure or bodily injury such as burns since this vacuum pump is an air-cooled type. Do not block inlet and outlet of cooling air with obstruction. (Separate inlet side of the cooling air from obstruction or wall by 10cm or more, and separate outlet side by 30cm or more)
 Avoid dust	Danger of dust Be sure site is free from dust. Sucking in of dust can cause failure.	 Fix on a solid level floor	Danger of movement Be sure to fix on solid and level floor (less than 5° inclination). Uneven fix can cause failure and movement of vacuum pump. If fix floor is unstable, fix pump with 2 bolts using hole of ϕ 8.5mm at leg section.
 Avoid direct sunlight	Danger of overheating Install where equipment is not exposed to direct sunlight. Vacuum pump exposed to direct sunlight can overheat, resulting in failure.	 Check voltage	Motor burnout Before doing any wiring, check electric source and voltage. This pump is multi voltage type of AC200V/AC400V. <u>Voltage can be changed at terminal block. This pump is wired to 200V when delivered to you.</u> Check your electric source, voltage, and wire correctly to terminal block. Improper wiring and incorrect voltage can cause motor burnout.
 Inspect cause of problem	Danger of problem recurrence and failure If protective device activates, be sure to turn off electric source and inspect causes to solve the problem. Do not operate until problem is solved. Operation while problem is left unsolved can cause problem recurrence and failure.	 Remove cap	Danger of cap to fly Remove cap from inlet and outlet. Operation with cap being fitted can cause cap to fly by intake of exhaust impetus, resulting in accident, failure, or bodily injury from contact with flying objects.
 Prevent foreign matter from entering	Danger of foreign matter entering inlet When checking turning direction, be careful not to enter foreign matter into an inlet. Foreign matter entering inlet can cause failure.	 Check fan	Danger of overheating Check that cooling fan is turning and cooling air is flowing. If not, it can cause accident, failure or bodily injury such as burns due to overheating.
 Pay attention to exhaust resistance	Danger of exhaust disruption When connecting exhaust piping to vacuum pump and when combining piping with another vacuum pump, pay attention to piping size and length so that it does not cause exhaust resistance. Exhaust resistance can disrupt air flow, resulting in failure and over-current.	 Prevent foreign matter from entering	Danger of foreign matter entering inlet If you use the seal material or the adhesive, etc. to prevent Leak of the joint when piping with internal screw of inlet, be careful not to enter the seal material or the adhesive into an inlet. The seal material or the adhesive entering inlet can cause failure.

For safe operation




CAUTION

 Start or stop after closing isolation valve	Danger of vacuum break and pollution Be sure to close isolation valve between vacuum pump and vacuum system (chamber) during start-up and stop. Start-up or stop with isolation valve in the open position can draw back gas and debris attached to inside of pump to vacuum chamber due to pressure differential, resulting in vacuum break and pollution on vacuum chamber side.	 Beware temperature of intake gas	Danger of exceeding permissible temperature of intake gas If intake gas temperature is over 50°C, be sure to install a chiller or trap between vacuum pump and vacuum chamber so that gas intake temperature of vacuum pump keeps below 50°C. If not, vacuum pump temperature can increase, resulting in failure.
 Operate while opening air-flush port	Danger of remaining moisture When evacuating moisture, be sure to open air-flush port (air-flush operation). If you evacuate vapor while air-flush port is closed, condensed moisture will remain inside vacuum pump and cause failure.	 Caution after exhausting vapor	Danger of insufficient vapor exhaust After evacuating vapor, do air-flush operation for at least one hour. If you close air-flush port or stop vacuum pump soon after evacuating vapor, condensed water will remain inside vacuum pump which will cause failure.
 Beware of intake gas volume	Danger of exceeding permissible intake gas volume When sending N ₂ gas or dry air into air-flush port, pressure should be the same as atmospheric pressure and flow rate should be less than 10NL/min. If not, it can increase pressure inside vacuum pump, resulting in failure.		

Where to attach warning stickers

Where to attach warning stickers

Always keep warning stickers clean and legible. If they become dirty or detached, replace them with new ones. If you need replacement stickers, contact the dealer who sold the vacuum pump to you.

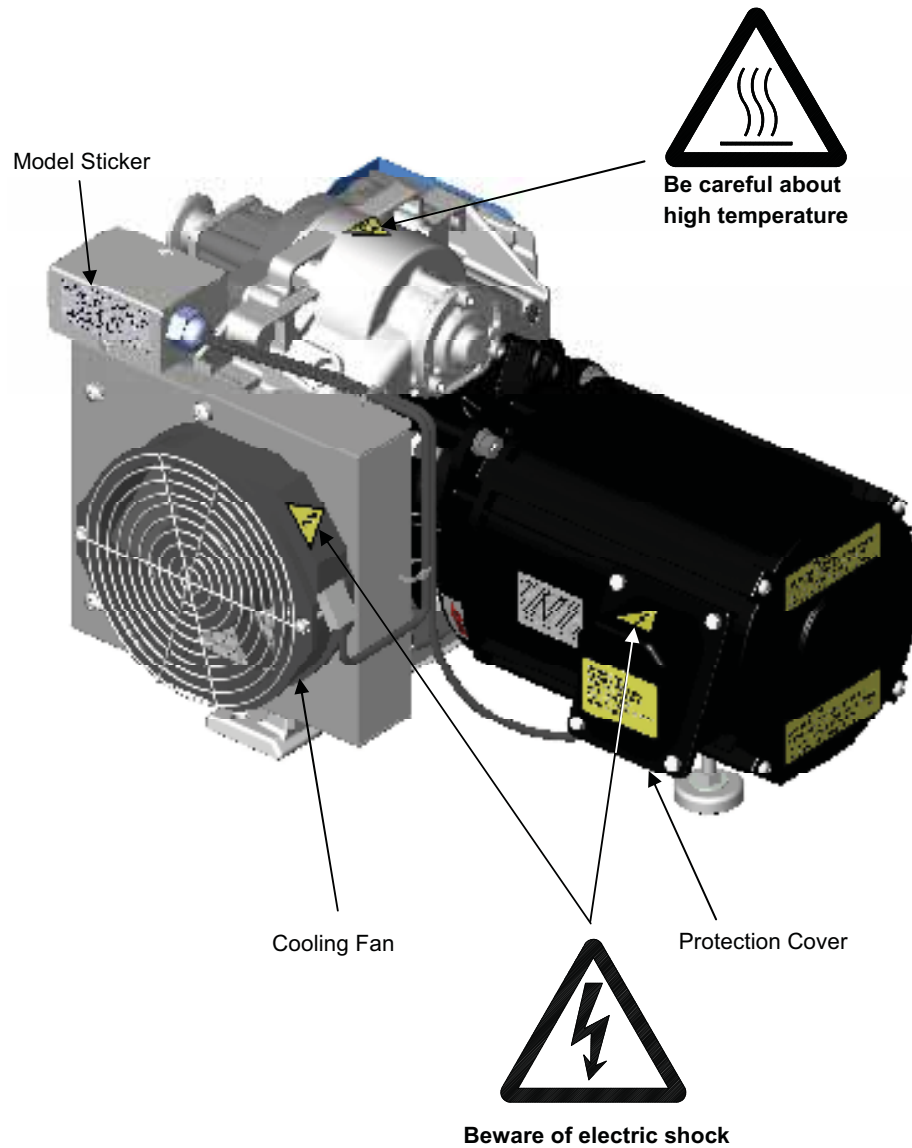

Contents

Important information.....	1
Important information	1
For safe operation	2
Contents	7
1. Before use	8
1.1 Check the product.....	8
2. Name and structure of each section.....	10
3. Installation.....	11
3.1 Wiring.....	13
3.2 Test operation	17
3.3 Connection to vacuum system (chamber)	19
4. Operation.....	20
4.1 Standard operation.....	22
4.1.1 Start-up	22
4.1.2 Shut-down	22
4.2 Air-flush operation.....	23
4.2.1 Preparation	23
4.2.2 Start-up and shut-down	24
4.2.3 When returning to standard operation.....	24
4.3 Water separator & silencer [Option].....	25
5. Maintenance and inspection.....	26
5.1 Daily maintenance and inspection	26
5.2 Maintenance	27
6. Problems and remedies	28
7. Disposal.....	28
8. Specifications	29
8.1 Specifications	29
8.2 Dimensions	30
8.3 Performance data	30

1. Before use

1.1 Check the product

- Check that the package is right-side-up before opening.
- Check that the model of the product is the same as the one you ordered.

How to read model name

DVSL : model

D V S L - 5 0 0 C

Displacement (swept volume)
50:500 L/min at 60Hz Motor

Ultimate pressure, Back-up material
0 : 30Pa , Silicon rubber seal
1 : 100Pa , Fluorine rubber seal


- Check that there is no damage.

If there is any damage, contact either the dealer who sold it to you or us.

- Check the following accessories.

Instruction manual (this one)

Air-muffler for air-flushing (which is attached to bolt of cooling fan)

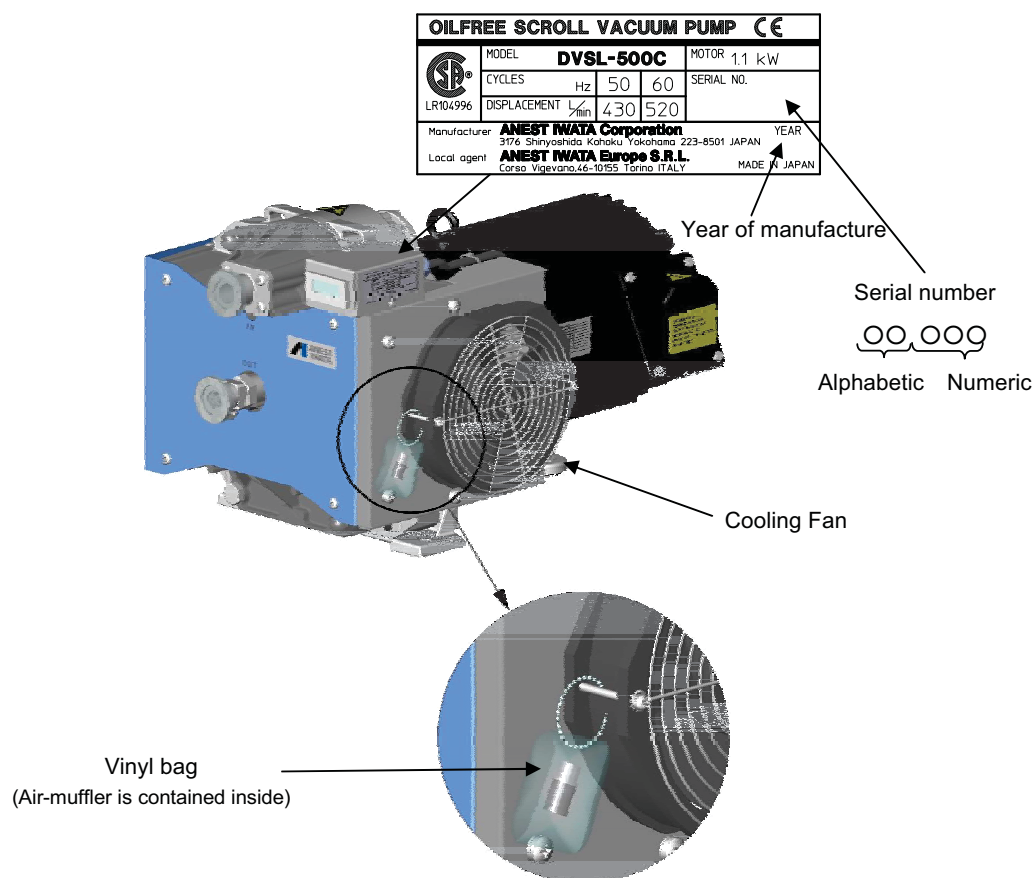

※Please prepare electric source cords, crimp-style terminal, electric source protective devices, piping to inlet, and piping from outlet on customer side.

Open package



WARNING


Danger of cargo collapse

Be careful to install vacuum pump using motor eyebolt and crane with sufficient allowable load capacity (DVSL-500C - 501C mass 36kgs) while paying attention to stability of suspended load.



If not, it can cause damage, failure or bodily injury from falling cargo due to hoisting failure, or by being caught between suspended cargo and other material.





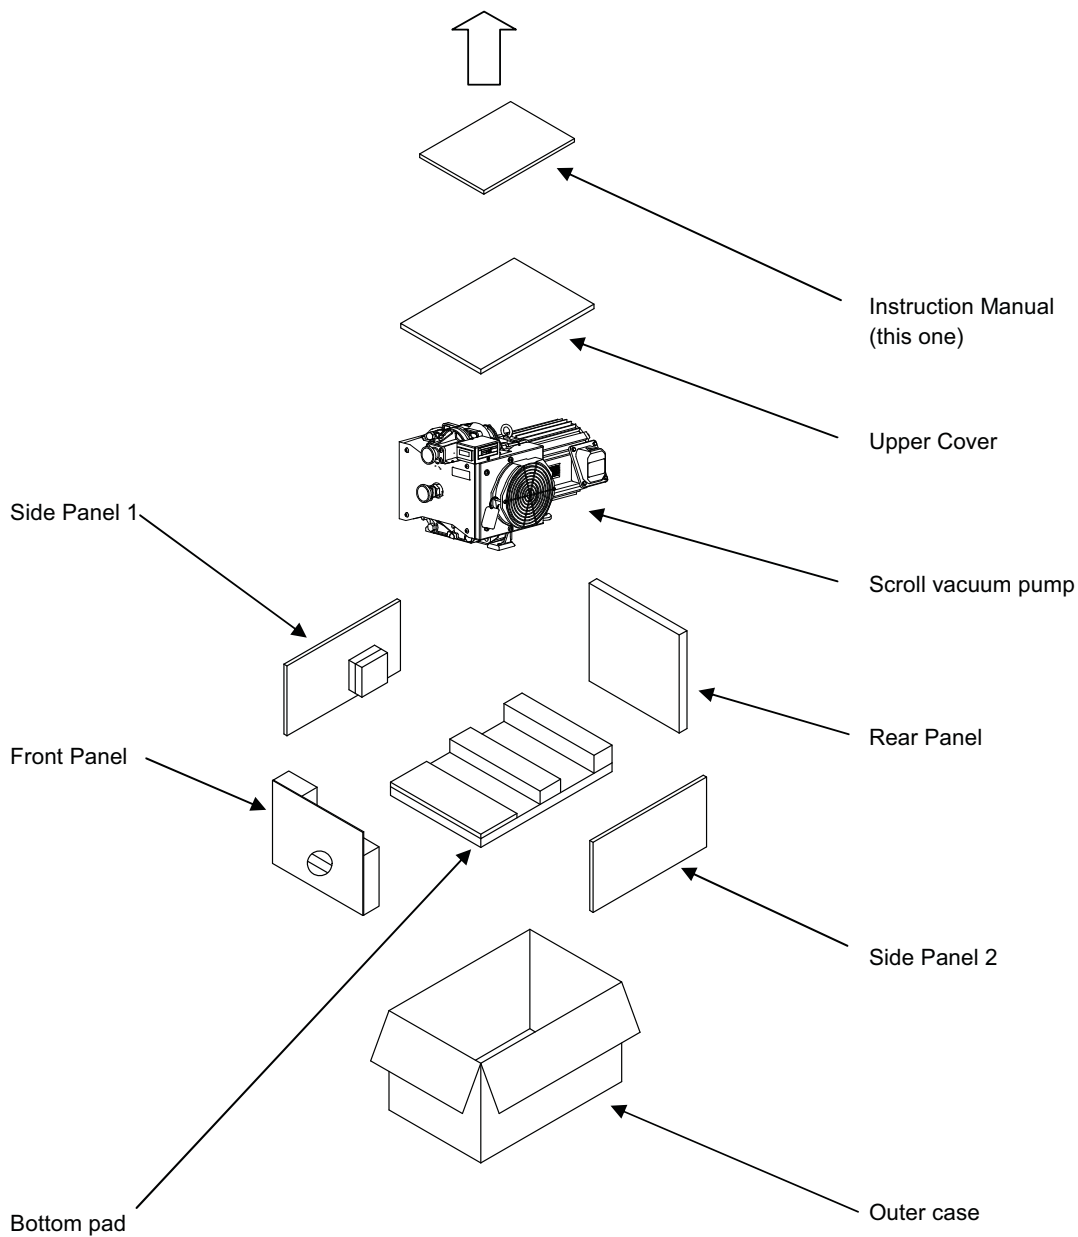



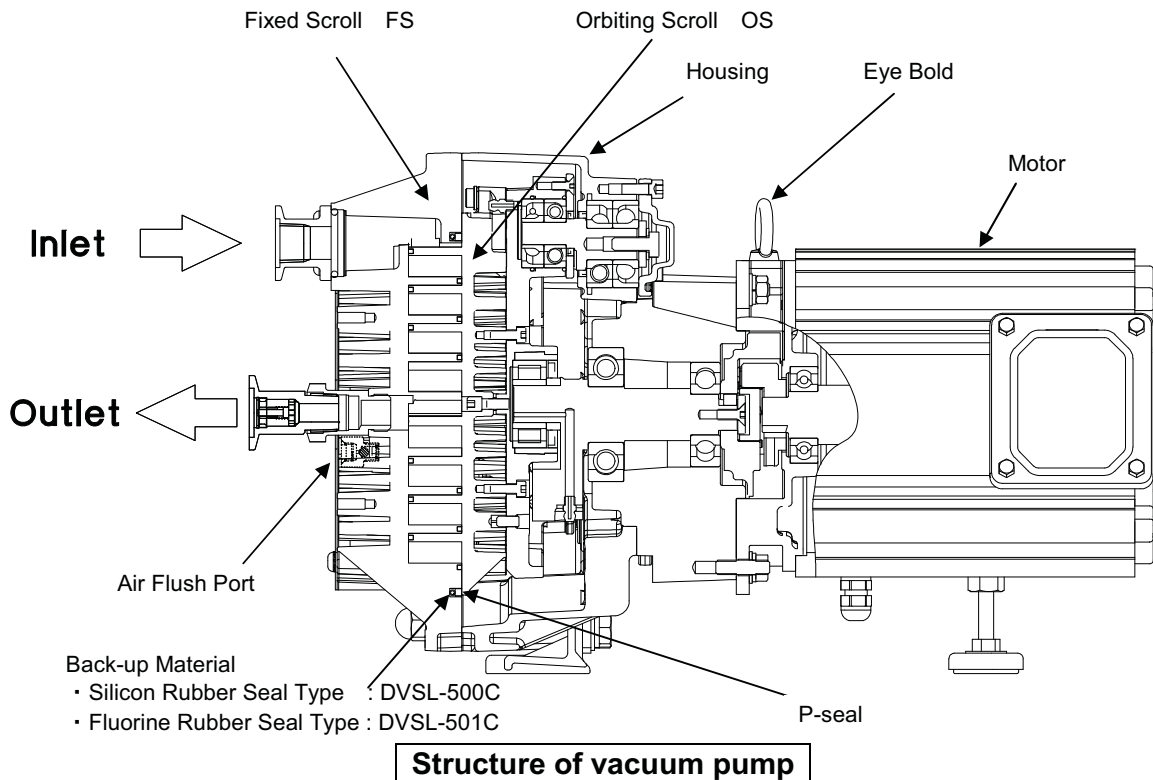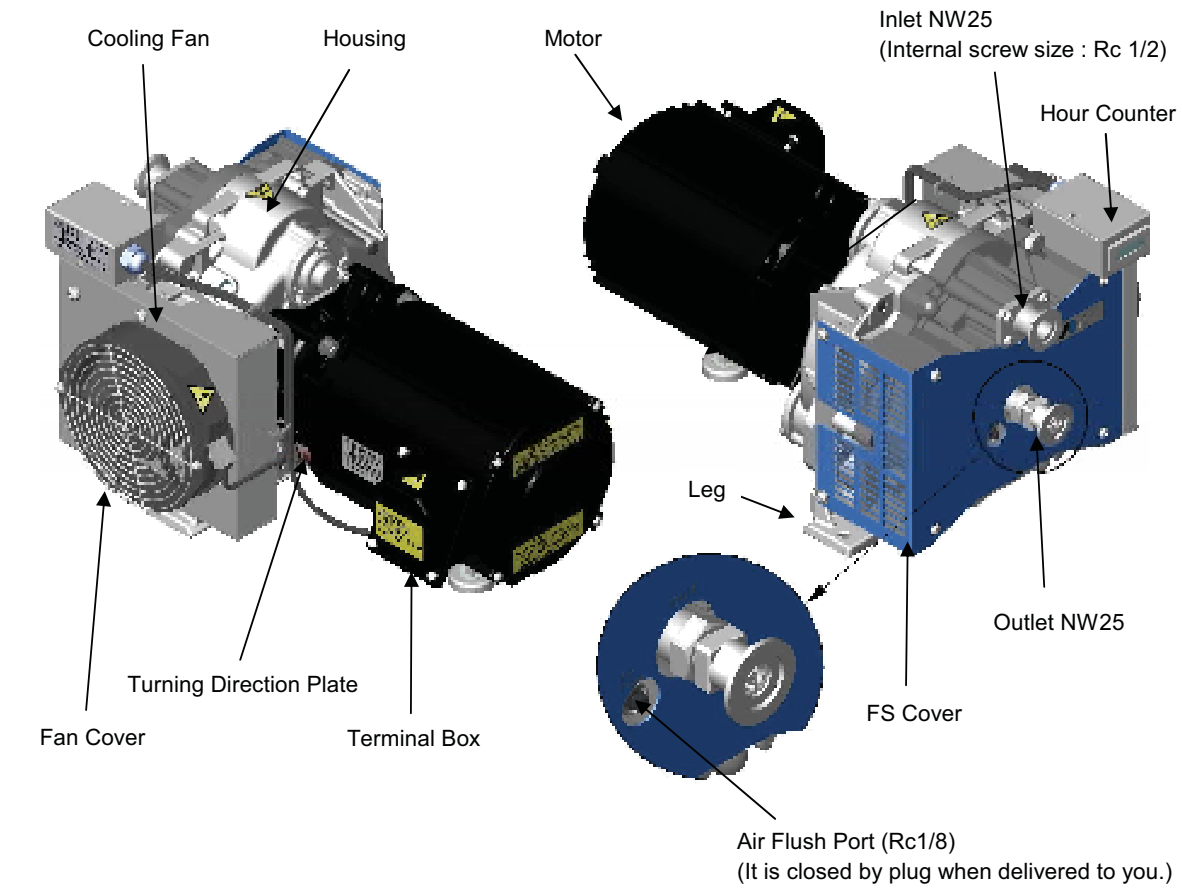


Be careful about hoisting



2. Name and structure of each section





3. Installation

<div> WARNING</div>			
Danger of electric shock Install in an area which is not exposed to moisture such as rain or steam. If moisture comes into and tact with the electric source connection, it can cause fire or bodily injury due to short-circuit or electric shock.	<div> Avoid moisture</div>		
Danger of explosion, fire and accident Install in an area free from explosive, flammable or corrosive substances. If not, it can cause explosion, fire or accident.	<div> Install at a safe site</div>		
<div> CAUTION</div>			
Danger of overheating Operate at ambient temperature of 5°C~40°C. Operating at a temperature range other than that designated can cause accident, failure or bodily injury such as burns due to overheating.	<div> Use at designated temperature</div>		
Danger of overheating Install in a well-ventilated area (refer to below chart). Poor ventilation can disrupt cooling and cause accident, failure or bodily injury such as burns since this vacuum pump is an air-cooled type. Do not block inlet and outlet of cooling air with obstruction. (Separate inlet side of the cooling air from obstruction or wall by 10cm or more, and separate outlet side by 30cm or more)	<div> Pay attention to ventilation</div>		
<table><tr><td>Necessary ventilated air volume</td></tr><tr><td>Over 8m³/min</td></tr></table>	Necessary ventilated air volume	Over 8m³/min	
Necessary ventilated air volume			
Over 8m³/min			
Danger of dust Be sure site is free from dust. Sucking in of dust can cause failure.	<div> Avoid dust</div>		
Danger of movement Be sure to fix vacuum pump on solid and level floor (less than 5° inclination). Uneven fix can cause failure and movement of vacuum pump. Fix pump base with 2 bolts using hole of φ22mm at leg section.	<div> Install on a solid, level floor</div>		
Danger of overheating Install where equipment is not exposed to direct sunlight. Vacuum pump exposed to direct sunlight can overheat, resulting in failure.	<div> Avoid direct sunlight</div>		

Installation space

For the maintenance, keep the space as below drawing around vacuum pump.

Keep over 30cm space front of vacuum pump if the vacuum pump can not be moved because of wiring and connecting.

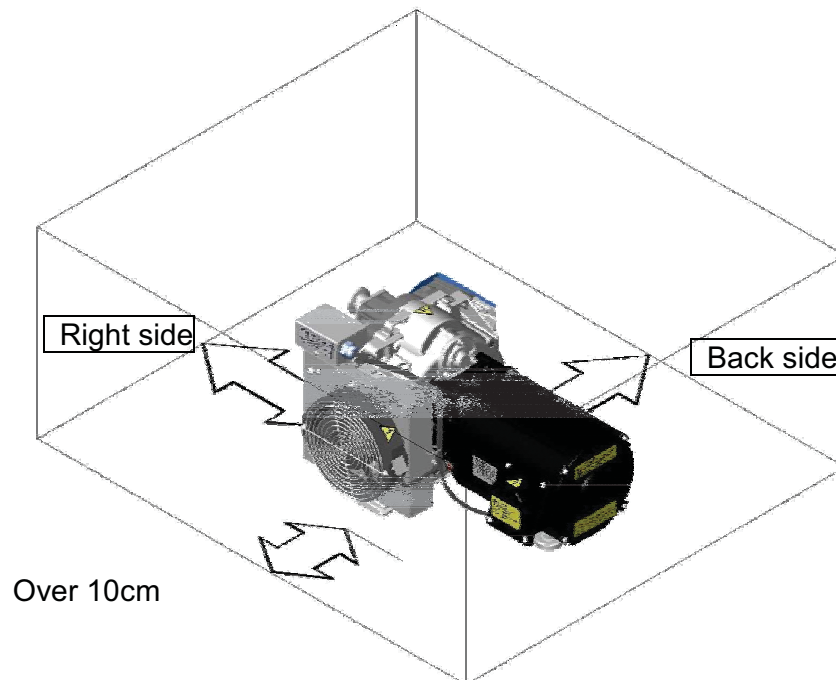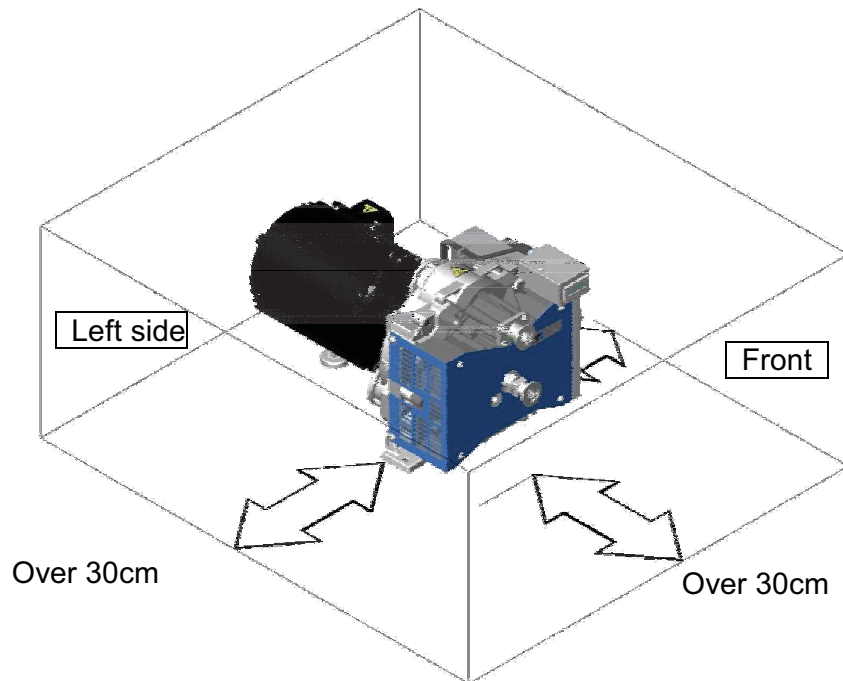












Important

When building vacuum pump into vacuum system, pay attention to space for maintenance, ambient temperature and piping. Be sure to fix vacuum pump on solid and level floor.

If you have any questions, contact the dealer who sold it to you or us.

3.1 Wiring

 WARNING	
Danger of short-circuit and electric shock Ask a qualified electrician to perform electrical wiring. If not, short-circuit or electric shock can cause fire or bodily injury.	 Ask qualified electrician
Danger of electric shock and entanglement Be sure to turn off electric source on building site before wiring. If not, it can cause electric shock or bodily injury due to turning objects.	 Turn off electric source
Danger of accident, fire and failure Be sure to install protective device to protect circuitry. We recommend overcurrent protective device (rated 15A) to protect branch circuit. If equipment is not stopped in an emergency, it can cause accident, fire or failure.	 Install overcurrent protective device
Danger of accident, fire or failure Be sure to install an electric source emergency stop switch (or protective device that can urgently stop). If equipment is not stopped in an emergency, it can cause accident, fire or failure.	 Install emergency stop switch
Danger of fire and electric shock Install short circuit protective device. If not, it can cause bodily injury due to fire or electric shock.	 Install short circuit protective device
Danger of electric fire and electric shock (refer to chart 1 on page 15) Install motor protective circuit breaker to protect motor. If not, bodily injury due to electric fire or electric shock can result. If you have any questions about the selection of protective devices, contact either the dealer who sold it to you or us.	 Install motor protective circuit breaker to protect motor
Danger of short-circuit and electric shock We recommend an electric source cable of more than 2mm² (more than rated 15A) cross section area for electric source cable and ground cable. Be careful to avoid voltage drop considering local situation. If not, it can cause a short-circuit fire and may result in bodily injury from electric shock.	 Be careful about wiring
Danger of short-circuit and electric shock Fit firmly proper round type crimp-style terminal to electric source cable using crimp tool and connect to motor terminal section. If not, it can cause short-circuit fire or bodily injury from electric shock due to looseness or disconnection.	 Use crimp-style terminal
Danger of short-circuit and electric shock Be sure to fit cable gland to hole of φ 22mm at motor terminal box. If not, it can cause short-circuit fire or bodily injury from electric shock.	 Protect cable from being pulled
Danger of electric shock Connect ground cable to ground terminal in motor terminal box. If not, it can cause bodily injury from electric shock.	 Be sure to ground

CSA Requirement

Motor not protected. External overheat protection in accordance with CE code, part 1, must be provided.

Min. circuit ampacity of conductor is 15A

Max. branch circuit breaker is 15A

When you used this pump in Europe.

This vacuum pump must be equipped with a main disconnect device in accordance with requirements of EN60204-1, clause 5.3.2. It is recommended to use a circuit breaker as main breaker which is suitable for isolation according to EN60947-2 and is equipped with an operating handle which is lockable in OFF position and complies with the other requirements of EN60204-1, clause 5.3.

**CAUTION****Motor burnout**

Before doing any wiring, check electric source and voltage.

This pump is multi voltage type of AC200V/AC400V.

Voltage can be changed at terminal block.

This pump is wired to 200V when delivered to you.

Check your electric source, voltage, and wire correctly to terminal block.

Improper wiring and incorrect voltage can cause motor burnout.



Check voltage


Danger of problem recurrence and failure

If protective device activates, be sure to turn off electric source and inspect causes to solve the problem. Do not operate until problem is solved.

Operation while problem is left unsolved can cause problem recurrence and failure.



Inspect cause of problem

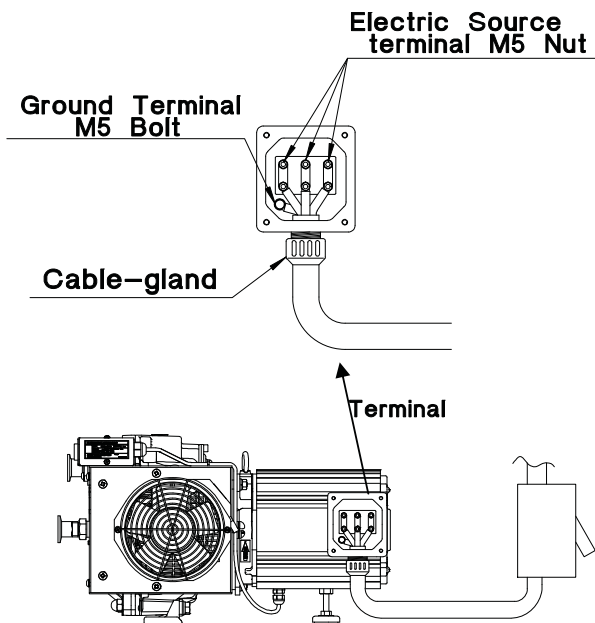

! Activate the emergency stop by electric source switch or breaker.

! Avoid motor burnout by breaker (chart 1).

! Use cable of more than 2mm² (more than rated 15A) cross section area for electric source cable and ground cable.

! Use round type terminal. (R2-5)



! Fit cable-gland.

⏏ Connect ground cord to ground terminal.

Chart—1


Voltage V	Frequency Hz	Recommended breaker (or protective device) capacity A
200	50	4.1
200	60	4.9
208	60	4.7
230	60	4.5
380	50	2.2
400	50	2.2
415	50	2.2
460	60	2.3

How to wire





- ① Remove 4pcs. of M5 bolt at motor terminal box and remove protection cover.
※Be careful not to lose removed M5 bolts and washer.
- ② Wiring diagram is shown inside protection cover.
You can change to a 200V or 400V connection by changing terminal plate (3pcs.).
※It is wired to 200V when delivered to you.
- ③ If you want to change to a 400V connection, remove M4 nut of electric source terminal and change terminal plate as illustrated below.
- ④ Connect electric cable to terminal by using cable-gland at $\phi 22\text{mm}$ hole of motor terminal box.
- ⑤ Insert electric source cord through cable gland on the bottom side of terminal box.
- ⑥ Connect each phase L1-L2-L3 to each electric source terminal respectively in accordance with the below wiring diagram.

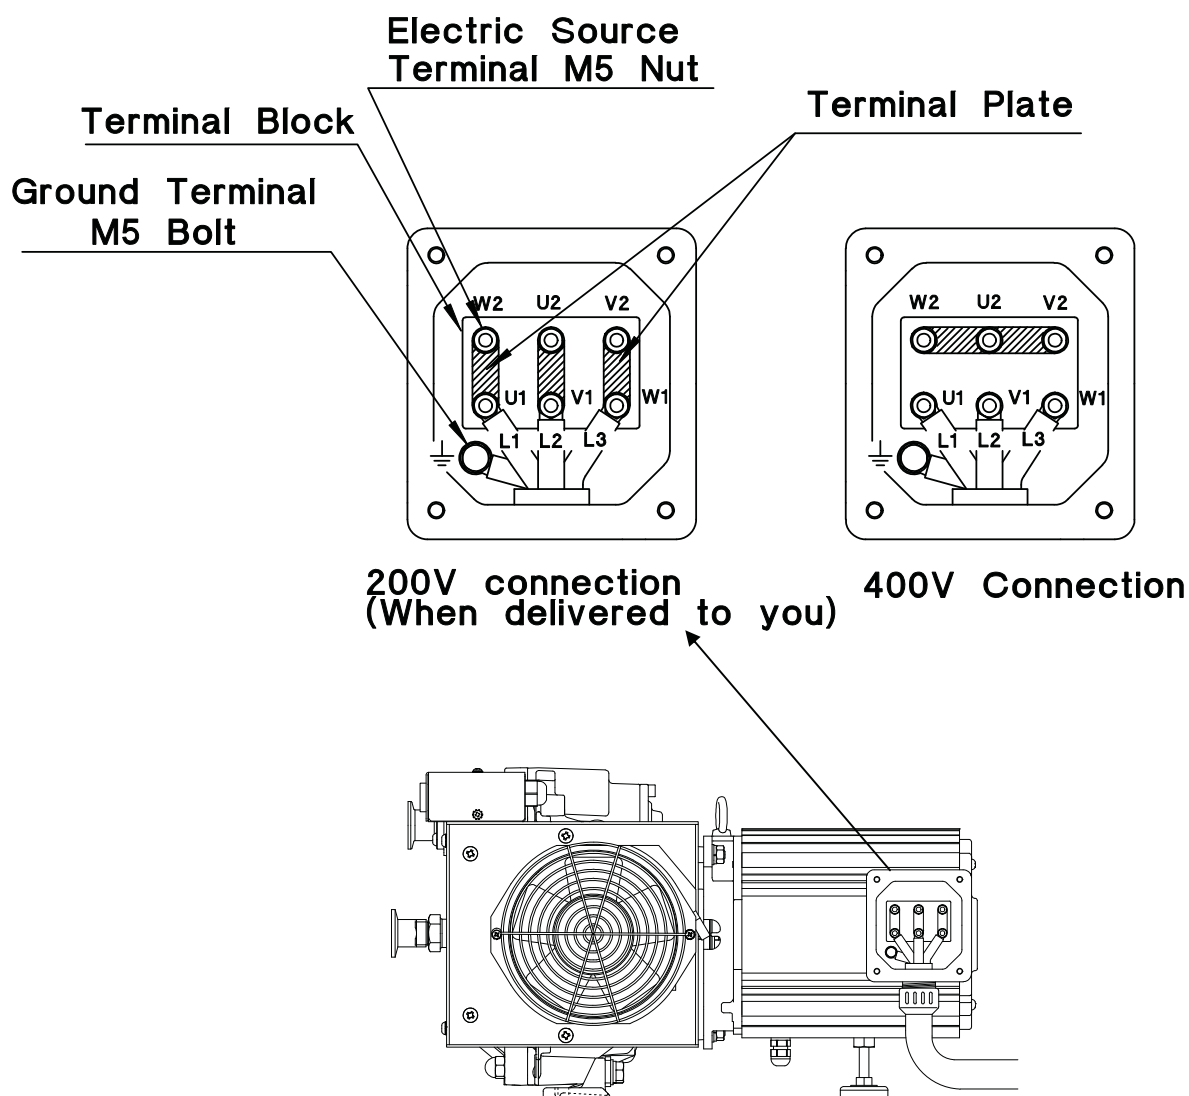• Power source Restriction

For using 460V connection, only to supply system derived by star connection of power source.




3.2 Test operation


<div style="text-align: center;">  CAUTION </div>	
Danger of cap to fly Remove cap from inlet and outlet. Operation with cap being fitted can cause cap to fly by intake or exhaust impetus, resulting in accident, failure, or bodily injury from contact with flying objects.	 Remove cap
Danger of foreign matter entering inlet When checking turning direction, be careful not to enter foreign matter into an inlet. Foreign matter entering inlet can cause failure.	 Prevent foreign matter from entering
Danger of overheating Check that cooling fan is turning and cooling air is flowing. If not, it can cause accident, failure or bodily injury such as burns due to overheating.	 Check fan

Test operation

- ① Open inlet and outlet
 Remove caps (2 places)
 from inlet and outlet of
 vacuum pump.

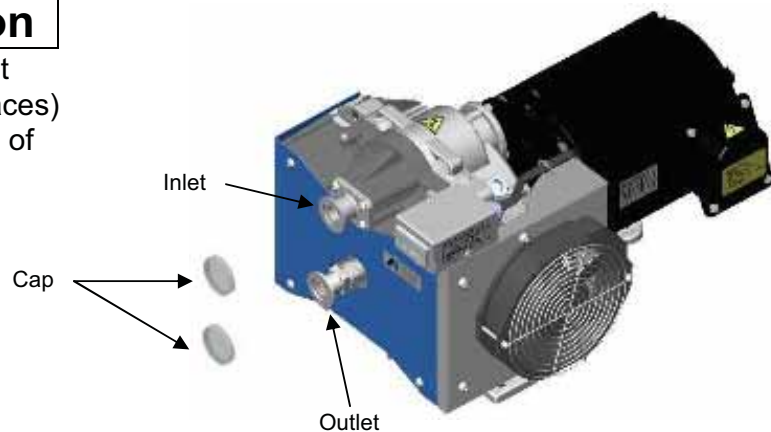


- ② Check turning direction
 Open inlet, turn on electrical
 source to start operating
 vacuum pump, and Check
 that air comes out from outlet.
 (Vacuum pump turns
 counter-clockwise when
 viewed from motor side.)
 If air does not come out from
 outlet, vacuum pump may turn
 in reverse.

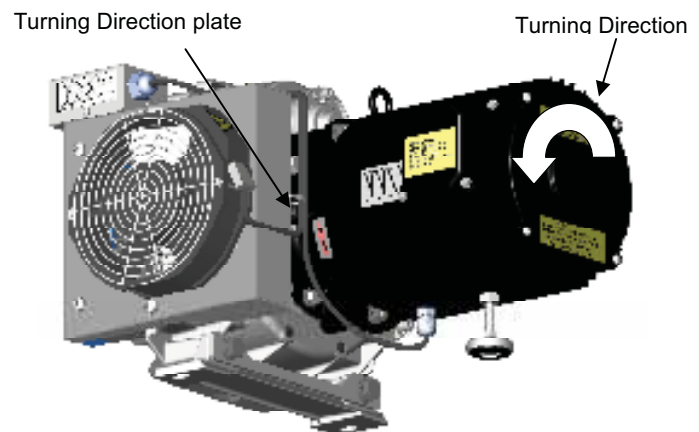

In that case, stop vacuum pump,
 turn off main electrical source and change 2 out of 3 wires of electric source
 connection and change turning direction to correct one. If you fit pump to vacuum
 system and control operation of vacuum pump by remote control, **first check
 pump itself for turning direction** and then fit it to vacuum system.

③Check cooling air

Check that cooling fan is turning and cooling air is flowing in that direction as indicated.

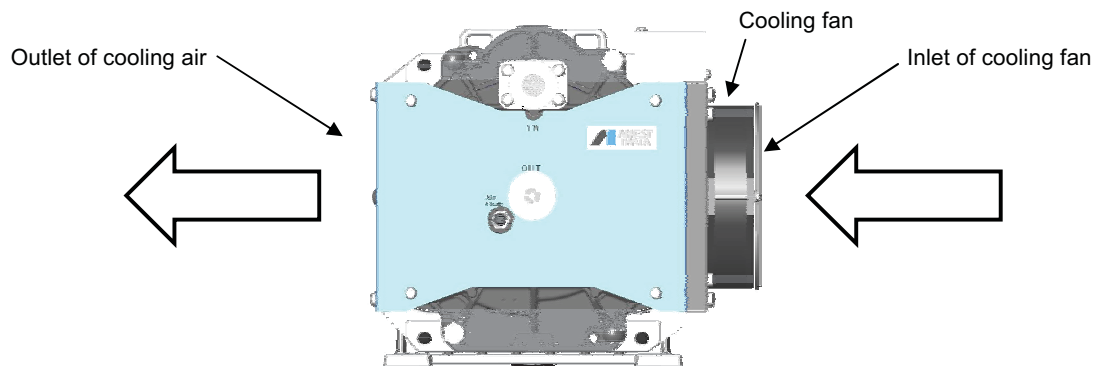

Important




Vacuum pump turns counter-clockwise when viewed from motor side.

Check that air comes out from outlet.

If air does not come out from outlet, stop vacuum pump, turn off electrical source and change 2 out of 3 wires of electrical source connection.

3.3 Connection to vacuum system (chamber)

Inlet is NW25 (Internal screw size : Rc 1/2) and outlet is NW25.

 CAUTION	
Danger of exhaust disruption When connecting exhaust piping to vacuum pump and when combining piping with another vacuum pump, pay attention to piping size and length so that it does not cause exhaust resistance. Exhaust resistance can disrupt air flow, resulting in failure and over-current.	 Pay attention to exhaust resistance
Danger of foreign matter entering inlet If you use the seal material or the adhesive, etc. to prevent Leak of the joint when piping with internal screw of inlet, be careful not to enter the seal material or the adhesive into an inlet. The seal material or the adhesive entering inlet can cause failure.	 Prevent foreign matter from entering

Important

Use **isolation valve** between vacuum system and inlet.

Isolation valve is necessary to prevent the drawback of debris attached to the inside of vacuum pump into the vacuum chamber during start-up and shut-down. (We recommend the use of leak valve also). We recommend the use of an **automatic valve** as the isolation valve which closes during power failure in order to prevent the drawback of debris inside pump into the vacuum chamber during power failure.

Use the clean connecting pipe between vacuum chamber and vacuum pump.

We recommend the use of a flexible tube between inlet of vacuum pump and vacuum chamber so that vibration of pump does not transmit to vacuum chamber.


When connecting exhaust piping to outlet of vacuum pump, refer to the following size and length.

- max. 2m direct pipe length for exhaust pipe size Rc1/2 (inner dia.16)

But if pipe length becomes longer, use a larger size exhaust pipe.

Make sure that exhaust piping is not clogged during pump operation.

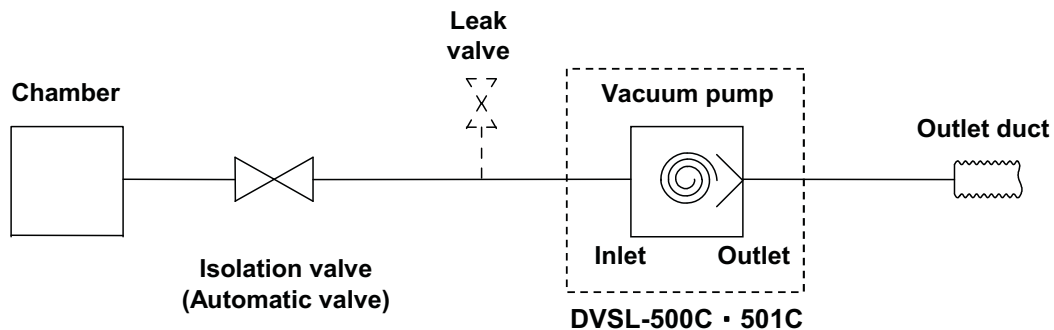


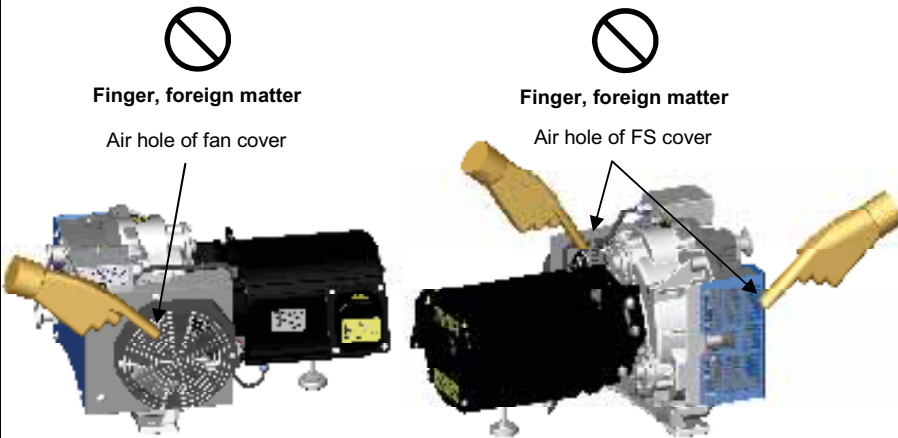



Make sure that pressure at outlet does not exceed atmospheric pressure at any conditions.



4. Operation








Be sure to use the procedure below to start up or shut down the pump.

- When you do not use air-flush device,
proceed 4.1 Standard operation [page 22].
- When you use air-flush device,
proceed 4.2 Air-flush operation [page 23].

<div style="text-align: center;">  WARNING </div>	
<p>Danger of explosion and ignition</p> <p>Do not evacuate gas which is hazardous to humans or explosive, flammable, or corrosive. Do not evacuate with substances containing chemicals, solvents, and powders.</p> <p>If done, it can cause failure or bodily injury by gas, explosion or ignition.</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <div style="display: flex; align-items: center;">  <div style="margin-left: 5px;">Do not pump</div> </div> <div style="margin-top: 10px;"> <ul style="list-style-type: none"> · Toxic gas · Explosive gas · Flammable gas · Corrosive gas · Chemicals · Solvent · Powder <div style="display: flex; justify-content: flex-end; margin-top: 5px;"> <ul style="list-style-type: none"> · Water · Liquid </div> </div> </div> <p>※When evacuating vapor, operate in accordance with 4.2 [page 23].</p> <p>※DVSL-501C of fluorine rubber seal specification can be used for exhaust some solvents.</p> <p>However It is not guaranteed fluorine rubber can be used for all solvents.</p>	 Never evacuate hazardous gas
<p>Danger of entanglement and foreign matter dispersal</p> <p>Never put finger or foreign matter into air holes of fan cover, FS cover.</p> <p>If done, it can cause bodily injury from entanglement with turning section, or foreign matter dispersal.</p> <div style="text-align: center; margin: 10px 0;">  </div>	 Avoid foreign matter
<p>Danger of electric shock and entanglement</p> <p>Do not remove or alter safeguards or insulation parts.</p> <p>If done, it can cause bodily injury from electric shock or turning section and it can cause deteriorated performance and operating lifetime, and invalidate guarantee.</p>	 Never alter
<p>Danger of failure and bodily injury</p> <p>Change air-flush port only after vacuum pump is stopped.</p> <p>If you change it during vacuum pump operation, it can cause vacuum pump failure and bodily injury.</p>	 Change after vacuum pump is stopped



CAUTION

Danger of exhaust disruption Remove blank flange from inlet and outlet. Operation with blank flange being fitted can disrupt exhaust or cause blank flange to fly by exhaust impetus, resulting in accident, failure, or bodily injury from contact with flying objects.	 Remove blank flange
Danger of vacuum break and pollution Be sure to close isolation valve between vacuum pump and vacuum system (chamber) during start-up and stop. Start-up or stop with isolation valve in the open position can draw back gas and debris attached to inside of vacuum pump to vacuum chamber due to pressure differential, resulting in vacuum break and pollution on vacuum chamber side.	 Start or stop after closing isolation valve
Danger of abnormal sound and failure Open inlet to atmosphere for about 5 seconds before restarting vacuum pump. If not, it can unbalance temperature inside vacuum pump, resulting in failure.	 Open air inlet
Danger of exceeding permissible temperature of intake gas If intake gas temperature is over 50°C, be sure to install a chiller or trap between vacuum pump and vacuum chamber so that gas intake temperature of vacuum pump keeps below 50°C. If not, vacuum pump temperature can increase, resulting in failure.	 Beware temperature of intake gas
Danger of remaining moisture When evacuating moisture, be sure to open air-flush port (air-flush operation). If you evacuate vapor while air-flush port is closed, condensed water will remain inside vacuum pump and cause failure.	 Operate while opening air-flush port
Danger of insufficient vapor exhaust After evacuating vapor, do air-flush operation for at least one hour. If you close air-flush port or stop vacuum pump soon after evacuating vapor, condensed moisture will remain inside vacuum pump, which will cause failure.	 Caution after exhausting vapor
Danger of exceeding permissible intake gas volume When sending N₂ gas or dry air into air-flush port, pressure should be the same as atmospheric pressure and flow rate should be less than 10NL/min. If not, it can increase pressure inside vacuum pump, resulting in failure.	 Beware of intake gas volume

Important

If it takes time to reach ultimate pressure of pump during initial operation (also operation after pump has not been used for a long time),

Close inlet, and continue operation for 6~8 hours while opening inlet for 3~5 seconds to atmosphere 2~3 times per hour. During pump stoppage, moisture might have entered inside of pump and deteriorated performance to reach ultimate pressure.

If pump has evacuated liquid such as water or high humid air (over 60%RH),

Moisture can deposit inside pump and cause pump failure. In that case, close isolation valve, and open inlet to atmosphere for 3~5 seconds several times and exhaust moisture inside pump to outside.

If pump has continued operation around ultimate pressure or continuously evacuated high humid gas

Moisture can be condensed and remains inside pump, causing insufficient ultimate pressure and failure.

In that case, do air-flush operation in accordance with 4.2 [page 23].

4.1 Standard operation

4.1.1 Start-up

- ① Check that caps of inlet and outlet is removed.
- ② Close isolation valve in order to prevent the drawback of debris attached to the inside of vacuum pump into vacuum chamber due to pressure differential, resulting in vacuum break and pollution.
(Open leak valve if you use leak valve).
- ③ Turn on vacuum pump.
- ④ Check start-up of vacuum pump and open isolation valve (close leak valve soon after start-up if you use leak valve) and evacuate vacuum chamber.

Important

When continuously operating pump at around ultimate pressure,

It can cause foreign matter or moisture to deposit inside pump, resulting in failure.

In that case, do air-flush operation or close isolation valve and open inlet to atmosphere for 3~5 seconds, 3~5 times daily.

Be careful not to damage air-flush port (especially air-muffler section).

If not, it can cause failure.

When doing air-flush operation,

Noise level will increase (by 5dB).

Install pump in an area which is not exposed to debris such as iron powder, stone powder, polish powder or wood dust.

Debris can clog air-muffler, undercutting air-flush effect.

4.1.2 Shut-down

- ① Be sure to close isolation valve in order to prevent the drawback of debris attached to inside of vacuum pump into vacuum chamber during operation due to pressure differential (open leak valve if you use leak valve).
- ② Turn off vacuum pump.
- ③ Check shut-down of vacuum pump.

Important

Be sure to close isolation valve between vacuum pump and vacuum chamber during pump shut-down.

If vacuum pump stops during air-flush operation, atmospheric air is drawn back from air-flush port to inside of vacuum pump, and vacuum on chamber side cannot be maintained. Be sure to close isolation valve between vacuum pump and vacuum chamber to prevent the drawback of debris from vacuum pump into vacuum chamber before stopping vacuum pump.

When returning air-flush operation to standard operation, operate as per 4.2.3[page 24].

4.2 Air-flush operation

This pump is equipped with air-flush port. Before evacuating vapor, read precautions below completely and be sure to understand the contents.

Purpose of air-flush

Evacuating moisture or humid gas by vacuum pump can cause condensed water to remain in pump. This remaining water can cause failure of ultimate pressure or pump. Air-flush operation is necessary to exhaust the remaining water inside. Air-flush operation does not only exhaust moisture but also restores ultimate pressure.

※Vapor disposal volume is max. 250g/day when doing air-flush operation (ambient temperature 25°C, humidity 60%RH).

Important

Maintenance interval of this pump is based on clean gas applications The standard differs when evacuating vapor.

You must shorten maintenance interval (5.2[page 27]) when evacuating vapor since vapor temperature, disposal volume, disposal frequency and substances in vapor have an influence on pump operation. When evacuating vapor, pay attention to all WARNING, CAUTION and Important notes (4 [page 20~21]).


4.2.1 Preparation

Before starting air-flush operation, first stop vacuum pump and proceed in accordance with the following procedure. Never try to do air-flush operation during operation.

Fit air-muffler

- ① Stop vacuum pump.
- ② Remove plug from air-flush port with a spanner (nominal dia. 7mm).
- ③ Lightly fit the attached air-muffler to air-flush port.

※Store the removed plug and do not misplace it.

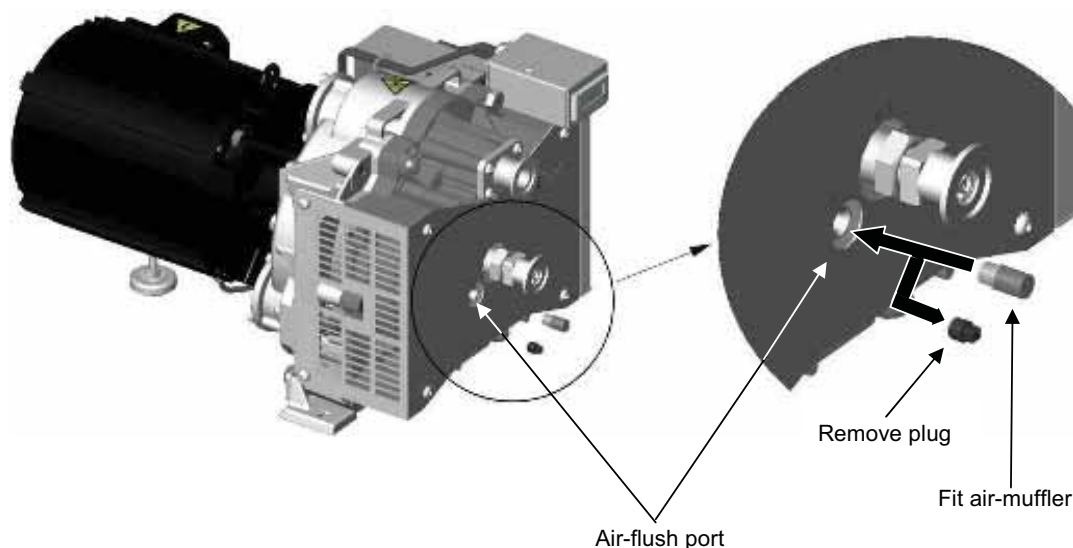

4.2.2 Start-up and shut-down

- ① Start vacuum pump according to 4.1.1 Operation [page 22].
- ② Stop vacuum pump according to 4.1.2 Shut-down[page 22].

Important

Continuous evacuating of humid gas

When evacuating vacuum chamber while humidity in chamber is high, moisture volume drawn into pump differs according to temperature and pressure in chamber.

When pumping vacuum chamber containing humid gas, be sure to open air-flush port and operate pump (air-flush operation).

Be careful not to damage air-flush port (especially air-muffler section).

Damage to air-flush port can cause failure.

When doing air-flush operation

Noise level will increase (by 5dB).

Install pump in an area which is not exposed to debris such as iron powder, stone powder, polish powder or wood dust.

Debris can clog air-muffler, undercutting air-flush effect.

Be sure to close isolation valve between vacuum pump and vacuum chamber during pump shut-down.

If vacuum pump stops during air-flush operation, atmospheric air is drawn back from air-flush port to inside of vacuum pump, and vacuum on chamber side cannot be maintained. Be sure to close isolation valve between vacuum pump and vacuum chamber to prevent the drawback of debris from vacuum pump into vacuum chamber before stopping vacuum pump.


When operating with air-flush OFF (closed), operate as per 4.2.3[page 24].

4.2.3 When returning to standard operation

Before starting air-flush operation, first stop vacuum pump and proceed in accordance with the following procedure. Never perform this procedure during operation.

Remove air-muffler

- ① Stop vacuum pump.
 - ② Remove air-muffler from air-flush port.
 - ③ Lightly fit plug to air-flush port with a spanner (nominal dia. 7mm).
- ※When restarting air-flush operation, refer to 4.2.1~4.2.2[page 23 ~ 24] and prepare and start.
- ※Store removed air-muffler and pay attention not to misplace it.

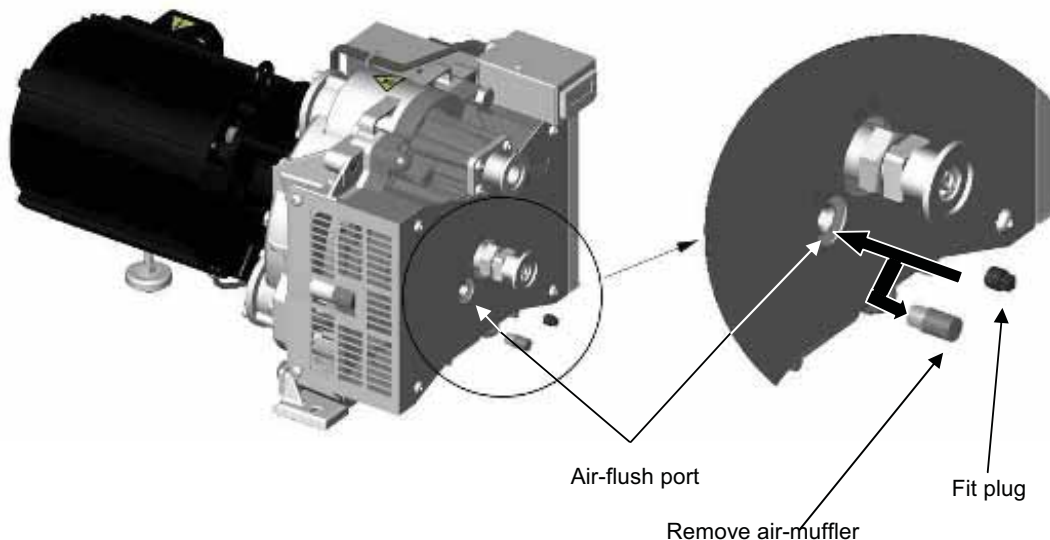


4.3 Water separator & silencer [Option]






When always evacuating water vapor, install water separator & silencer, which is prepared as an option.

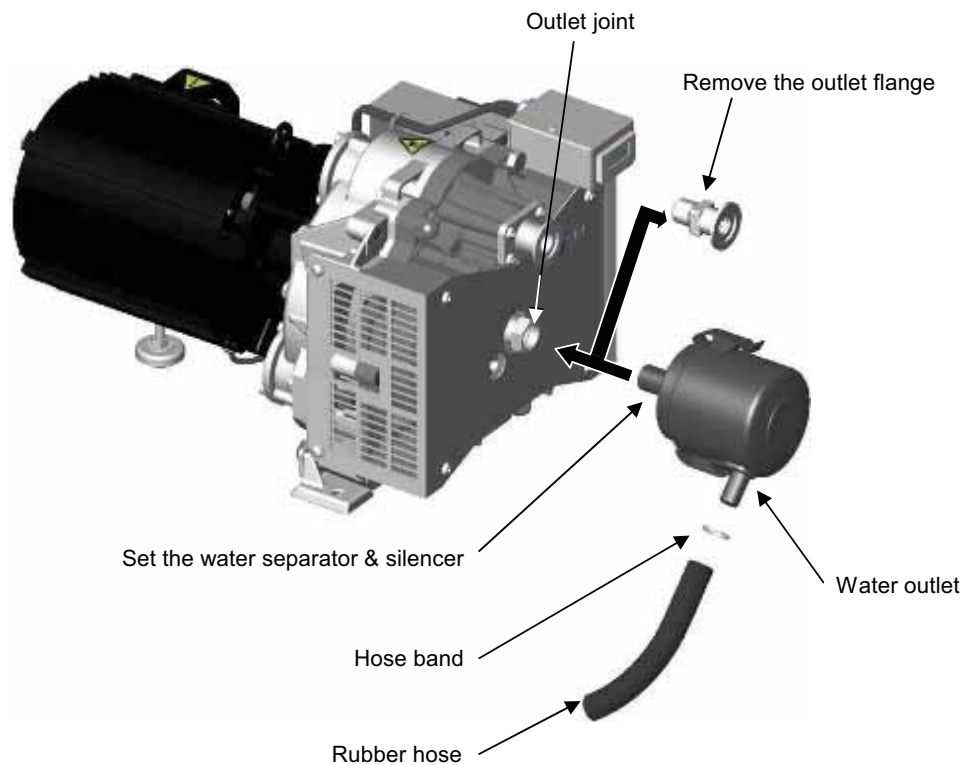How to fit water separator & silencer

- ① Remove outlet.
- ② Screw the water separator & silencer into the outlet joint.
- ③ Set the water outlet of water separator & silencer downwards. Put the rubber hose into water outlet and tighten the connection by hose band.
- ④ Be sure to open air-flush port and operate pump.



5. Maintenance and inspection

 WARNING	
Danger of failure and bodily injury Conduct periodical maintenance and inspection. If not, it can cause insufficient performance, failure of vacuum pump, and bodily injury.	 Conduct periodical maintenance and inspection
Danger of burns Conduct maintenance and inspection only after vacuum pump becomes cool enough. Maintenance and inspection soon after vacuum pump stops can cause burn injury.	 Be careful about high temperature
Danger of electric shock Be sure to conduct maintenance and inspection after you turn off electric source. If not, it can cause bodily injury from electric shock or turning object.	 Turn off electric source
Danger of accident, failure and shorter operating lifetime Ask specialist to perform repairs. Defective repairs can cause accident, failure or shorter operating lifetime.	 Ask specialist to perform repairs

5.1 Daily maintenance and inspection

Conduct the following daily maintenance and inspection.

Items	Contents	Measures
Vacuum pump itself	Abnormal sound	Ask specialist to repair.
	Abnormal vibration	Ask specialist to repair.
	Abnormal temperature	Ask specialist to repair.
	Cooling fins are dirty or clogged	Blowing air, cleaning
Cooling fan Fan cover	Smooth turning	Ask specialist to repair.
	Dirty, clogged, damaged	Blowing air, cleaning, ask specialist to repair.
Air-muffler	Dirty, clogged	Replace
Water separator & silencer	Dirty, clogged	Blowing air, cleaning
Electric source cable	Deteriorated	Replace

5.2 Maintenance

When maintenance interval has elapsed, be sure to contact our distributor who sold it to you. This vacuum pump requires maintenance conducted only by our authorized specialist.

Never try to disassemble, reassemble or alter on user's side. We are not responsible for any accidents caused by disassembly, reassembly or alteration which was done by the user or non-specialist.

Where to inspect	Maintenance interval			
	Yearly or 8,000 h	Biennially or 16,000 h	triennially or 24,000 h	4th years or 32,000 h
Angular contact Ball bearing set	-	Grease / Δ	-	\bigcirc
Pin crank set	Grease / Δ	Grease / Δ	Grease / Δ	\bigcirc
Duplex arrangement angular ball bearing set [Housing]	-	Grease / Δ	-	\bigcirc
Roller bearing set [OS]	Grease / Δ	Grease / Δ	Grease / Δ	\bigcirc
Spider	\bigcirc	\bigcirc	\bigcirc	\bigcirc
P-seal [FS set]	\bigcirc	\bigcirc	\bigcirc	\bigcirc
Tip seal FS	\bigcirc	\bigcirc	\bigcirc	\bigcirc
Tip seal OS	\bigcirc	\bigcirc	\bigcirc	\bigcirc
O-ring [Inlet flange]	\bigcirc	\bigcirc	\bigcirc	\bigcirc
Air-flush kit	\bigcirc	\bigcirc	\bigcirc	\bigcirc

\bigcirc . . . Replace

Δ . . . Replace if something goes wrong.

Note 1 : Be sure to use designated DVSL exclusive grease.

Note 2 : You must shorten maintenance standard when pumping vapor since vapor temperature, disposal volume, disposal frequency and substances in vapor have influence on pump operation.

Note 3 : The maintenance interval should be earlier one in either the period or running hours.

Note 2 : When you want further operation after either the 4th year or 32,000 operating hours, please contact our distributor who sold it to you.

Important

Causes of failure

Shorten maintenance interval if conditions of installation or operation are unfavorable.

In particular, ambient temperature has a great influence on failure. Maintenance interval is based on an ambient temperature 5~40°C and a yearly average ambient temperature 25°C.

Shorten the maintenance interval if temperature exceeds the foregoing. If not, it can cause failure.

Maintenance interval is not a guarantee period.

Exceeding maintenance interval

Operation exceeding maintenance interval increases risk of failure and accidents.

When maintenance interval has elapsed, be sure to contact either the distributor who sold it to you or us.

6. Problems and remedies

If something goes wrong, refer to the following chart and remedy problems.

If you cannot solve your problems, please contact either our distributor who sold it to you or us.

Problems	Causes	Remedies
Motor does not rotate.	Protective device (or breaker) activates.	※Inspect and repair.
	Electric source cable is loose or cut.	Check connection. Repair or replace.
	Voltage drops.	Check size and length of cable.
	Motor malfunctions.	※Inspect and repair.
	Pump malfunctions. Foreign matter enters.	※Inspect and repair.
	Motor protection gear activates.	Air outlet is clogged. ※Inspect and repair.
Motor stops soon.	Protective device (or breaker) activates.	※Inspect and repair.
	Voltage drops.	Check size and length of cable.
	Motor malfunctions.	※Inspect and repair.
	Pump malfunctions. Foreign matter enters.	※Inspect and repair.
	Improper exhaust piping.	Check exhaust piping diameter and length. Air outlet is clogged.
	Motor protection gear activates.	Air outlet is clogged. ※Inspect and repair.
Ultimate pressure is insufficient.	Air leaks from piping. O-ring is damaged.	Check tightness of piping. Replace.
	Moisture and solvent are drawn.	Open inlet to atmosphere and operate for a few minutes and then close inlet and operate for about 24 hours. Do air-flush operation. Install trap and filter.
	Number of motor revolutions drops.	Check wiring and voltage. ※Inspect and repair.
	Pump malfunctions.	※Inspect and repair.
Abnormal sound, abnormal vibration	Connection becomes loose.	Tighten connection. ※Inspect and repair.
	The fix is not level.	Fix vacuum pump on solid and level floor (less than 5° inclination). ※Inspect and repair.
	Foreign matter enters pump.	※Inspect and repair.
	Motor malfunctions.	※Inspect and repair.
	Pump malfunctions.	※Inspect and repair.

※ Contact our distributor who sold it to you.

7. Disposal

When a vacuum pump is disposed, please comply with local law and/or regulations such as the Waste Disposal Law.

8. Specifications

8.1 Specifications

Model			DVSL-500C				DVSL-501C		
Back-up material			Silicon rubber				Fluorine rubber		
Displacement L/min		50Hz	430						
		60Hz	520						
Ultimate pressure Pa			≤30				≤100		
Max. inlet pressure			Atmospheric pressure						
Ambient operating temperature			5℃~40℃						
Motor	Type		3-phase squirrel cage induction motor Totally-enclosed , 2-pole B class insulation, Multiplex voltage, IP44						
	Output	kW	0.9 / 1.1 (50Hz / 60Hz)						
	Voltage	V	200	208	230	380	400	415	460
	Rated current A	50Hz	3.6	—	—	1.9	1.9	1.8	—
		60Hz	4.2	4.1	3.9	—		—	1.95
	Revolution min ⁻¹ {rpm}	50Hz	2913	—	—	2929	2934	2939	—
		60Hz	3472	3475	3503	—		—	3527
Noise level 1m dB(A) (With air-flush ON)			≤64 (≤69)						
Inlet connection			NW25 [Internal screw size : Rc1/2]						
Outlet connection			NW25 [With exhaust valve]						
Dimensions mm W×L×H			317×491×280						
Mass kg			36						
Cooling system			Air-cooled, Cooling fan system						
Others			With hour counter and air-flush						

Note 1 : The model is classified by the material of back-up material for P-seal.

(Refer to page 10 [Structure of vacuum pump])

Note 2 : It is not guaranteed fluorine rubber can be used for all solvents.

Note 3 : Pumping speed and ultimate pressure remain the same during air-flush operation and standard operation.

Note 4 : Noise level is measured at ultimate pressure in an anechoic room.

Note 5 : Vapor handling is less than 250g/day (25°C humidity, 60%RH) during air-flush operation.

Air-flush volume is 10L/min. Air-flush is OFF (closed) when pump is delivered.


Note 6 : When always evacuating water vapor, install water separator & silencer, which is prepared as an option.

Note 7 : This pump is not equipped with motor protection gear. Be sure to fit protective device.

Note 8 : The specification might change without a previous notice for the quality improvement.


8.2 Dimensions

DVSL-500C · 501C

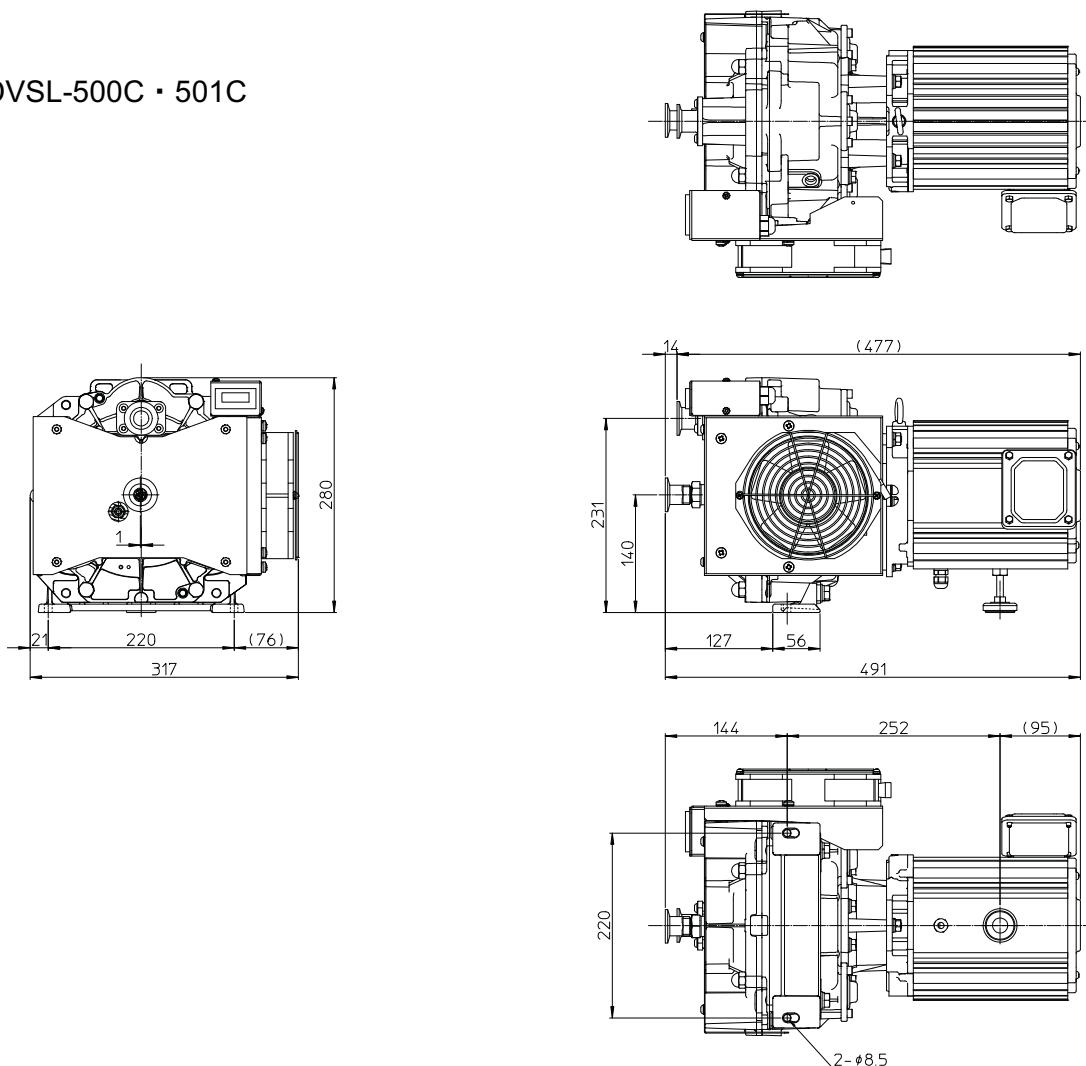

8.3 Performance data

DVSL-500C · 501C Pumping Speed

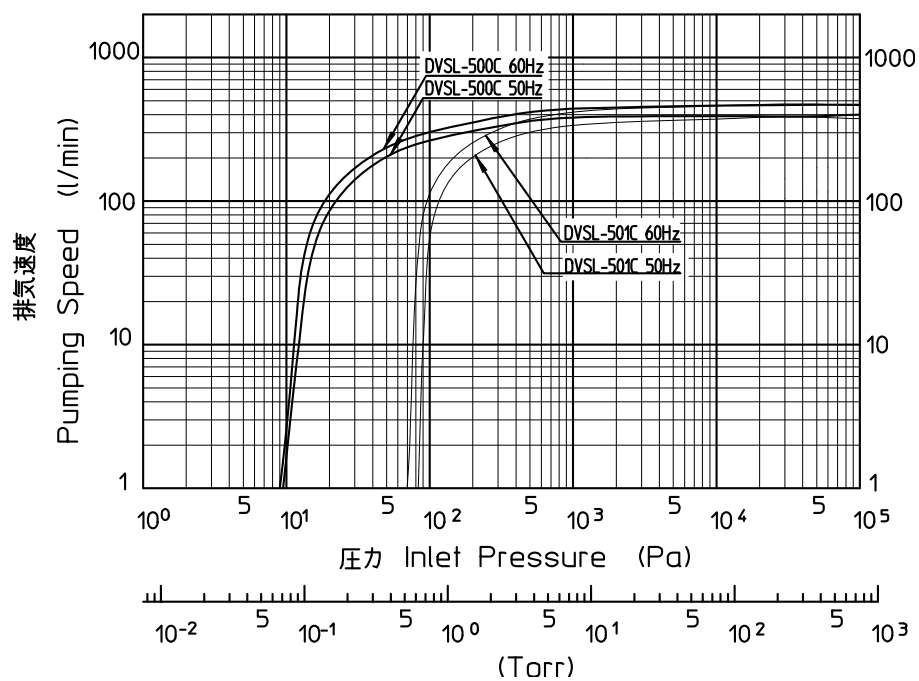



ANEST IWATA Corporation

Manufacturer

3176, Shinyoshida-cho, Kohoku-Ku,

Yokohama 223-8501, Japan

Tel +81 (0) 45-591-1112

Fax +81 (0) 45-591-1539

<http://www.anest-iwata.co.jp/>

ANEST IWATA Europe S.R.L.

European agent

Corso Vigevano, 56-10155 Torino ITALY

Tel +39-1-1248-0868

Fax +39-1-185-1944

<http://www.anest-iwataeu.com/>

Manual No.V077-01

Code No.08816721