Instruction Manual (B)

STP Series Turbomolecular Pumps STP-A2503/A3003 Series Pump Specific Information





The description of this product consists of the three-volumed Instruction Manuals. Read through each Instruction Manual before operation.

The separate volume contents of each description are as follows:

Instruction Manual (A)

STP pump generic Instruction Manual:

- Introduction
- Installation of the STP pump
- Installation of the STP control unit
- Operation
- Safety functions
- Maintenance and inspection
- Storage and disposal
- Service, Spares and accessories

Instruction Manual (B)

STP Pump specific information:

- Technical data
- How to Secure the STP pump
- Temperature Management System (TMS)

Instruction Manual (C)

STP control unit Instruction Manual:

- Introduction
- Technical data
- Installation
- Operation
- Serial communication protocol
- STP-Link (except for SCU-750)
- Maintenance
- Storage, transportation and disposal
- Service, spares, and accessories

Keep the manuals in an easily accessible location.



Declaration of Conformity

We, Manufacture: EU Representative:	Edwards Japan Limited 1078-1, Yoshihashi, Yachiyo-shi, Chiba, 276-8523, Japan Edwards Limited Manor Royal, Crawley, West Sussex, RH10 9LW, UK		
declare under our sole reated to assemble the technical	sponsibility, as manufacturer and person within the EU authorised file, that the product(s)		
Product Name: Model Number: Accessories Covered:	Turbomolecular pump STP-A2503/A3003 series TMS Unit, Lon Communication Unit		
to which this declaration normative document(s)	relates is in conformity with the following standard(s) or other		
EN1012-2:1996, A1:2009	Compressors and vacuum pumps - Safety requirements -		
EN61010-1:2001	Part 2: Vacuum pumps Safety requirements for electrical equipment for measurement, control and laboratory Use. General requirements		
EN61326-1:2006	Electrical equipment for measurement, control & laboratory Use. EMC requirements. General requirements		
EN61000-6-2:2005	(Immunity: Industrial locations, Emission: Class A) Electromagnetic compatibility (EMC). Generic standards.		
EN61000-6-4:2007	Immunity for industrial environments Electromagnetic compatibility (EMC). Generic standards.		
EN55011:2007, A2:2007	Emission standard for industrial environments Industrial, scientific and medical (ISM) radio-frequency equipment. Electromagnetic disturbance characteristics (Group1, Class A)		
and fulfils all the relevan	t provisions of		
2006/42/EC 2006/95/EC 2004/108/EC 2002/95/EC*	Machinery Directive Low Voltage Directive Electromagnetic Compatibility (EMC) Directive Restriction of Certain Hazardous Substances (RoHS) Directive		
cadmium - in homogeneous mat only to products sold on or after statement, which is based main	s than - 0.1wt% for hexavalent chromium, lead, mercury, PBB and PBDE; 0.01wt% for erials (subject to the exemptions allowed by the Directive). This information relates r the date of this certificate. Edwards has taken all reasonable steps to confirm this y on information from our suppliers. Whilst the RoHS Directive does not legally apply ecognize that component compliance is relevant to many of our customers.		
<u>Manufacture:</u> Yuji Kato, TMP Technical S	Yuji Kato <u>25th Dec. 2009, Yachiyo</u> enior Manager, Edwards Japan Limited Date and Place		
<u>EU representative:</u> Barrie D Brewster, Technic	al Manager, Edwards Limited <u>30th Dec. 2009, Burgess Hill</u> Date and Place		
This product has b	been manufactured under a quality system registered to ISO9001		

VI-DOC-43-006

This page intentionally blank.



CONTENTS

Section	Title	Page
1	TECHNICAL DATA	1
1.1 1.1.1 1.1.2 1.2 1.3 1.4	Applicable pump specifications STP pump specifications Condition for the water-cooling unit External appearance of the STP pump Label affixing positions Accessories	1 2 3 4 6 7
2	HOW TO SECURE THE STP PUMP	9
2.1 2.2 2.3	When securing the inlet port with bolts When securing the inlet port flange with claw clamps When installing the damper in the inlet port flange	10 13 14
3	TEMPERATURE MANAGEMENT SYSTEM (TMS)	15
3.1 3.2 3.3 3.4 3.5	Configuration of the STP pump with the TMS TMS connection cable TMS heater TMS valve TMS sensor cable	15 16 16 16
3.6 3.6.1 3.6.2	Installation of the TMS unit Connecting the TMS connection cable to the STP control unit Connecting the pump and TMS valve	17
3.6.3 3.7 3.8	Connecting TMS connection cable to STP pump Condition for the TMS unit Accessories	17 18 18

i

PAGE



ILLUSTRATIONS

Figure	Title	Page
1	STP-A2503 series: VG250/ISO250F	4
2	STP-A3003 series: VG350/VG300/ISO320F	5
3	Label affixing positions for the STP pump	6
4	Example of securing the STP pump	
	(when securing the inlet port with bolts)	11
5	Shape of reduced diameter shank bolts	12
6	Example of securing the STP pump	
	(when securing the inlet port flange with claw clamps)	13
7	Example of securing the STP pump	
	(when installing the damper in the inlet port flange)	14
8	Configuration of the STP pump with the TMS	15
9	External view of TMS connection cable	16

TABLES

Table	Title	Page
1	Tightening torque of bolt	9
2	Maximum torque predicted and recommended securing bolt	
	for inlet port flange	10
3	Shape of reduced diameter shank bolts	12
4	Number of claw clamps for flange size	13



1 TECHNICAL DATA

1.1 Applicable pump specifications

Model Name	Specification	Applicable Control unit ^{*1}
STP-A2503/A3003 series	High-throughput type	SCU-1400/SCU-1500/SCU-1600
^{*1} Applicable control unit:		e specifications between SCU-1400, SCU-1500, and .1, "STP pump specifications" for the differences.

Naming convention:

- "C" following a pump model name indicates a corrosion resistant^{*2} type (e.g. STP-A2503C).
- "CV" indicates an enhanced corrosion resistant type with TMS^{*3} (e.g. STP-A3003CV).
- ^{*2} Corrosion resistant:

STP pump with anti-corrosive treatment.

*3 Temperature Management System: TMS unit (optional accessory) maintains the temperature at the base of the turbomolecular pump by monitoring the temperature with the temperature sensor in the base of the turbomolecular pump, and performing the TMS valve and base heater ON/OFF control.



1.1.1 STP pump specifications

The values shown below are typical. They are not guaranteed.

	Item			A2503 series	A3003 series
Flange size	ange size Inlet port flange		VG250/ISO250F/ ICF305	VG300/VG350/ ISO320F	
	Outle	t port fla	ange	KF40	KF40
Pumping speed	N ₂		L/s	2500	3000
	H ₂		L/s	1600	1800
Compression ratio	N ₂			>10 ⁸	
	H ₂			6×′	10 ³
Ultimate pressure			Pa (Torr)	10 ⁻⁶ (10 ⁻⁸) orde	r [after baking]
Maximum gas flow-r	ate ^{*1}	N ₂	Pa ⋅ m³/s (SCCM)	3.0 (1800): V 1.5 (900): TMS ur	
		٩r	Pa∙m³/s (SCCM)	1.5 (900): W 1.0 (600): TMS ur	
Allowable backing pr	ressure	*1	Pa (Torr)	333 (2.5) : Water cooling/TMS unit used	
Flow rate of purge ga	as <n<sub>2:</n<sub>	> Pa	·m³/s (SCCM)	3.4×10 ⁻² (20)	
Rated speed rpm		27,000			
Backup rotational speed ^{*2} rpm		Approxima	itely 6,000		
Starting time ^{*3} min		9: with SCU-1500/SCU-1600 10: with SCU-1400			
Stopping time ^{*3} min			9: with SCU-1500/SCU-1600 11: with SCU-1400		
Noise dB			<50 (at 27,000 rpm)		
Temperature Manag	ement	System	(TMS)	Avail	able
Baking temperature			°C	<1	20
Lubricating oil				Not nec	cessary
Installation position				Fre	ee
Cooling method			Water	cooling	
Recommended backing-pump L/min		>1,:	300		
Mass ^{*4} kg		72			
Ambient temperature range °C			°C	0 to 40	
Storage temperature	e range		°C	-25 t	o 55
Applicable Control unit				SCU-1400/SCU-	1500/SCU-1600



- *1 The pressure is applicable under conditions that N₂ or other similar gas is vacuumed and the backing-pump (pumping speed: 1,300 L/min) is used. When the gas is exhausted intermittently, the gas more than the maximum gas flow-rate can be exhausted. Consult Edwards about conditions.
- ^{*2} A backup rotational speed is the lowest rotational speed to which the magnetic bearing can be backed up at a power failure.
- ^{*3} Time varies depending on the control unit used.
- ^{*4} Mass is a value of state that the only standard accessory was installed (except the optional accessory).


1.1.2 Condition for the water-cooling unit

Item		Specification
Port type		Rc 1/4 (Female) ^{*1}
Flow rate	L/min	2
Water temperature	°C	5 to 25
Water pressure	MPa (kgf/cm ²)	0.3 (3)

*1 Standard type



1.2 External appearance of the STP pump

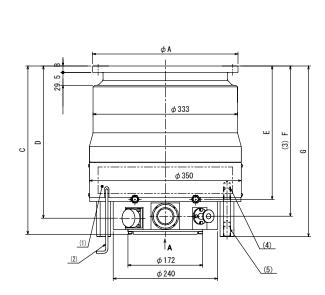

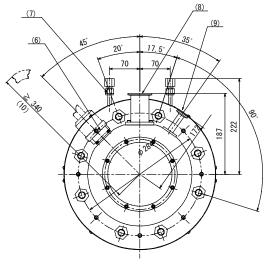


Figure 1 - STP-A2503 series: VG250/ISO250F

No.	ltem	Description
1	TMS heater	Built-in
2	TMS heater cable	
3	Height of the purge port	
4	Screw hole for legs	8-M16 depth 24
5	Screw hole of legs	8-M16 depth 24
6	STP cable connector	
7	Cooling water port	Rc ^{*1} 1/4
8	Outlet port flange	KF40
9	Purge port	KF10
10	Bending dimension of the STP connection cable	
11	Viewed from arrow A	

Inlet port flange	VG250	ISO250F
φA	350	335
В	15	15
С	389.5	389.5
D	352.5	352.5
E	308	308
F	348	348
G	395	395

*1 ISO



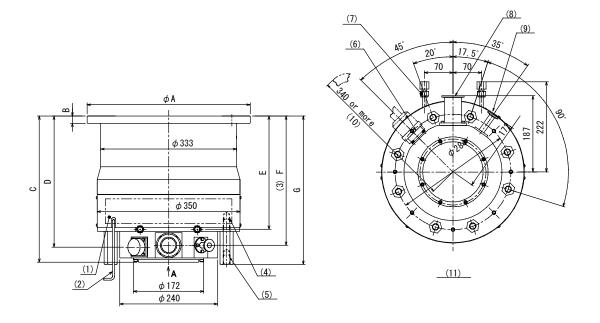


Figure 2 - STP-A3003 series: VG350/VG300/ISO320F

No.	ltem	Description	
1	TMS heater	Built-in	Inle
2	TMS heater cable		por flang
3	Height of the purge port		φA
4	Screw hole for legs	8-M16 depth 24	В
5	Screw hole of legs	8-M16 depth 24	С
6	STP cable connector		
7	Cooling water port	Rc ^{*1} 1/4	_ <u>E</u> _ F
8	Outlet port flange	KF40	G
9	Purge port	KF10	^{*1} ISO
10	Bending dimension of the STP connection cable		
11	Viewed from arrow A		

Inlet port flange	VG350	VG300	ICF320F
φA	450	400	425
В	20	18	20
С	359.5	359.5	364.5
D	322.5	322.5	327.5
Е	278	278	283
F	318	318	323
G	365	365	370



1.3 Label affixing positions

Refer to the Instruction Manual (A) for the details of the labels 1 to 7.

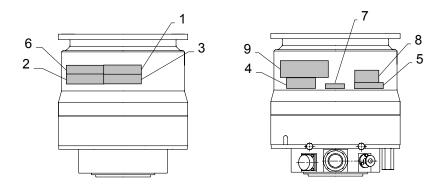


Figure 3 - Label affixing positions for the STP pump

- 1 STP pump installation warning label
- 2 Hot surface warning label
- 3 Heavy product caution label
- 4 Connector caution label
- 5 STP pump/control unit caution label
- 6 TMS heater caution label
- 7 Rotational direction instruction label
- 8 Name plate
- 9 Company logo



1.4 Accessories

Item	Q'ty	Remarks
Inlet port cover	1	
Outlet port cover	1	
STP connector cover	1	
Blank flange for purge port	1	KF10
Clamping ring for purge port	1	KF10
O-ring washer for purge port	1	KF10
Leg	8	
Instruction Manual (B)	1	This manual



This page intentionally blank.

JWARDS

2 HOW TO SECURE THE STP PUMP




WARNING

The STP pump is provided with a high-speed rotor. Any internal abnormality/error may result in a jump in rotational torque leading to personal injury or peripheral equipment damage.

The STP pump is provided with a high-speed rotor. The worst-case failure may result in a jump in rotational torque leading to personal injury or peripheral equipment damage.

The method of securing the STP pump will depend on the installation requirements. Secure the STP pump to the vacuum equipment as follows:

Design and secure the mounting for the STP pump so that it can withstand the maximum rotational torque. Refer to Table 2 for torque in pump abnormality.

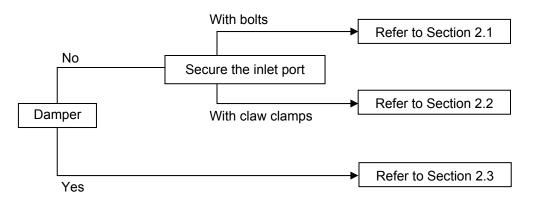

In some cases, the damper and the claw clamper securing cannot be used.

This will depend on the type of STP pump. Refer to Table 1 for torque tightening the bolts used.

Bolt size	Tightening torque (Nm)
M8	12
M10	24
M12	42

Table 1 - Tightening torque of bolt

When making the legs to secure the base, make them shorter than the ones attached to the STP pump. Use a material that has a tensile strength of 600N/mm² or more.

When securing the base, use stainless steel securing bolts with a tensile strength class of 70 or more.

Note: When using any securing method other than that specified in this manual, contact Edwards.

2



2.1 When securing the inlet port with bolts

Refer to Table 2 for maximum predicted torque in any pump abnormality and for the recommended type of securing bolt for inlet port flange.

Secure the inlet port flange with the correct size bolts as specified in the Inlet Port Flange Standard.

Reduced diameter shank bolts (R.D.S.B.) listed on Table 2 are more reinforced bolts over standard bolts by smoothing the portion to attach flange securing bolts to the respective face at the equipment side. Refer to Figure 5 for Shape of R.D.S.B.

Secure the base with either the 8 screws for legs or the 8 attached legs. Ensure instructions with regard to legs and bolts for securing the base are adhered to page 9. Make sure that the recommended securing bolt is the correct one depending on the method of securing the base.

Pump	model	STP-A2503 series					
Flange	e type	VG250		ISO250F		ICF305	
Torque in pum [N	np abnormality m]	7.4×10 ⁴		5.9×10 ⁴		7.4×10 ⁴	
Base (8 positions) securing		No	Yes	No	Yes	No	Yes
Recommended securing bolt for flange	Shape	Standard	Standard	R.D.S.B.*2	Standard	Standard	Standard
	Size	M12	M12	M10	M10	M8	M8
	Q'ty	12	12	12	12	32	32
	Material ^{*1}	Carbon steel Alloyed steel	Stainless steel	Carbon steel Alloyed steel	Stainless steel	Carbon steel Alloyed steel	Stainless steel
	Strength ^{*1}	12.9 or more	70 or more	12.9 or more	70 or more	12.9 or more	70 or more


Pump	model	STP-A3003 series						
Flang	e type	VG300			ISO320F		VG350	
	np abnormality m]	7.4×10 ⁴		7.4×10 ⁴		7.4×10 ⁴		
Base (8 positions) securing		No	Yes	No	Yes	No	Yes	
Recommended securing bolt for flange	Shape	Standard	Standard	Standard	Standard	Standard	Standard	
	Size	M12	M12	M12	M12	M12	M12	
	Q'ty	12	12	12	12	12	12	
	Material ^{*1}	Carbon steel Alloyed steel	Stainless steel	Carbon steel Alloyed steel	Stainless steel	Carbon steel Alloyed steel	Stainless steel	
	Strength ^{*1}	12.9 or more	70 or more	12.9 or more	70 or more	12.9 or more	70 or more	

^{*1} Refer to ISO898-1 (JISB 1051), ISO3506 (JISB 1054) and AMS6419 (Aerospace Material Specification).

^{*2} Refer to Figure 5 Shape of Reduced Diameter Shank Bolts (R.D.S.B.)

Table 2 - Maximum torque predicted and recommended securing bolt for inlet port flange



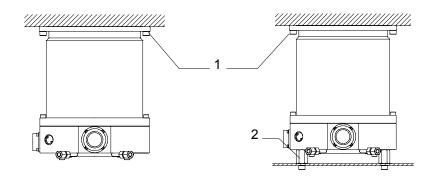

(A) When the base is not secured

(B) When the base is secured


- 1. Recommended fitting bolt for flange
- 2. Secure the base

Figure 4 - Example of securing the STP pump (when securing the inlet port with bolts)


EDWARDS



Refer to Figure 5 for the shape of Reduced Diameter Shank Bolts (R.D.S.B.)

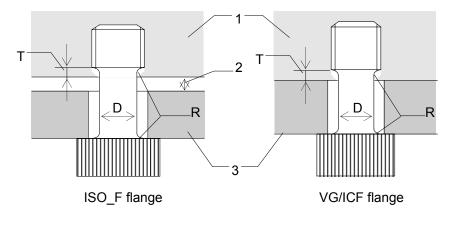

- 1. Vacuum equipment
- 2. Clearance made by cantering
- 3. Pump flange

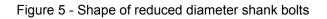

Use Table 3 in conjunction with Figure 5. Ensure that the surface of the levelled and smoothed area (expressed by "D" in Figure 5) is free of crack, depression, and other damages. Also, when you want to use commercially-available screws, be sure to thoroughly grind them so as not to leave spiral seams on their bottom.

Bolt size	Type of flange	т	D	R
M8	ISO_F flange	2.5 mm or more	5.9 mm or more	0.8 mm or more
	ICF flange	1 mm or more		
M10	ISO_F flange	3 mm or more	7.5 mm or more	
	VG flange	1.5 mm or more		
M12	ISO_F flange	3.5 mm or more	9.1 mm or more	
	VG flange	2 mm or more	1	

Table 3 - Shape of reduced diameter shank bolts




2.2 When securing the inlet port flange with claw clamps


Refer to Table 2 for rotational torque.

When securing the inlet port flange with only the claw clamp, the vacuum equipment cannot withstand the maximum rotational torque generated by the worst-case failure. To make the vacuum equipment withstand abnormal torque, secure the base with either the 8 screws for legs or the 8 attached legs. Ensure instructions with regard to legs and bolts for securing the base are adhered to page 9.

For the claw clamp-type, use the required number of claw clamps as specified in Table 4. Position the claw clamps evenly on the circumference.

Flange size	Number of claw clamps
ISO 160 or less	4 or more
ISO 200 to 250	6 or more
ISO 320 or more	8 or more

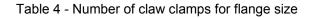

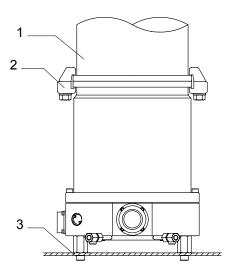

- 1. Vacuum equipment
- 2. Claw clamps
- 3. Secure the base

Figure 6 - Example of securing the STP pump (when securing the inlet port flange with claw clamps)



2.3 When installing the damper in the inlet port flange

CAUTION

Use a damper only at the vertically upright position.


CAUTION

DO NOT remove the bolts and nuts attached to reinforce the damper.

Refer to Table 2 for rotational torque.

When using a damper, secure the base with either the 8 screw-holes for legs or the 8 attached legs. Ensure instructions with regard to legs and bolts for securing the base are adhered to page 9.

When the base cannot be secured because of the equipment design, install the pump with a torque restraint like the one shown in Figure 7 (B).

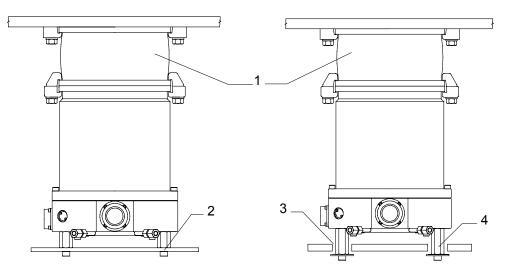

(A) When securing the base

(B) When installing not to rotate

- 1. Damper
- 2. Secure the base
- 3. Hole to prevent from rotating
- 4. Leg

Figure 7 - Example of securing the STP pump (when installing the damper in the inlet port flange)

(Edwards

STP-A2503/A3003 Series Turbomolecular Pump

3 TEMPERATURE MANAGEMENT SYSTEM (TMS)



WARNING

The STP pump operates at high temperatures while the Temperature Management System (TMS) unit is in operation. NEVER touch the STP pump and its peripheral equipment while TMS unit are in operation. Operators can burn hands.

The Temperature Management System (TMS) maintains the temperature of the turbomolecular pump by monitoring the temperature with temperature sensor in the base of the turbomolecular pump, and performing the TMS valve and TMS heater ON/OFF control.

3.1 Configuration of the STP pump with the TMS


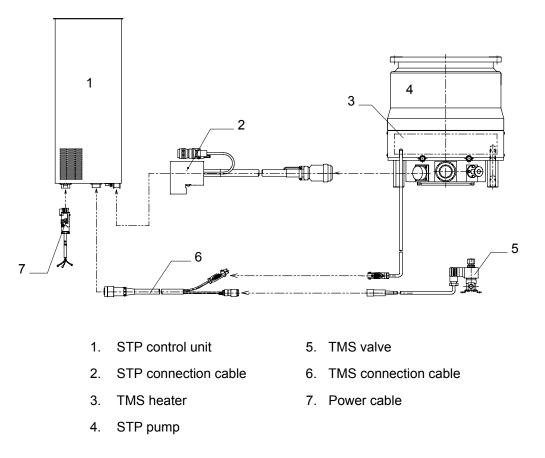


Figure 8 - Configuration of the STP pump with the TMS



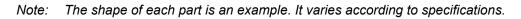

3.2 TMS connection cable

The components of the TMS connection cables are as follows: (see Figure 9)

ltem	Description	Function
1	Connector X5A	For the STP control unit
2	CON1 HEATER OUT connector	For the TMS heater
3	CON2 COOLING VALVE OUT connector	For the TMS valve

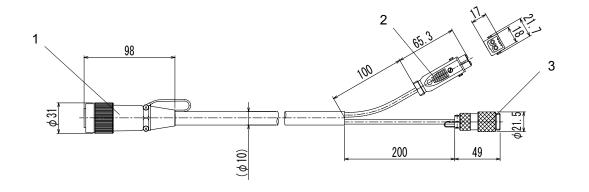


Figure 9 - External view of TMS connection cable

Note: The shape of the TMS connection cable is an example. It varies according to specifications.

3.3 TMS heater

The TMS heater heats the base of the STP pump. It's fitted with the STP-A2503CV/A3003CV series at the factory.

3.4 TMS valve

The TMS valve controls the cooling water in order to maintain a constant temperature inside the STP pump. The shape of the TMS valve varies according to specifications.

3.5 TMS sensor cable

The TMS sensor cable is not required for STP-A2503CV/A3003CV series.



3.6 Installation of the TMS unit

CAUTION

DO NOT install the TMS unit in places with high temperature, humidity, noise, vibration, or other unstable environment.

CAUTION

DO NOT apply force to the TMS unit and cables during installation and DO NOT bend the cables excessively.

3.6.1 Connecting the TMS connection cable to the STP control unit

Insert the connector X5A of the TMS connection cable into the connector X5 of the STP control unit. (see the "STP Control Unit Instruction Manual (C)" for the position of the connector X5.)

3.6.2 Connecting the pump and TMS valve

Refer to Figure 8, "Configuration of the STP pump with the TMS".

Connect the cooling water pipe to the TMS valve. Pay special attention to the port label on the cooling water valve to connect proper port. Connect the NC side (or OUT side) of the TMS valve to the STP pump, and COM side (or IN side) of the TMS valve to the equipment.

The TMS heater is fitted with the STP-A2503CV/A3003CV at the factory.

Use cooling water under the conditions in Section 3.7, "Condition for the TMS unit".

Note: Procure and connect the cooling water pipe and affix the electromagnetic cooling water valve at your site. The diameter of the valve is Rc1/4 (ISO standard).

3.6.3 Connecting TMS connection cable to STP pump

Refer to Figure 8, "Configuration of the STP pump with the TMS". Connect the TMS connection cable to the STP pump as follows:

- 1. Connect the cable for the TMS heater to the "CON1 HEATER OUT" connector of the TMS connection cable.
- Connect the cable for the TMS valve to the "CON2 COOLING VALVE OUT" connector of the TMS connection cable.



3.7 Condition for the TMS unit

Item		Condition
Ambient temperature range	°C	0 to 40
Storage temperature range	°C	-20 to 55
Input voltage		Same voltage as the STP control unit 200 to 240 Vac
Temperature control method		Control ON/OFF of the TMS heater and cooling water
Setting temperature	°C	Standard type: 60
Cooling water temperature	°C	5 to 25
Quantity of cooling water flow	L/min	2
Alarm output		Alarm outputs from the STP control unit

3.8 Accessories

ltem	Q'ty	Condition
TMS heater	1	Built-in
TMS connection cable	1	With connector on one side
TMS valve	1	Coupling for water cooling port, cable with connector on one side

For more information, contact the nearest Service Office.

Manufacturer: Edwards Japan Limited

1078-1, Yos	1078-1, Yoshihashi, Yachiyo-shi, Chiba 276-8523 JAPAN				
Telephone:	Domestic	047-458-8822			
	International	+81-47-458-8822			
Facsimile:	Domestic International	047-458-8833 +81-47-458-8833			